

Service information

Reference no.: SDA_105842

Symptom

Telescopic tube does not stay in position

Cure

SYMPTOM: Telescopic tube does not stay in position.

CURE: Several improvements have been done on the plastic knob and spring of the Telescopic Tube to increase the knob travel distance.

INFO : See pictures.



Before change



After change

REMARK: It is not visible on the outside of the Telescopic tubes.

It concerns the next 12NC's:
For FC813x and FC814x appliances: 4322 004 25071 (4222 459 46601)
For FC844x and FC845x appliances: 4322 004 25071
For FC847x appliances: 4322 004 25061
For FC863x appliances: 4322 004 25071