



Philips Consumer Lifestyle

# Service Manual

## PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

## TECHNICAL INFORMATION

- Charger AC / DC : 9V DC - 200 mA
- Rechargeable batteries : 4x NiMH - 1500 mAh
- Run time : 58 min.
- Charge indicator : LED

### Charge indication

- Charging : Green LED lights up during charging

## REPAIR INSTRUCTIONS

- No specific issues

## ASSEMBLY & DISASSEMBLY ADVICE


- No specific issues

## OPTIONAL (accessories)

- No specific issues

Pos	Service code	Description
1	4222 459 45347	Complete dirt tray
2	9965 000 32145	Charger WE
	9965 000 37498	Charger Charger Brazil 127 V
	9965 000 38116	Charger PRC
	9965 000 38117	Charger UK/Hongkong
	4222 459 45688	Charger Taiwan 110 V
	4222 459 45689	Charger Argentina 220 V
3	4222 459 45564	Complete sweeper base
4	9965 000 32148	Front wheels kit
5	9965 000 32150	Roller brush *
6	9965 000 32151	Retainer *
7	Not Available	Upper handle/tube assy
	Not Available	Upper handle/tube assy short Asia
8	4222 459 45351	Lower tube assy
	4222 459 45419	Lower tube assy short Asia
9	9965 000 32155	Rear wheels kit
10	4222 459 45350	Tube hinge assy
11	4222 459 45563	Battery pack 1500 mAh NiMH (AA-size)
12	4222 459 45567	Handle assy
13	4222 459 45565	Upper tube assy
	4222 459 45566	Upper tube assy short Asia

\* Standardized colour

 = changed

