



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Charger AC / DC : 17 V DC - 175 mA
- Rechargeable batteries : 4x NiMH - 1500 mAh
- Run time : 58 min.
- Charge indicator : LED

Charge indication

- Charging : Green LED lights up during charging

REPAIR INSTRUCTIONS


- No specific issues

ASSEMBLY & DISASSEMBLY ADVICE

- No specific issues

OPTIONAL (accessories)

- No specific issues

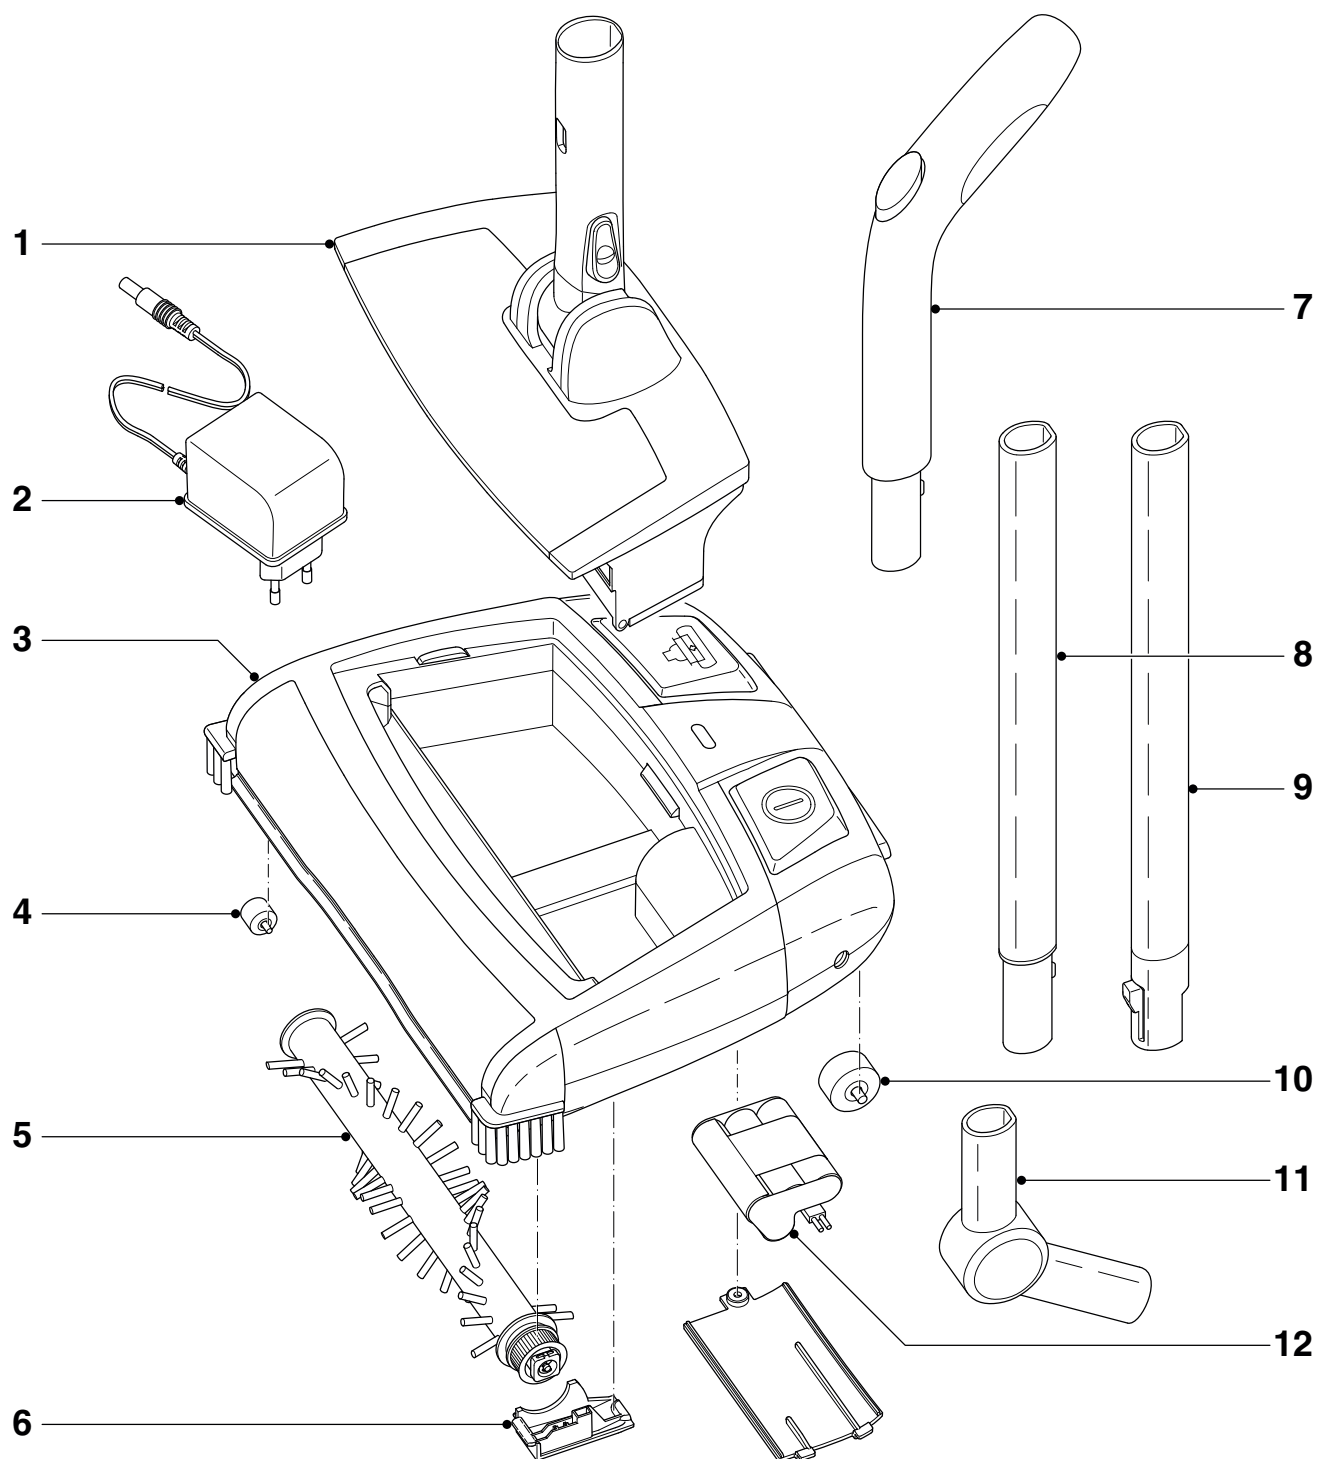

Pos	Service code	Description
1	4222 459 45347	Complete dirt tray
2	4222 459 48611	Charger WE
	4222 459 48621	Charger UK/HK
3	4222 459 45564	Complete sweeper base
4	9965 000 32148	Front wheels kit
5	9965 000 32150	Roller brush *
6	9965 000 32151	Retainer *
7	4222 459 45567	Handle assy

Pos	Service code	Description
8	4222 459 45565	Upper tube assy
	4222 459 45566	Upper tube assy short Asia
9	4222 459 45351	Lower tube assy
	4222 459 45419	Lower tube assy short Asia
10	9965 000 32155	Rear wheels kit
11	4222 459 45350	Tube hinge assy
12	4222 459 45563	Battery pack 1500 mAh NiMH (AA-size)

* Standardized colour