



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Colour : Smoked Black
- Power consumption : 2000 W
(IEC) 230V
- Maximum Air displacement : 47 l/s
- Vacuum : 340 mbar / 34.0 kPa
- Type number dustbag : FC8021
- Duststorage capacity : 4 L
- Cord length : 9 m
- Filter system : Classic S-Bag
long performance
: 3 layer permanent motor
protection filter
: Ultra clean air washable
HEPA13 exhaust filter
- Dimensions of cleaner : 472 x 324 x 276 mm
- Dimensions of packaging : 593 x 393 x 296 mm
- Net weight : 6.3 kg
- SAP coding : FC9176/01

ACCESSORIES

- Remote control : Infra red remote control
- Nozzle : Tri-Active all purpose nozzle
- Special Nozzle : Super Parquet Nozzle
- Tubes : Metal lacquered 3-piece telescopic tube
- Accessories : Brush, crevice nozzle and small nozzle
- Accessory storage : Active accessory storage bridge in handgrip
- Coupling : Button coupling

OPTIONAL (accessories)

- FC8021 : S-bag Classic
- FC8022 : S-bag Clinic
- FC8023 : S-bag Anti-Odour
- FC8031 : Super Clean Air HEPA filter,
HEPA12 exhaust filter
- FC8038 : Ultra clean air washable HEPA13
exhaust filter



DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- Open the appliance, first remove the filter cover (item 22) and then remove the 2 screws (A) of the button assy (item 10).
- The button assy can be removed by lifting up the back of the assy and then pull the assy out of the appliance.
- When the dustcover and the handle have been removed, the electronics, DBFI valve assy, CW-lever and the switch lever can be removed.
- The dustchamber and the backpanel can be removed from the appliance by removing 15 screws (B and C).
- You will require a screwdriver with a 14.5 cm long shank for this. Screwdriver 4322 009 08490 for T15 can be used.
- When the cordwinder has been taken out, the final screw (D) for releasing the lower front from the appliance can be removed.
- When the repair is finished, check whether all functions of the appliance work properly.
- To disassemble the cordwinder, use TORX screwdriver no. T10, which is one of a set consisting of T20; T15; T10; T9; T8; T7 and T6 (code number 4822 395 505145).

REPAIR INSTRUCTION

- Cotton dustbags, are used in countries in which paper dustbags are not available.
- If the reel half spring unit is replaced, shaft G must be lubricated with **silicone grease**. Do not apply any silicone grease to or spill any grease on terminals (37) or conductors (36).
- The cord winder spring must be tensioned to the maximum level and then be rewound approx. 1.5 turn.
- **Item 14**, air valve, opens to cool the motor if the air displacement is too low or if the airflow is blocked.
- If the function of the electronic control unit is not required, the Triac must be short-circuited in the manner shown in the circuit diagram.
- When the vacuum cleaner is used to suck up fine dust the pores of the dustbag may become clogged, causing the passage of air through the dustbag to become obstructed. As a result, the dustbag-full indicator will indicate that the dustbag needs to be replaced, even though the dustbag is not full at all.

ELECTRICAL DIAGRAM

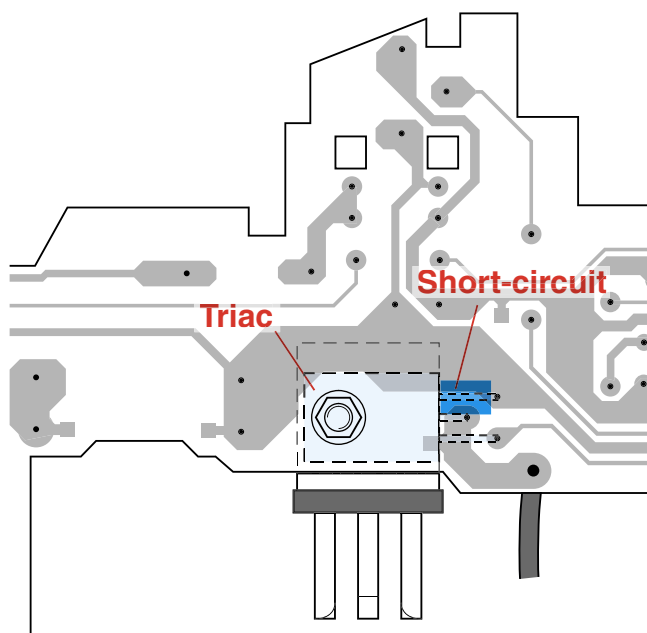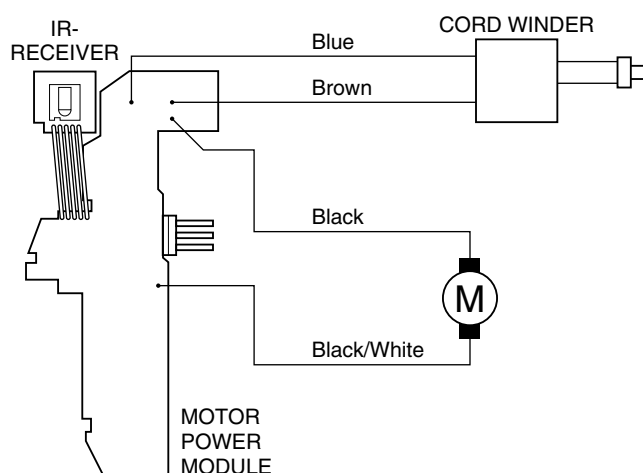

PARTS LIST


FC9176/01 / FC9176/08


Pos	Service code	Description
1	4322 005 24610	Dustc. / Pr / Transl. Smoked Black
2	4322 005 17600	Dustcover lock assy
3	4322 000 67810	DB detector spring
4	4322 003 24790	DB detector / LB / Cool grey
5	4322 003 24780	CCC (DB holder)
6	4322 000 37300	Triple inletfilter
7	4322 003 33280	Inlet grille / Blue
8	4322 003 24650	Dustchamber / Black
9	4322 009 09590	Handle performer / Smoked black
10	4322 009 09640	Button panel assy / Re. C. Pr / Smoked black
11	4322 003 24810	Cord winder lever
12	4322 003 28050	Holder IR PCB
13	4322 006 23310	PCB assy 220-240 V 50/60 Hz IR
14	4322 005 20580	DBFI/Valve assy / Sp.v.
15	4341 003 02390	Switch lever
16	4322 003 24620	Back panel / Black
17	4322 003 24720	Cord outlet / Black
18	4322 003 24600	Lower / LB / Back
19	4322 003 28130	Lower front / Deep Black
20	4322 005 17010	Caster assy / Select grey
21	4322 003 24690	Filter cover lock / Select grey
22	4322 003 28060	Filter cover / Smoked black
23	4322 004 93340	HEPA13 washable exhaust filter
24	4322 001 74110	Exhaust sealing / Blue
25	4322 000 38790	Silencer 4 wall backpanel
26	4322 003 25460	S-Class H-sealing
27	4322 000 38670	Silencer 1 wall
28	4322 000 38770	Silencer 2 bottom
29	4322 003 23880	Motorhousing top inside
30	4322 001 73400	Bufferring front ANS-Atlas

Pos	Service code	Description
31	4322 009 09430	Motor Domel 1761 220 - 240 V
32	4322 000 38820	Silencer 3 compas
33	4322 001 73520	Motor buffer back green
34	4322 003 23870	Motor housing bottom ANS
35	4322 009 09440	Reel half spring unit (L = 9 m)
36	4322 009 09450	Reel half contact unit
37	4322 009 09460	Contact ring plate
38	4322 006 07410	U.K. / H.K. L = 9.3 m
39	4322 006 07390	Euro 4.8 mm pins L = 9.3 m
40	4322 003 18860	C. Bend B2
41	4322 005 12760	LC Swivel assy
42	4322 009 09800	C. Bend B2 / Hose / Swivel assy / Silver steel Nickelfree
42a	4322 004 23360	Hose assy / Silver Steel
43	4322 007 16000	Leaf spring assy
44	4322 004 23890	3-Piece Telescopic tube assy Nickelfree
45	4322 001 99120	Coupling bush
46	4322 007 31650	Coupling spring
47	4322 004 22570	Plumeau assy
48	4322 003 18870	Crevice nozzle
49	4322 005 12530	Accessory bridge assy
50	4322 004 22560	Small nozzle
51	4341 004 20840	Tri-Active nozzle, stand.
52	4322 003 26030	Motor bracket
53	4322 005 11040	Polishing disc
54	8838 041 01010	Polishing brushes
55	4322 004 20110	Super Parquet nozzle, standard
56	4322 003 19420	Lid battery compartment
57	4322 005 20330	IR-RMC send unit

EXPLODED VIEW

FC9176/01 / FC9176/08

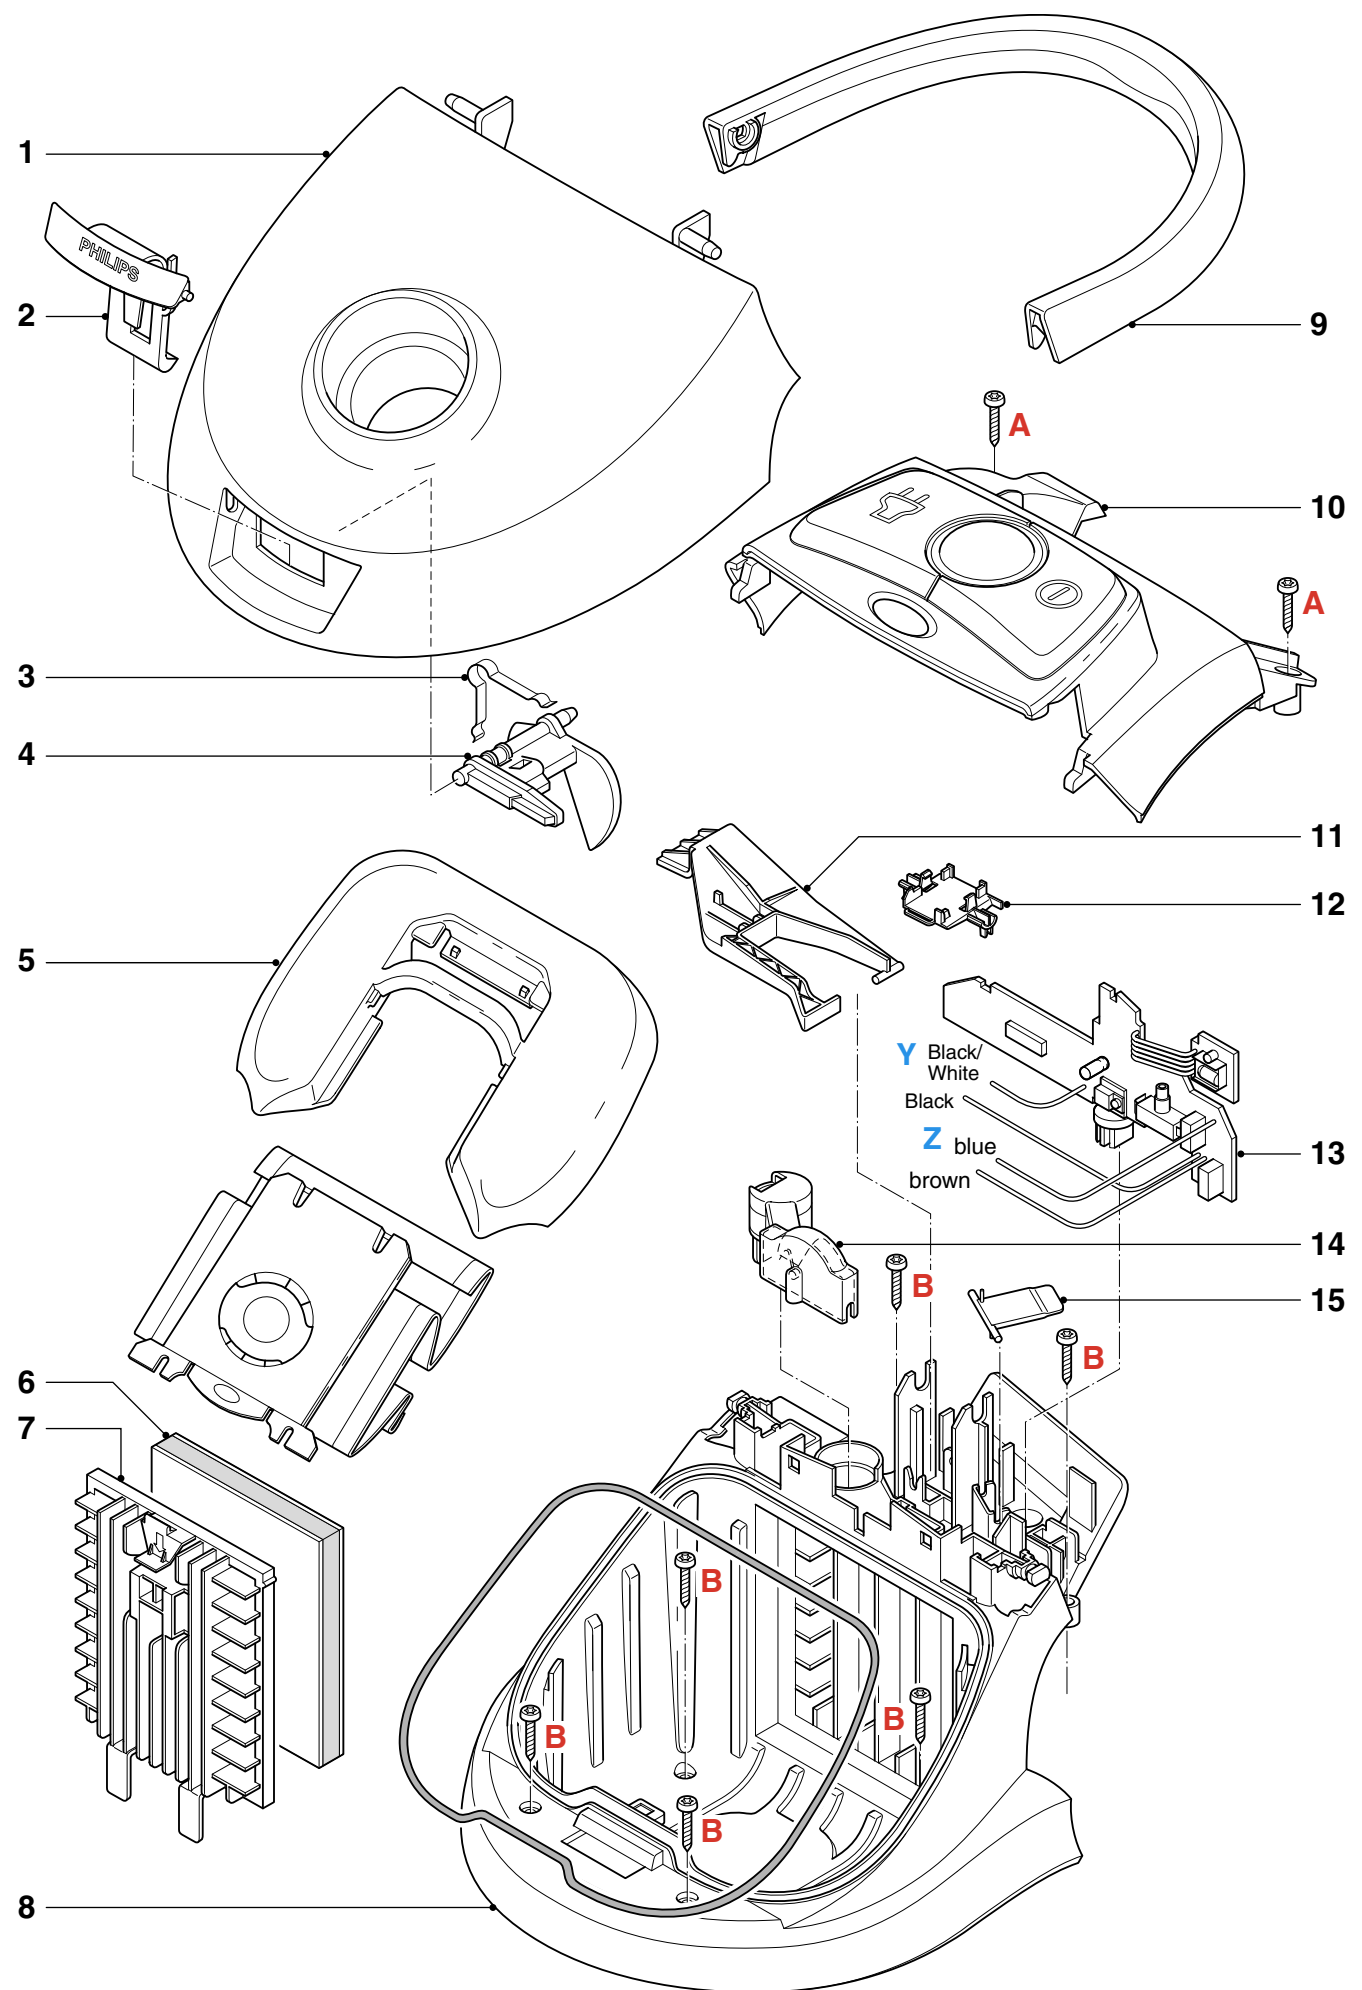

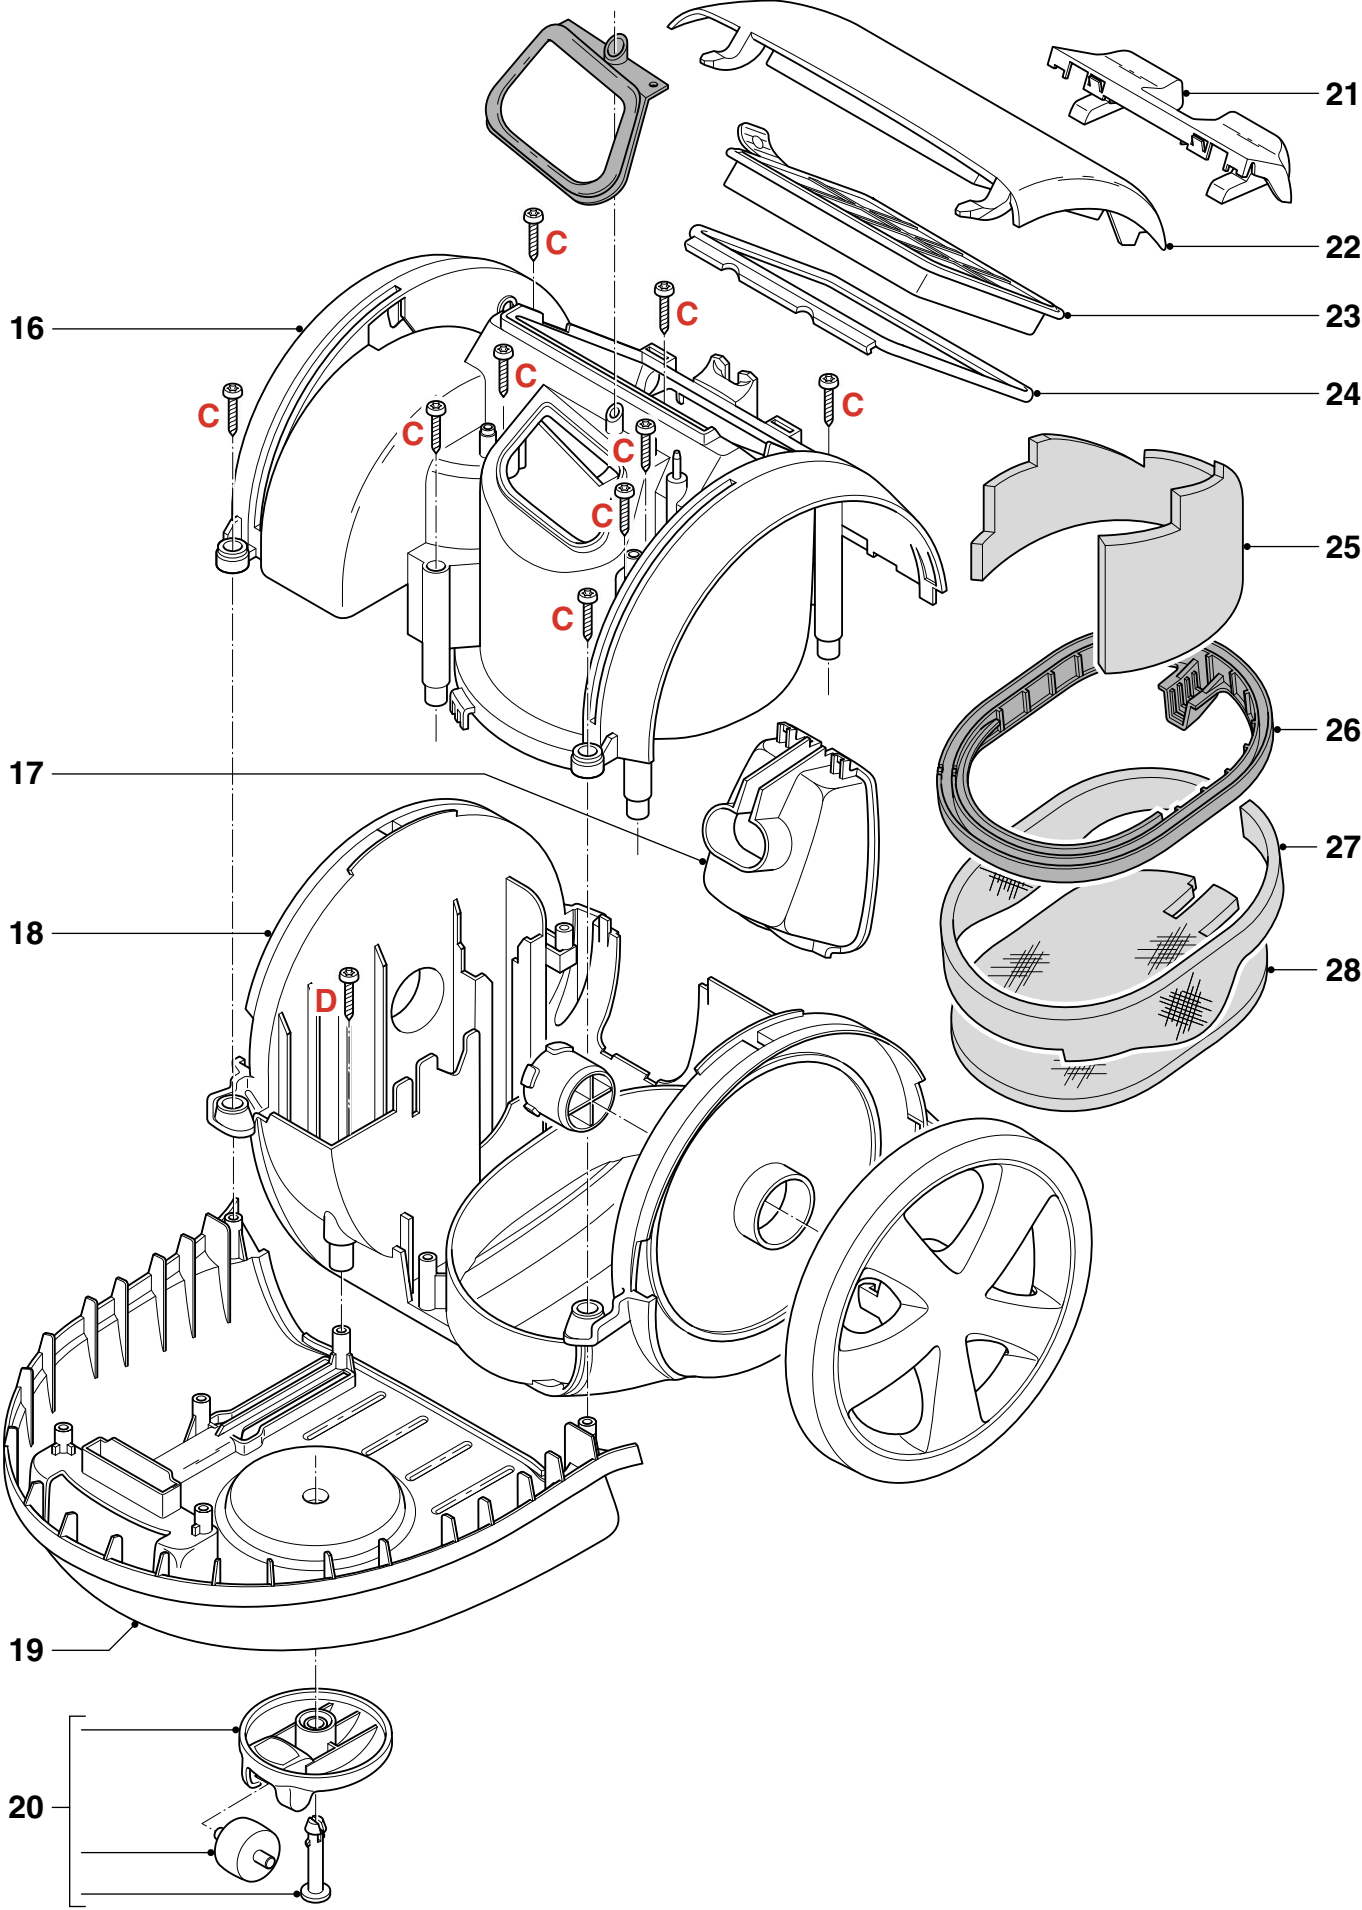

This exploded view diagram illustrates the front wheel assembly. At the top, a hub assembly is shown with a spring and a pin. Below it, a brake disc is shown with a pin and a nut. At the bottom, a wheel rim is shown with a pin and a nut. A red arrow labeled 'G' points to the pin and nut assembly on the wheel rim.

This exploded view diagram illustrates the assembly of a washing machine drum. The components are numbered as follows:

- 29**: Upper housing or door frame.
- 30**: Rubber gasket or seal.
- 31**: Drum support or bearing housing.
- 32**: Drum rim or flange.
- 52**: Drum support bracket.
- 33**: Drum support rollers.
- 34**: Drum support pins.
- 35**: Drum support frame.
- 36**: Drum support mounting bracket.
- 37**: Drum support mounting screws (labeled **F**).
- 38+39**: Drum support mounting bracket and screws (labeled **F**).
- 39**: Drum support mounting bracket (labeled **F**).
- 40**: Drum support mounting bracket (labeled **F**).
- 41**: Drum support mounting bracket (labeled **F**).
- 42**: Drum support mounting bracket (labeled **F**).
- 43**: Drum support mounting bracket (labeled **F**).
- 44**: Drum support mounting bracket (labeled **F**).
- 45**: Drum support mounting bracket (labeled **F**).
- 46**: Drum support mounting bracket (labeled **F**).
- 47**: Drum support mounting bracket (labeled **F**).
- 48**: Drum support mounting bracket (labeled **F**).
- 49**: Drum support mounting bracket (labeled **F**).
- 50**: Drum support mounting bracket (labeled **F**).
- 51**: Drum support mounting bracket (labeled **F**).
- 52**: Drum support mounting bracket (labeled **F**).
- 53**: Drum support mounting bracket (labeled **F**).
- 54**: Drum support mounting bracket (labeled **F**).
- 55**: Drum support mounting bracket (labeled **F**).
- 56**: Drum support mounting bracket (labeled **F**).
- 57**: Drum support mounting bracket (labeled **F**).
- 58**: Drum support mounting bracket (labeled **F**).
- 59**: Drum support mounting bracket (labeled **F**).
- 60**: Drum support mounting bracket (labeled **F**).
- 61**: Drum support mounting bracket (labeled **F**).
- 62**: Drum support mounting bracket (labeled **F**).
- 63**: Drum support mounting bracket (labeled **F**).
- 64**: Drum support mounting bracket (labeled **F**).
- 65**: Drum support mounting bracket (labeled **F**).
- 66**: Drum support mounting bracket (labeled **F**).
- 67**: Drum support mounting bracket (labeled **F**).
- 68**: Drum support mounting bracket (labeled **F**).
- 69**: Drum support mounting bracket (labeled **F**).
- 70**: Drum support mounting bracket (labeled **F**).
- 71**: Drum support mounting bracket (labeled **F**).
- 72**: Drum support mounting bracket (labeled **F**).
- 73**: Drum support mounting bracket (labeled **F**).
- 74**: Drum support mounting bracket (labeled **F**).
- 75**: Drum support mounting bracket (labeled **F**).
- 76**: Drum support mounting bracket (labeled **F**).
- 77**: Drum support mounting bracket (labeled **F**).
- 78**: Drum support mounting bracket (labeled **F**).
- 79**: Drum support mounting bracket (labeled **F**).
- 80**: Drum support mounting bracket (labeled **F**).
- 81**: Drum support mounting bracket (labeled **F**).
- 82**: Drum support mounting bracket (labeled **F**).
- 83**: Drum support mounting bracket (labeled **F**).
- 84**: Drum support mounting bracket (labeled **F**).
- 85**: Drum support mounting bracket (labeled **F**).
- 86**: Drum support mounting bracket (labeled **F**).
- 87**: Drum support mounting bracket (labeled **F**).
- 88**: Drum support mounting bracket (labeled **F**).
- 89**: Drum support mounting bracket (labeled **F**).
- 90**: Drum support mounting bracket (labeled **F**).
- 91**: Drum support mounting bracket (labeled **F**).
- 92**: Drum support mounting bracket (labeled **F**).
- 93**: Drum support mounting bracket (labeled **F**).
- 94**: Drum support mounting bracket (labeled **F**).
- 95**: Drum support mounting bracket (labeled **F**).
- 96**: Drum support mounting bracket (labeled **F**).
- 97**: Drum support mounting bracket (labeled **F**).
- 98**: Drum support mounting bracket (labeled **F**).
- 99**: Drum support mounting bracket (labeled **F**).
- 100**: Drum support mounting bracket (labeled **F**).

Color-coded labels for the drum support mounting bracket (37) include:

- blue** (labeled **Z**)
- brown** (labeled **Z**)

Other color-coded labels include:

- Black/White** (labeled **Y**)
- Black** (labeled **Y**)

The diagram also shows various screws and fasteners labeled with letters **F** and **E**.

EXPLODED VIEW

FC9176/01 / FC9176/08

