



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

Design

- Color : Star blue

Usability

- Tube type : Metal 2-piece telescopic tube
- Handgrip : Ergonomic grip with air slider
- Tube coupling : Conical
- Action radius : 9.0 m
- Cord length : 6.0 m
- Carrying handle : Top and front
- Dust bag full indicator
- Park or storage assist : Vertical and horizontal
- Power control : Electronic on appliance
- Wheel type : Rubber

Filtration

- Dust bag type : S-bag Ultra Long Performance
- Dust capacity : 5 l
- Exhaust filter : Super Clean Air HEPA 12 filter
- Motor filter : Triple layer

Safety

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

Performance

- Noise level (Lc IEC) : 79 dB
- Airflow (max) : 49 l/s
- Input power (IEC) : 1800 W
- Input power (max) : 2100 W
- Suction power (max) : 475 W
- Vacuum (max) : 35 kPa

Weight and dimensions

- Dimensions of product : 500 x 310 x 300 mm (L x W x H)
- Weight of product : 5.4 kg

ACCESSORIES


- Standard nozzle : Tri-Active nozzle
- Accessories : Crevice tool, Small nozzle
- Accessory storage : On tubeclip

OPTIONAL (accessories)


- Starter kit FC8060 (Filters and dustbags)

DISASSEMBLY- AND RE-ASSEMBLY ADVISE


- To open the appliance, first remove outlet grill (28) and exhaust filter (7).
- Remove Dustcover (1) using a screwdriver (see picture).

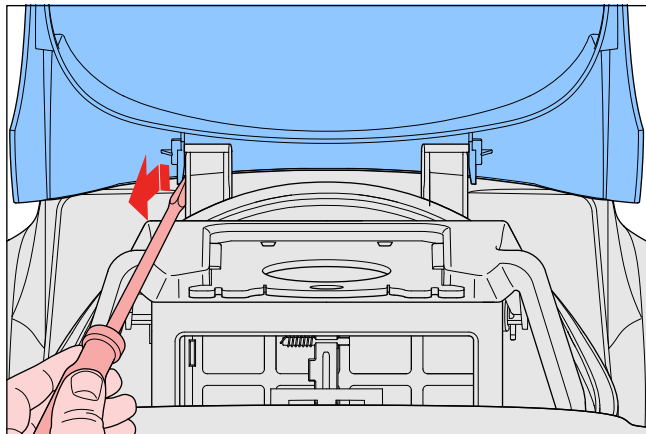

- To reach the inner parts for repair you must first remove the Top housing with its attached parts.
- Remove On/Off button (5) and cordwinder button (6), this can be done with a screwdriver (see picture).

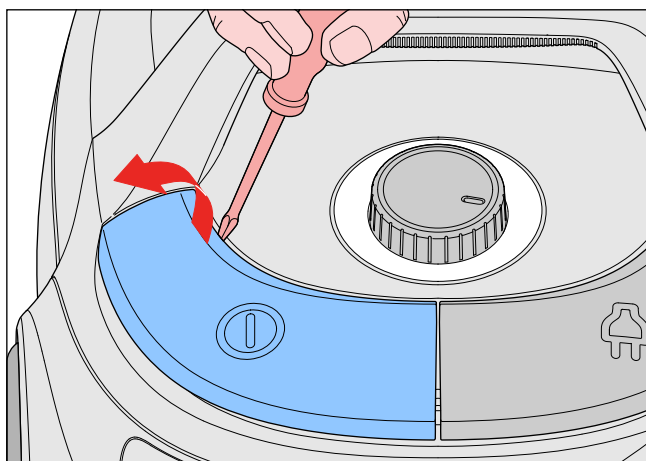


- To remove Handle cover (8) first release the 2 snap connections on the backside (see picture).

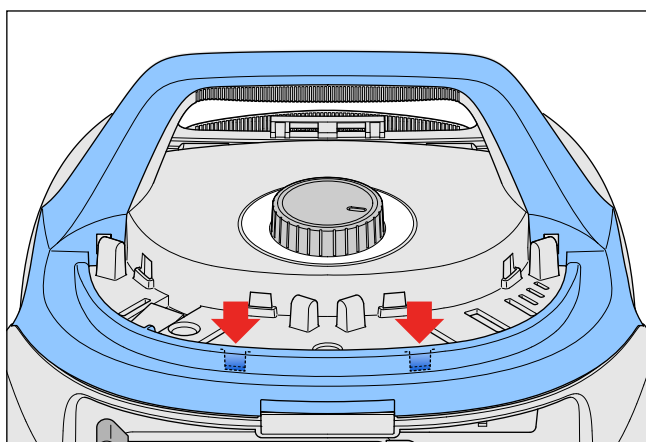


FC9I84/0I / FC9I84/II


- Then with a small screwdriver lift the Handle cover over the nock on the Top housing (see picture).

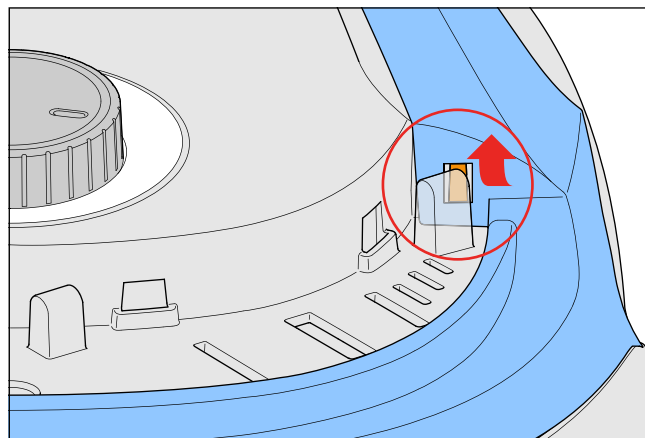

- Now you can with a screwdriver remove the complete Handle cover from the housing (see picture).

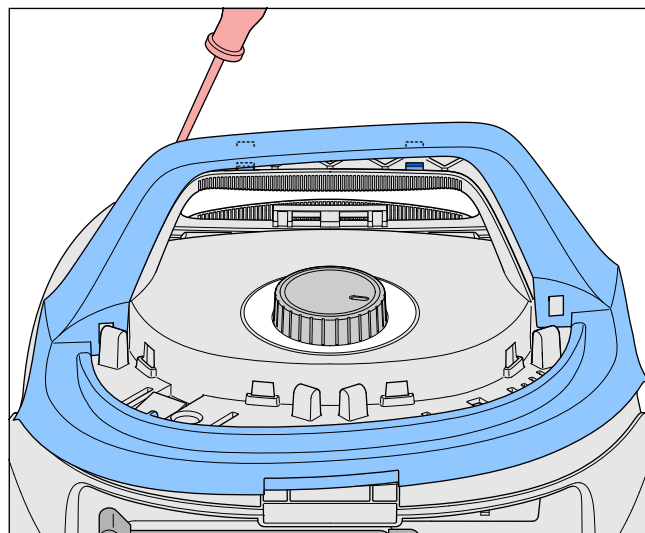

- Remove the 2 screws A which hold Handle (9) and screw B (see picture).

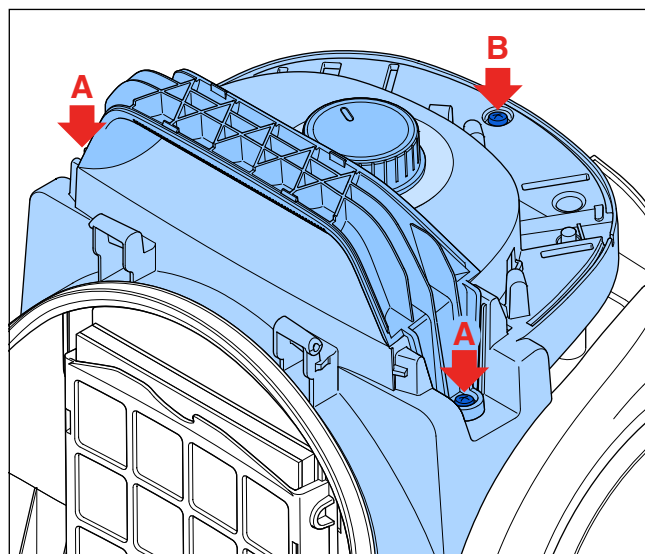


Remark:



When assembling the Top housing check that Turn knob (11) is in the correct position relative to the position of the potmeter on the PCBA.

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- When the Motor and/or Cordwinder have to be replaced the Upper housing (17) must be removed.
- First remove Brake lever (13) and the spring than remove screw **C** so you can remove cordwinder cover (14). Take care that the spring does not fall into the appliance! (see picture).

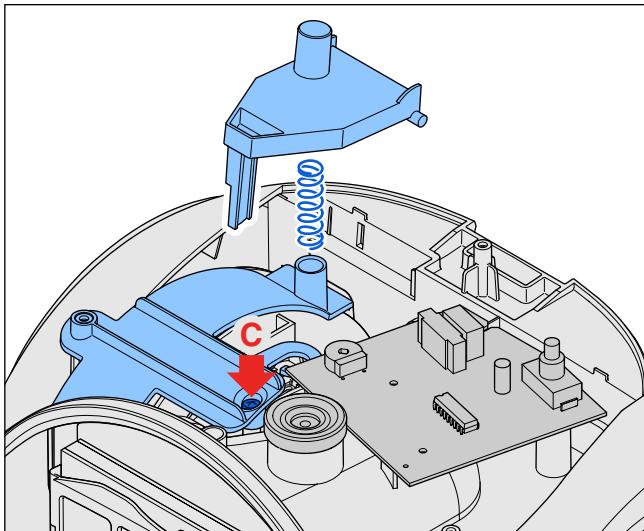


- After removing the 5 screws **D** and 3 screws **E** on the back side, the Upper housing can be separated from the Lower housing (see pictures).

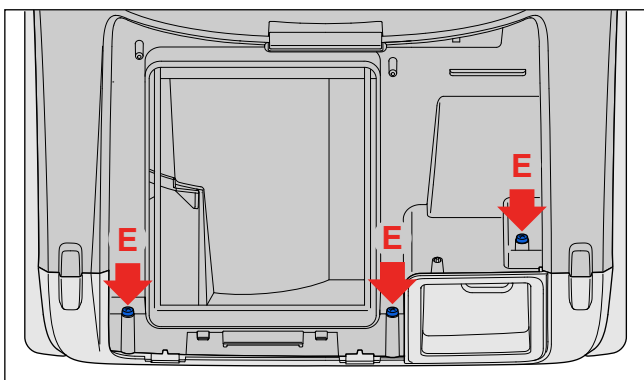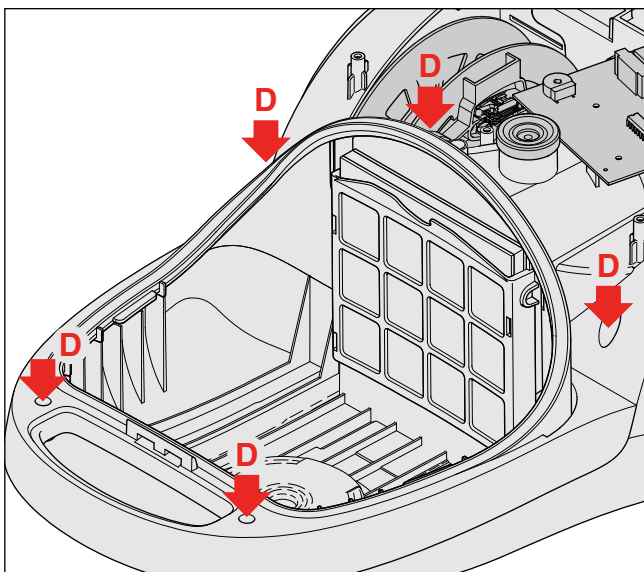


FC9I84/0I / FC9I84/II


- When replacing the Cordwinder (21) the Lower housing insert (19) needs to be removed. Move the Lower housing insert upwards so the cordwinder can easily be removed (see picture).

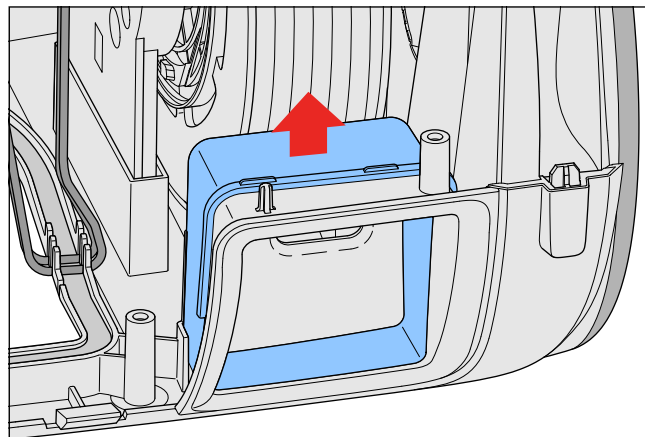

- When assembling take care that the wires from motor to cordwinder are correctly fixed (see picture).

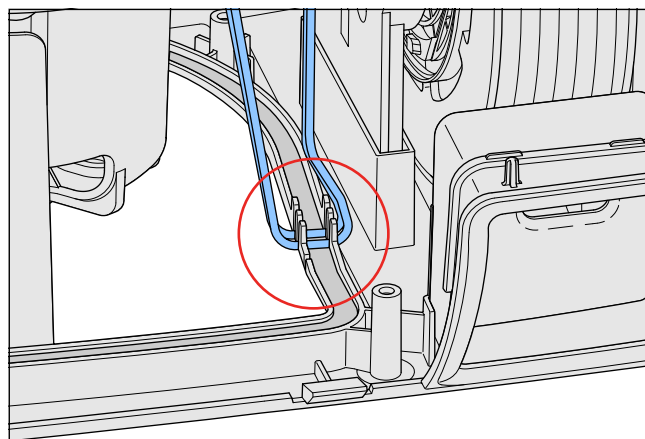


- The frame that holds Triple filter (18) is attached to the Upper housing, to remove the frame remove screw **F** (see picture).

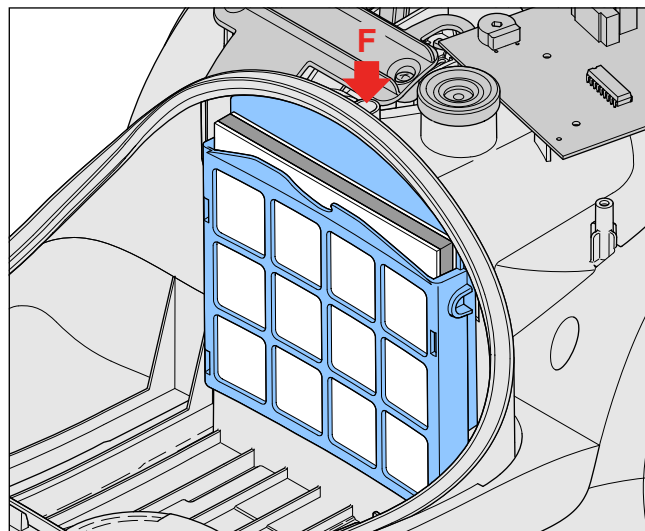


FC9184/01 / FC9184/11

DISASSEMBLY- AND RE-ASSEMBLY ADVISE


- To replace Caster assy (4) turn the appliance upside down, push the Caster assy with a screwdriver up and pull it out (see picture).

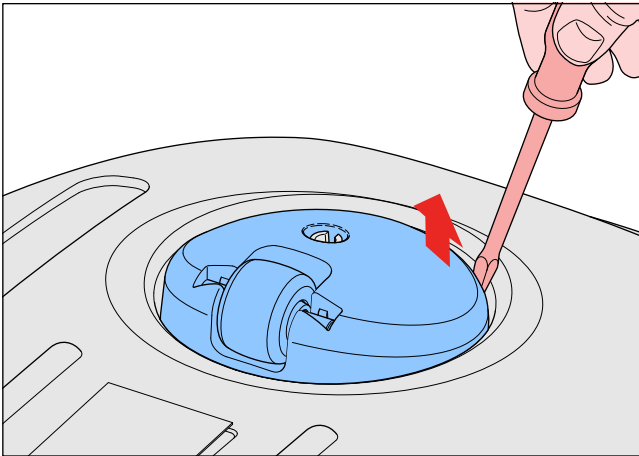

WIRING DIAGRAM

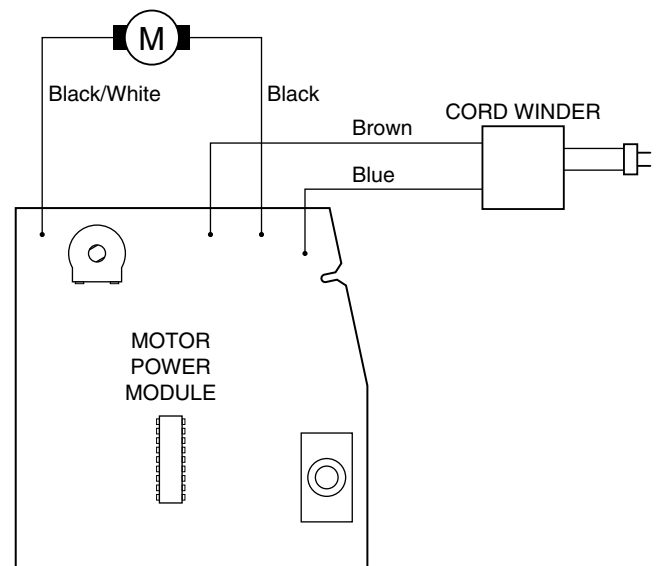

CIRCUIT DIAGRAM

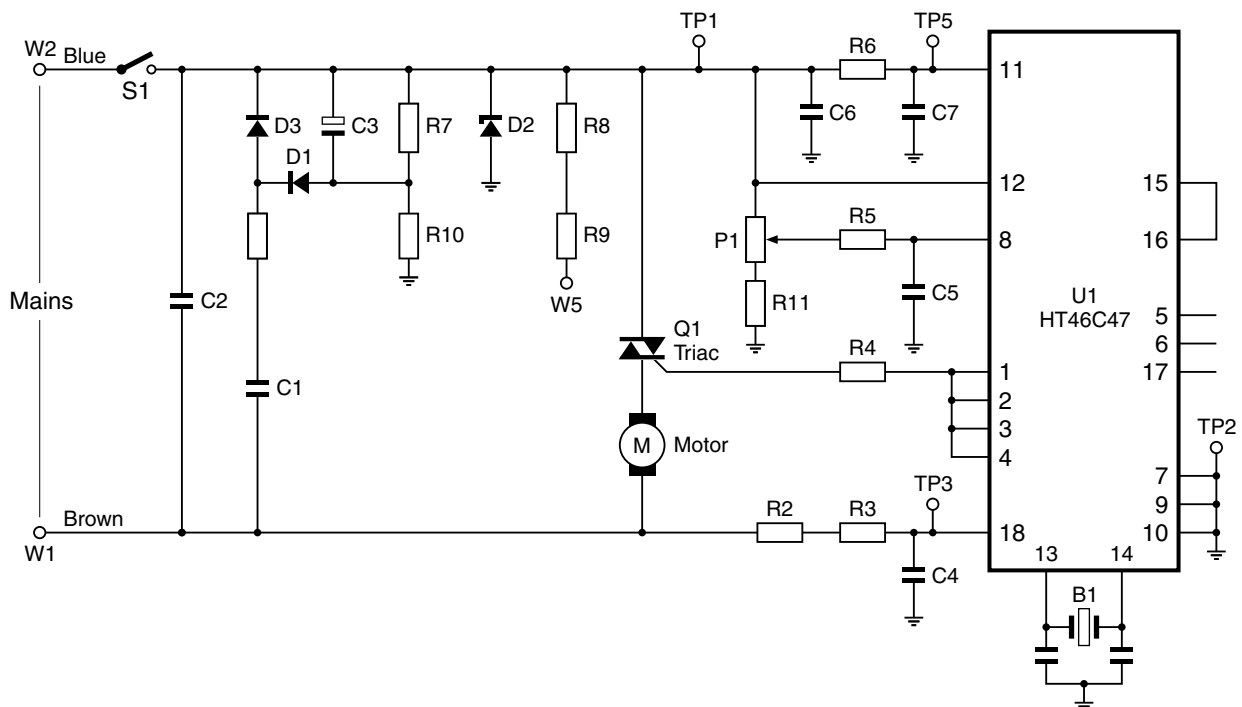

Pos	Service code	Description	Remark
1	4322 009 0063I	Dust cover	Silent Star blue unprinted
3	4322 003 4680I	Dustbag holder	Deep black 8023I
4	4322 005 3343I	Caster assy	
5	4322 003 4667I	On/Off pedal	Deep black 8023I
6	4322 003 4668I	Cordwinder pedal	Deep black 8023I
7	4322 004 92925	HEPA filter	Phoenix
8	4322 003 4674I	Handle cover	Silent Star blue 61216
9	4322 003 4664I	Top handle	
10	4322 003 4686I	Top cover	Silent Star blue 61216
11	4322 003 4665I	Power control knob	Deep black 8023I
12	4322 005 3366I	Power control ring	Printed Silver Metallic
13	4322 003 4688I	Brake lever	
14	4322 003 4669I	Cordwinder cover	
15	4322 009 0070I	Safety valve assy	
16	4322 006 2472I	PCBA	Gulo HV
17	4322 003 4663I	Upper housing	Deep black 8023I
18	4322 000 3973I	Triple Filter	
19	4322 003 4662I	Lower housing insert	Deep black
20	4322 003 4661I	Lower housing	Deep black
21	4322 005 3339I	Cordwinder	6 m / 4.8 mm plug
	4322 005 3394I	Cordwinder	6 m / Swiss plug
22	4322 009 0069I	Motor assy Service	
23	4322 000 3967I	Silencer bottom	
24	4322 003 4687I	Rearwheel lock	
25	4322 000 3971I	Silencer top	
26	4322 000 3968I	Silencer wall	
27	4322 003 4683I	Rearwheel assy	Closed
28	4322 003 4666I	Exhaust grill	
29	4322 003 4676I	Exhaust grill lock	
30	4322 001 7529I	Exhaust seal	
31	4322 004 2463I	Curved bend assy	Deep black
32	4322 004 2472I	2 T.T. Tube	85 cm Cobra Conical
33	4322 004 2481I	Accessory holder assy 2	
34	4322 004 2488I	Tri-Active nozzle	Deep black Conical 35
35	4322 009 0074I	Hose assy LE	Diam. 45 mm

