GC3340





Philips Domestic Appliances and Personal Care

ServiceManual

PRODUCT INFORMATION

Features

- Extra large water inlet for fast filling
- Extra long cord length (3 m) for easy reach
- Extra clear indicator for high visibility of water level
- Careeza soleplate
- Tank capacity 300 ml
- Spray feature
- Steam rate 35 g/min
- Shot Of Steam & Vertical steam 95 g/min
- Double Active Calc System
- 360° ball swivel
- Integrated cord winder
- Drip Stop
- Soft handgrip
- Steam Tip

Safety Information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements and legal regulations as officially laid down at this moment.

TECHNICAL INFORMATION

Voltage : 220 - 240 V Frequency : 50 - 60 Hz Power : 2300 W

Dimension (Iron) : 303 x 120 x 152 mm (L x W x H)

Weight (Iron) : 1.34 kg

Fast Filling

With the extra large water inlet, adding water to the iron is quick, easy & spill-free.

Easy Reach

With the extra long cord length of 3 m, you can easily reach right up to the edge of your ironing board.

More Control

With the extra clear indicator, water level is highly visible and you know if you have enough water for that last garment.

Careeza Soleplate

This is a multi-layer ceramic that glides smoothly over all types of fabric, keeping your clothes in perfect condition.

Double Active Calc System

The automatic anti-calc pill in the water tank, in combination with the Integrated Calc-clean function minimise calcification & ensure long life for the iron.

Drip Stop System

Prevents staining on fabric due to hot droplets leaking from the soleplate at too low temperatures.

Steam Tip

The elongated steam slots deliver concentrated shot of steam & the pointed shape allows steam to reach every details of the garment.

Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands


© Copyright reserved

Subject to modification



DISASSEMBLY ADVICE GC3340

THERMOSTAT DIAL I

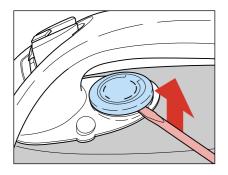

BACKPLATE 2

CORDSET 3

BALL SWIVEL 4

Remove Screw A (1x)
Remove BACKPLATE 2
Remove Screw B (2x)
Remove Cord clamp

INLAY 5

SUB-INLAY PRINTED 6

FILLING DOOR ASSY 7

STEAM SLIDER 8

LAMP ASSY 9

SOS KNOB I I


SPRAY KNOB 12

TANK TOP SEAL 13

Remove Screw A (1x)
Remove BACKPLATE 2

Remove FILLING DOOR ASSY 7

Remove Screw C (1x)
Remove SUB-INLAY 6
Remove INLAY 5

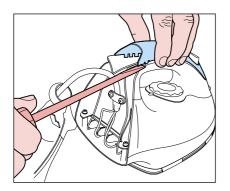

CLAMP BRACKET 14

DOSING CAM 15

STEAM SHAFT ASSY 16

SHAFT BELLOW 17

Remove Screw A (1x)
Remove BACKPLATE 2

Remove FILLING DOOR ASSY 7

Remove Screw C (1x)
Remove SUB-INLAY 6
Remove INLAY 5

Remove SOS KNOB 11
Remove SPRAY KNOB 12
Remove Screw D (2x)

Remove CLAMP BRACKET 14

HOUSING PRINTED 18

PLASTIC RATTLE SPRING 19

PUMP ASSY 20

WATER TANK ASSY 21

ORIFICE 22

THERMOSTAT BUSH 23

VALVE BELLOW ASSY 29

Remove Screw A (1x)
Remove BACKPLATE 2
Remove Screw B (2x)
Remove Cord clamp

Remove FILLING DOOR ASSY 7

Remove Screw C (1x)
Remove SUB-INLAY 6
Remove INLAY 5

Remove Screw E (2x)

Remove THERMOSTAT DIAL 1
Remove HOUSING PRINTED 18

Remove Screw F (2x)

Remove WATER TANK ASSY 21

HEAT SHIELD 24

COVER 25

SOS SEAL 26

DOSING SEAL 27

SOLEPLATE ASSY 28

Remove Screw A (1x)
Remove BACKPLATE 2
Remove Screw B (2x)
Remove Cord clamp

Remove FILLING DOOR ASSY 7

Remove Screw C (1x)
Remove SUB-INLAY 6
Remove INLAY 5
Remove Screw E (2x)
Remove Screw F (2x)

Remove WATER TANK ASSY 21

Remove Screw G (3x)
Remove HEAT SHIELD 24

Remove COVER 25

REPAIR INSTRUCTIONS GC3340

- Due to the high wattage of the iron, only the specified cord set must be used.
- Should damage be observed on the CORDSET 3, it must be replaced.
 Continued usage is not allowed.
- For standardization reason, the COVER 25 is provided without type plate information eg. type number, voltage etc. When replacing the cover, engrave the type number & voltage on the type plate with a sharp object.
- After the product has been repaired, it should function properly and has to meet the safety requirements & legal regulations as laid down & officially established at this moment.
- The following tests are common checks that are conducted on a repaired product before it is returned to the consumer.

1. Soleplate temperature

Check that soleplate temperature is within IEC requirement.

Measure the temperature of the soleplate after the iron has reached steady state i.e connected to the mains for at least 15 minutes. The table below shows the temperature requirement.

| Marking | Soleplate temperature (Deg C) | | | M . : 1 C 1 | |
|--------------|-------------------------------|---------|---------------------|---|----------------|
| | Minimum | Maximum | Nominal + Tolerance | Material, for example | LAND II |
| • (1 dot) | 70 | 120 | 95 ± 25 | Acetate, elastane, polyamide, polyproylene | X Z Test-point |
| •• (2 dots) | 100 | 160 | 130 ± 30 | Cupro, polyester, silk, triacetate, viscose, wool | www " |
| ••• (3 dots) | 140 | 210 | 175 ± 35 | Cotton, linen | \$ |

2. Leakage current

Check that leakage current is within IEC requirement.

Measure leakage current between LIVE/NEUTRAL & EARTH.

IEC requirement is that at 230 V supply, the EARTH leakage current must be less than 0.75 mA.

3. Water leakage / Functionality

Check that there is no water leakage from any part of the product during operation.


Check that the functionality of the product (product dependent) eg. steaming, variable steam, SOS, ASO etc is working properly.

4. Loose part

Check that there are no loose parts eg. extra screw in the product that can cause short-circuit or product malfunction.

PARTS LIST GC3340

| Pos | Service code | Description |
|-----|----------------|---|
| 1 | 4239 021 41620 | Thermostat dial printed (Fre/Dut text) |
| | 4239 021 40540 | Thermostat dial printed (Ger/Swe text) |
| | 4239 021 41690 | Thermostat dial printed (Ita/Spa/Portuguese text) |
| | 4239 021 41730 | Thermostat dial printed (Eng text) |
| 2 | 4239 026 27120 | Backplate |
| 3 | 4239 000 07760 | Cordset EU |
| | 4239 000 07830 | Cordset Swiss |
| 4 | 4239 026 27170 | Ball swivel |
| 5 | 4239 026 26820 | Inlay (Soft touch) |
| 6 | 4239 021 40710 | Sub-inlay printed |
| 7 | 4239 021 40990 | Filling door assy |
| 8 | 4239 026 27020 | Steam slider |
| 9 | 4239 021 32500 | Lamp assy |
| 10 | 4239 026 01220 | Lamp holder |
| 11 | 4239 026 26830 | SOS knob |
| 12 | 4239 026 26840 | Spray knob |
| 13 | 4239 015 55800 | Tank top seal |
| 14 | 4239 026 19450 | Clamp bracket |
| 15 | 4239 026 19440 | Dosing cam |
| 16 | 4239 021 28310 | Steam shaft assy |
| 17 | 4239 015 53170 | Shaft bellow |
| 18 | 4239 026 27070 | Housing printed |
| 19 | 4239 026 27240 | Plastic rattle spring |
| 20 | 4239 020 90560 | Pump assy |
| 21 | 4239 021 40810 | Water tank assy (Anti-calc, Drip stop) |
| 22 | 4239 025 99230 | Orifice |
| 23 | 4239 026 13220 | Thermostat bush |
| 24 | 4239 010 09170 | Heat shield |
| 25 | 4239 026 20330 | Cover (Drip stop) |
| 26 | 4239 015 54410 | SOS seal |
| 27 | 4239 015 55920 | Dosing seal |
| 28 | 4239 021 39870 | Soleplate assy 230 V / 2200 W |
| 29 | 4239 021 22540 | Valve bellow assy |
| | 4239 026 10270 | Filling cup |

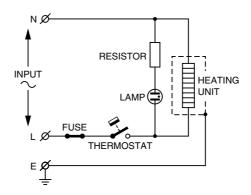

GC3340

