

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

Iron

- Dark Blue color
- Blue Ceralon soleplate
- Steam rate (max): 95 g/min
- Steam trigger with lock
- Steam tip
- Steam hose length: 1.7 m

Stand

- Inox boiler pressure max.: 4.0 bar
- Boiler volume max.: 800 ml
- Steam ready in: 6 minutes
- Hose cord storage compartment
- Hose cord length: 1.7 m
- Power cord length: 1.9 m
- Power on light
- Overheat safety stop (Thermal fuse)

EMF & Service Information

- This product meets the requirements regarding interference suppression on radio & TV.
- After the product has been repaired, it should function properly & has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

Voltage	:	230 V
Frequency	:	50 - 60 Hz
Power	- Iron	: 800 W
	- Boiler	: 1370 W
Dimension (F-box)	:	39 cm (D) x 25 cm (W) x 37 cm (H)
Weight Product)	:	4.7 kg

Water advice

If the tap water in your area is very hard, it is advisable to mix the tap water with an equal amount of demineralised water

REPAIR INSTRUCTION

- No specific issues

OPTIONAL (ACCESSORIES)

- No specific issues

BACKPLATE 1

HOSE CORD MOUNTED ASSY 2

- Remove Screw A
- Disassemble BACKPLATE 1
- Remove Screw B1, B2
- Remove Clamping plate
- Remove Power cord quick-connect S, E, L, N
- Remove Hose clip (a)
- Disassemble Steam hose
- Disassemble HOSE CORD MOUNTED ASSY 2

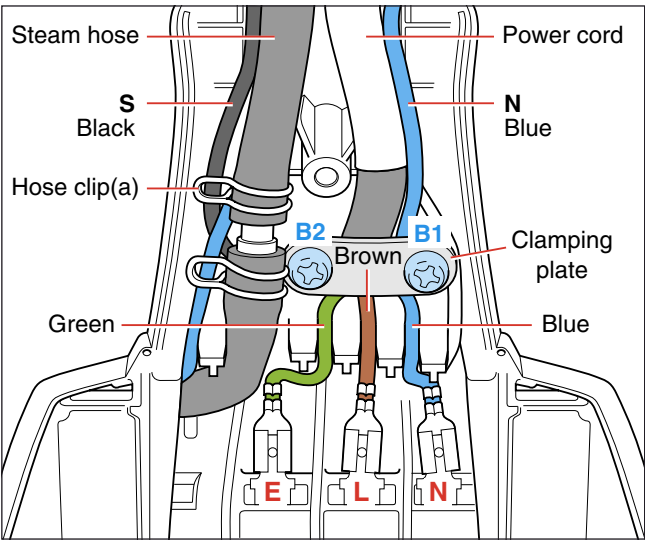


Fig 1. Wiring at rear HOUSING (Part 1)

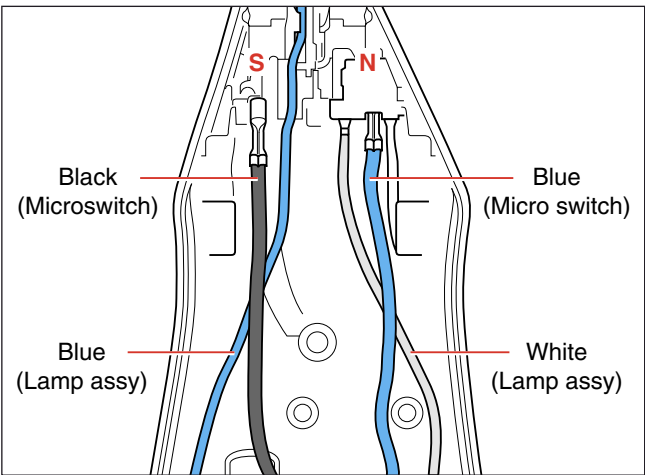


Fig 2. Wiring at rear HOUSING (Part 2)

INLAY 3

STEAM LOCK 4

LAMP ASSY 5

MICROSWITCH ASSY 6

TRIGGER 7

THERMOSTAT DIAL ASSY 9

HOUSING PRINTED 10

SOLEPLATE COVER 11

THERMOSTAT BUSH 13

BRAIDED RUBBER HOSE 14

SOLEPLATE ASSY 16

- Remove Screw A
- Disassemble BACKPLATE 1
- Release Inlay rear catch
- Disassemble INLAY 3
- Disassemble STEAM LOCK 4
- Disassemble MICROSWITCH ASSY 6
- Remove Screw C
- Disassemble TRIGGER 7
- Disassemble THERMOSTAT DIAL 9



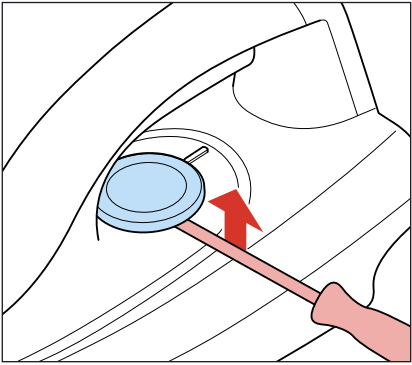


Fig 3.

- Remove Screws D1,D2,D3
- Disassemble HOUSING PRINTED 10
- Remove Screws E1,E2,E3
- Disassemble SOLEPLATE COVER 11
- Remove Hose clip (b)
- Disassemble RUBBER HOSE 14

Pos	Service code	Description
1	4239 026 41761	Backplate
2	4239 021 61231	Hose cord mounted assy
3	4239 026 41981	Inlay
4	4239 026 41891	Steam lock
5	4239 021 36861	Lamp mounted assy
6	4239 021 31790	Microswitch assy
7	4239 026 41931	Trigger
8	4239 010 09290	Trigger spring
9	4239 021 61241	Thermostat dial assy
10	4239 021 60611	Housing printed
11	4239 026 41811	Soleplate cover
12	4239 015 70153	Ryton ring
13	4239 026 13220	Thermostat bush
14	4239 015 59301	Braided rubber hose
15	4239 010 10280	Hose clip - braided rubber hose
16	4239 021 81041	Soleplate assy (Blue Ceralon) - 230 V

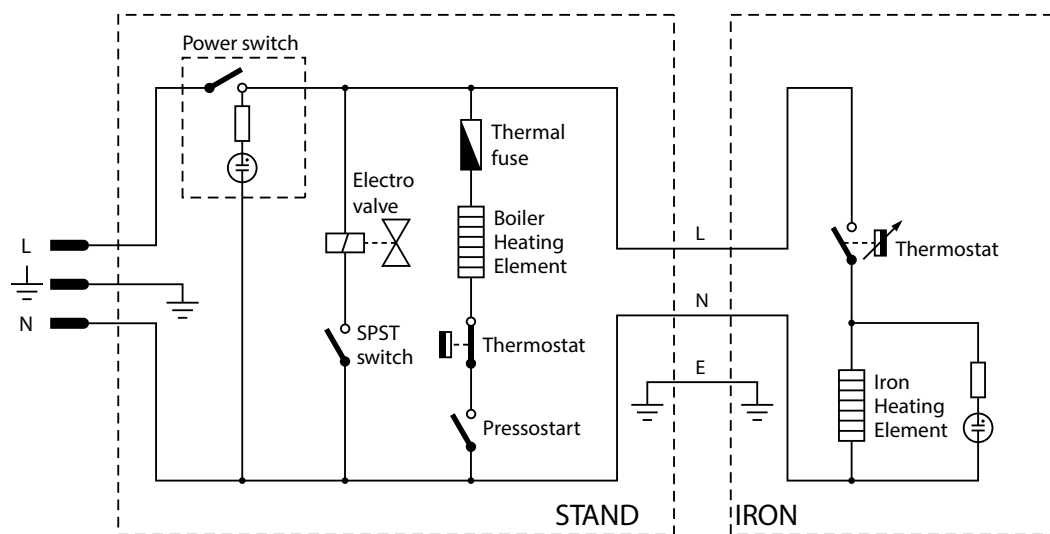

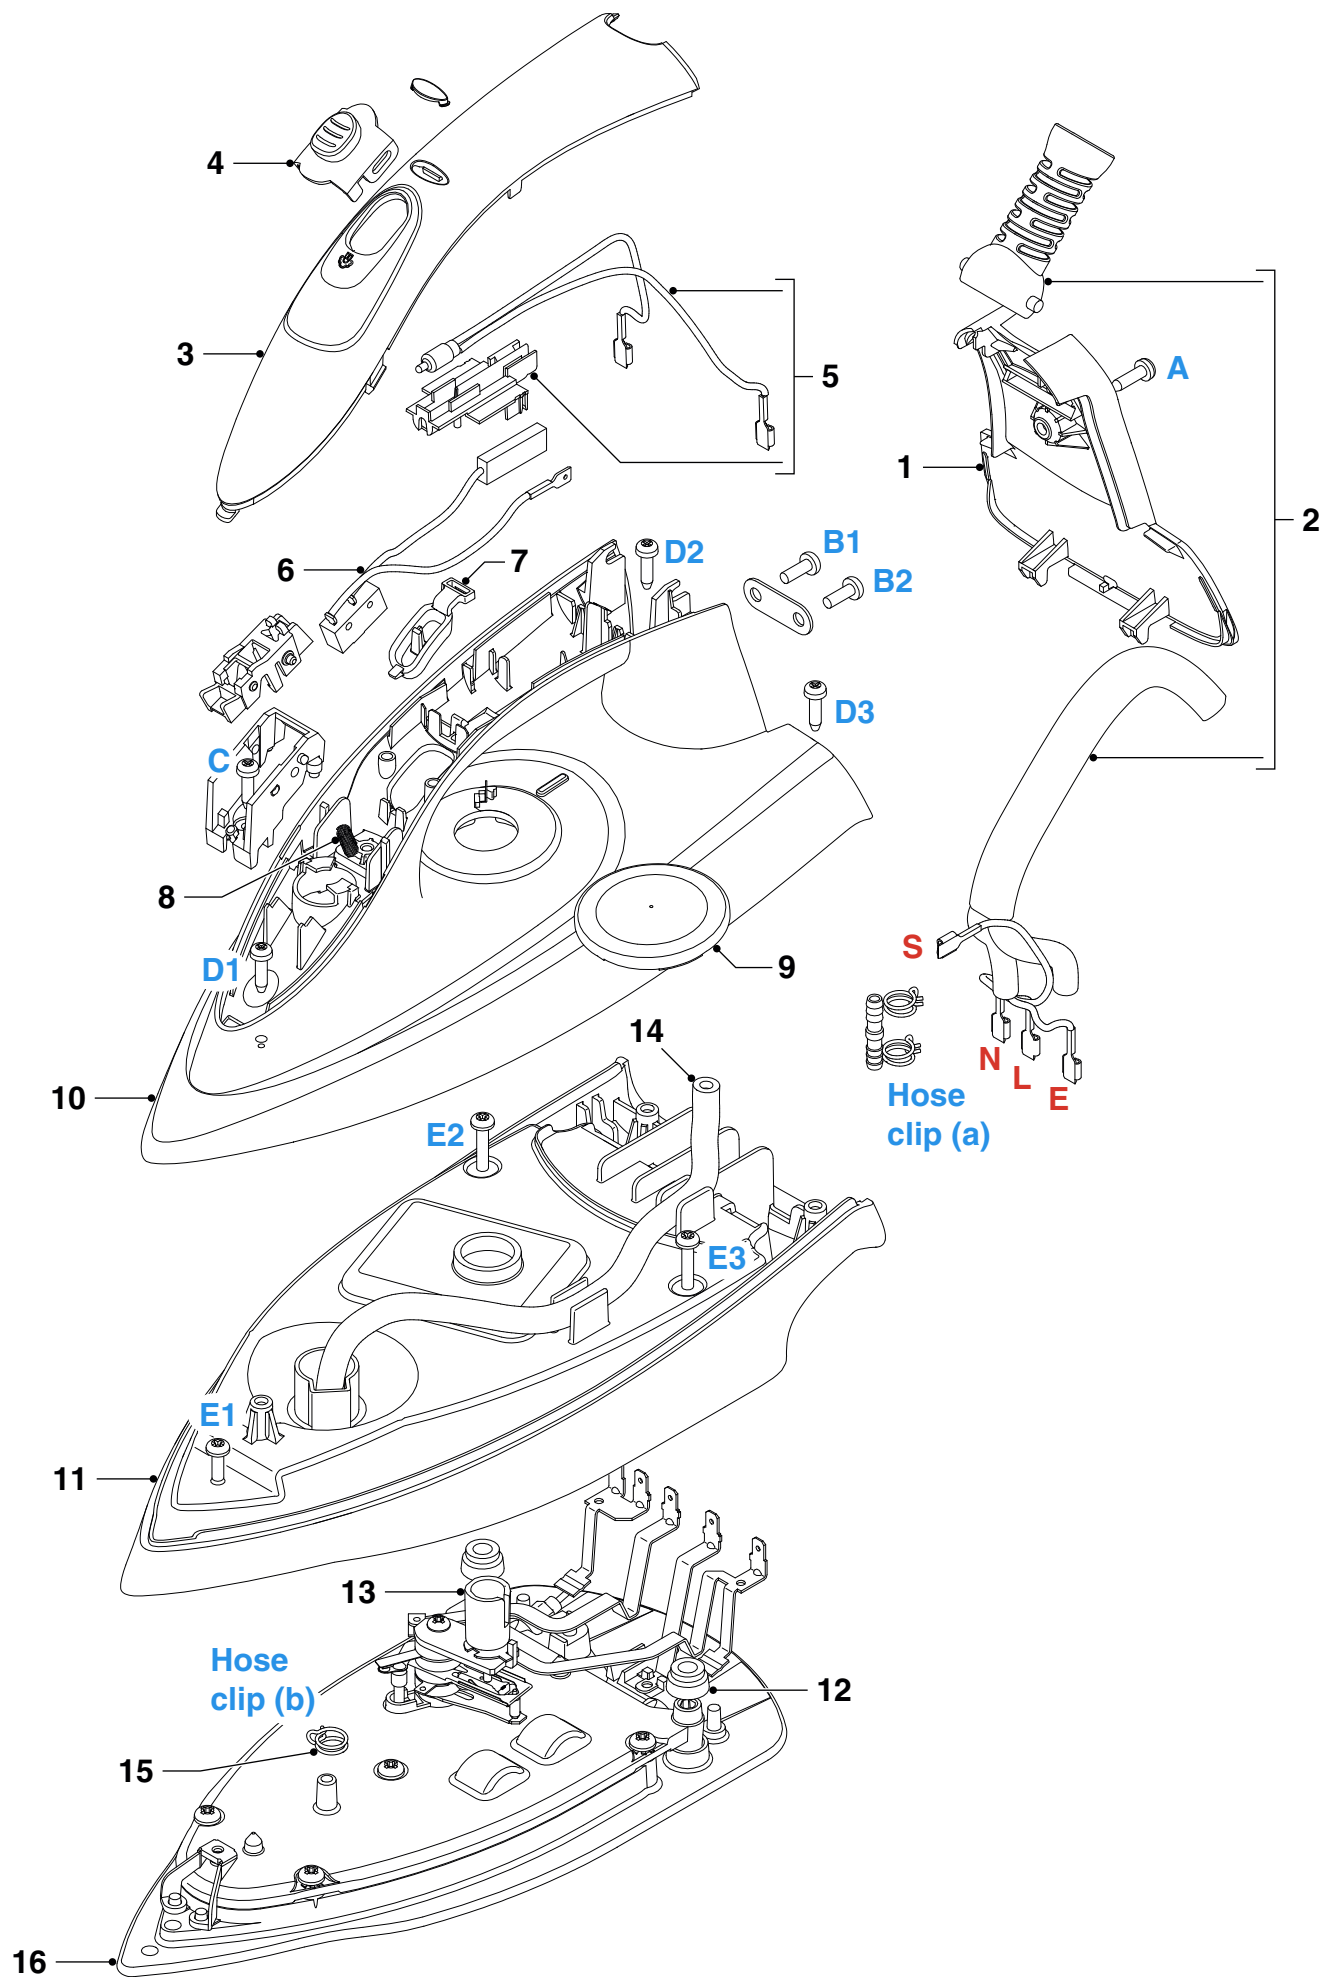

SAFETY VALVE ASSY 40
STAND BASE ASSY 30
HOSE-CORD STORAGE COMPARTMENT 32
POWER CORD 54
CONNECTION BOX 38, 39
BOILER ASSY 53
ELECTROVALVE 56
STAND TOP ASSY 35
ROCKER SWITCH 47

Remove SAFETY VALVE ASSY 40

Note:

Empty water in boiler

Turn Stand assy upside down
 Remove Screws G1 – G5
 Disassemble STAND BASE ASSY 30
 Remove Screws H1 – H3
 Disassemble HOSE-CORD STORAGE COMPARTMENT 32
 Remove Screws J1 – J3
 Disassemble Cord clamp
 Disassemble POWER CORD 54
 Disassemble CONNECTION BOX 38, 39
 Disassemble BOILER ASSY 53
 Remove Screws K1 – K6
 Disassemble STAND TOP ASSY 35
 Remove Screws N1, N2
 Disassemble ROCKER SWITCH BRACKET 46
 Disassemble ROCKER SWITCH 47

Pos	Service code	Description
30	4239 021 61271	Stand base assy
32	4239 026 41491	Hose-cord storage compartment
35	4239 021 61251	Stand top assy
38	4239 026 41431	Connector box cover
39	4239 026 41421	Connector box base
40	4239 021 61261	Safety valve assy
41	4239 015 58201	O-ring
46	4239 026 41611	Rocker switch bracket
47	4239 017 12111	Rocker switch
53	4239 021 65131	Boiler mounted assy
54	4239 000 11321	Power cord - EU
	4239 000 11391	Power cord - Swiss
55	4239 010 11111	Electrovalve mesh
56	4239 017 11101	Electrovalve

