



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General:

- Rechargeable
- World-wide automatic voltage selection
- Electronic on/off switch
- Washable

Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 Volt / 50 - 60 Hz
- Motor voltage : 1,2 Volt
- Shaving heads : HQ9/3 - 4222 036 15880
- SAP coding : HQ8261

DISASSEMBLY- AND RE-ASSEMBLY ADVICE

Disassembly:

- Remove shaving unit, to prevent damaging during repairing
- Remove the 2 screws **A** out of the hairchamber
- Remove the hairchamber from the body
- Remove the 2 screws **B** on the backside of the shaver
- Remove the cover
- Remove the side grips
- Remove the housing by bending the hooks with a screwdriver
- Take out the basic body

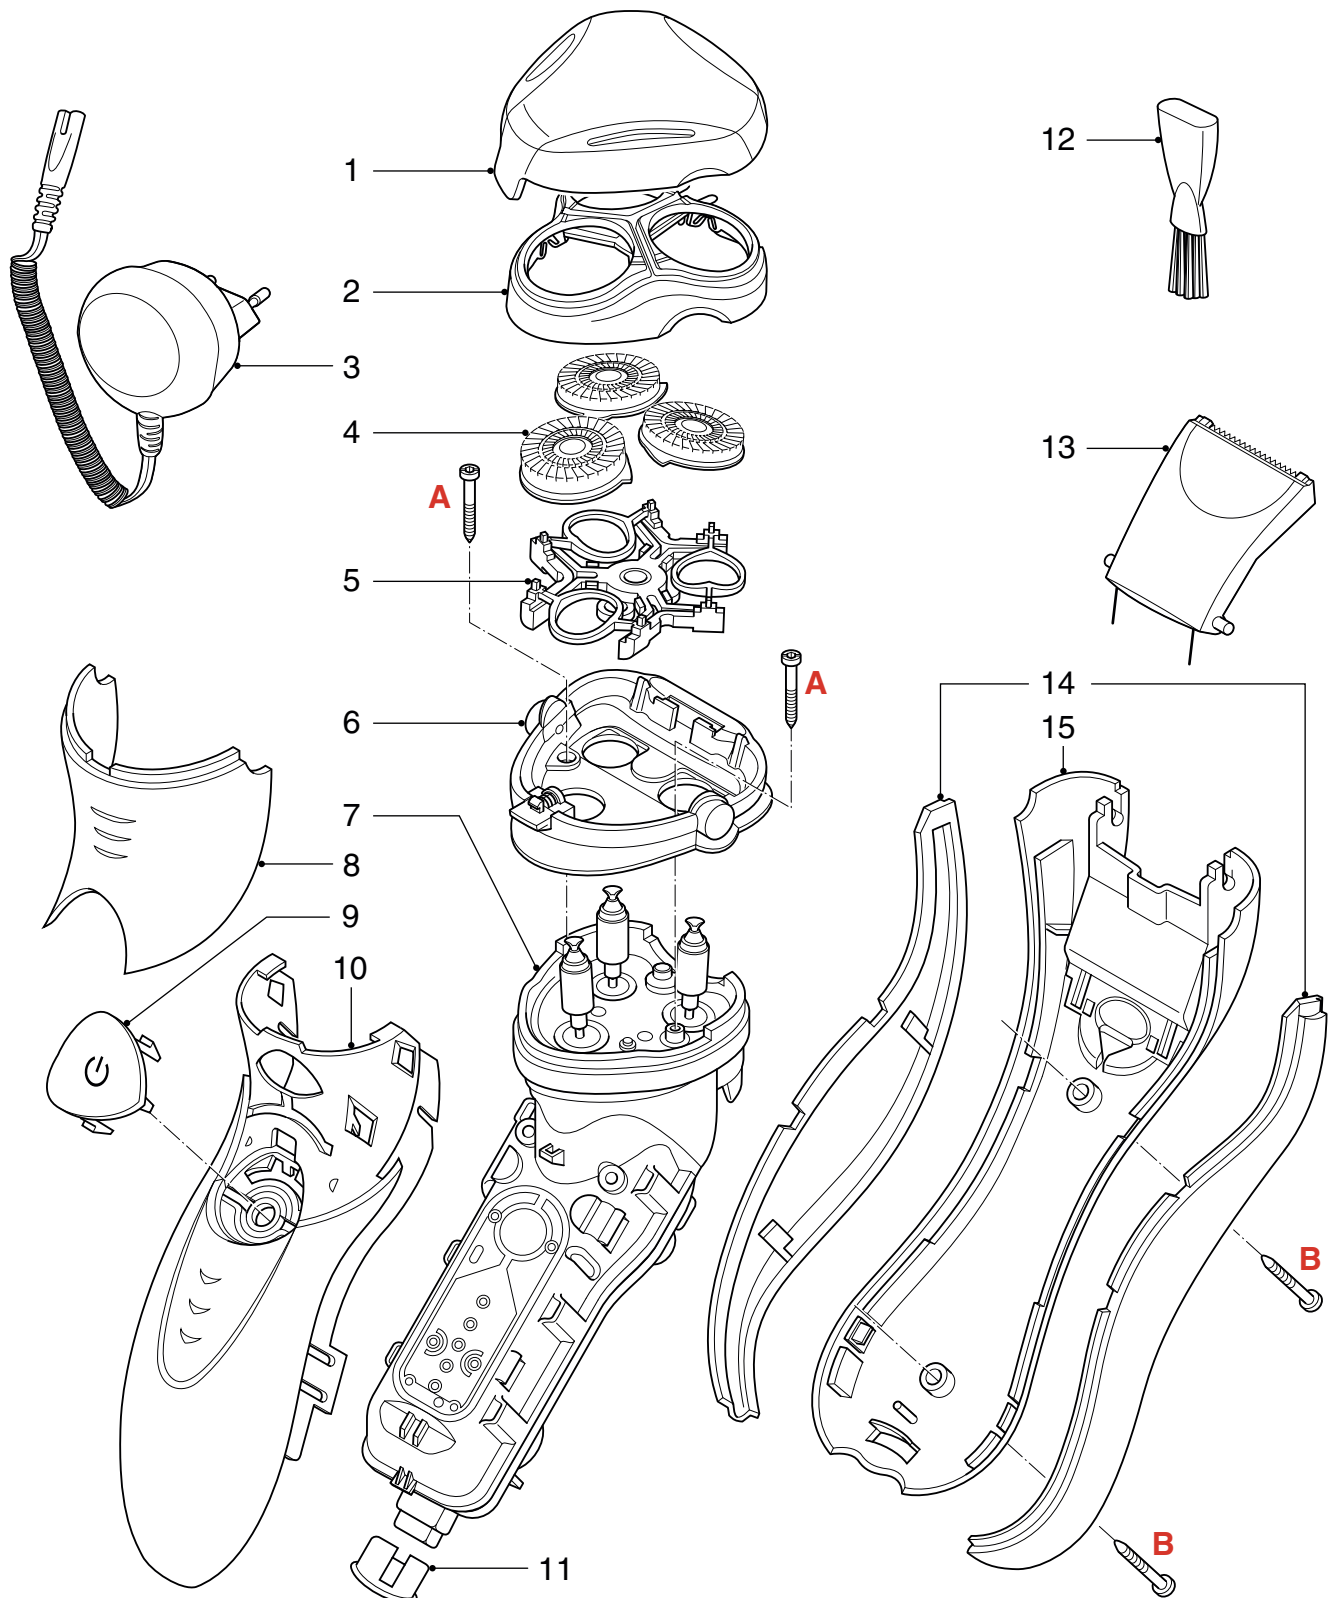
REPAIR INSTRUCTION

- No specific issues

OPTIONAL (accessories)

- Pouch soft 4222 036 16260
- Pouch H/S 4222 036 16250
- Charging stand 4222 036 16290
- Jet clean 2.1 4222 036 16280
- Power plug straight
 - Europa 4222 036 04080
 - Aus/Nz 4222 036 05120
 - GBR 4222 036 04090
 - Can/TW 4222 036 05110
 - MEX 4222 036 03810
 - KOR 4222 036 04850
 - JAP 4222 036 03870
 - PRC 4222 036 10320
 - ARG 4222 036 03760

EXPLODED VIEW & PARTS LIST

HQ826I

Pos	Service code	Description
1	4222 036 15400	Protecting cap
2	4222 036 15410	Bracket assy
3	see optional	Power plug
4	4222 036 15880	Shaving head HQ9/3
5	4222 036 15430	Holder assy
6	4222 036 15450	Hairchamber
7	4222 036 15670	Basic body
8	4222 036 15570	Front grip panel

Pos	Service code	Description
9	4222 036 15580	On/off knob
10	4222 036 19710	Housing assy
11	4222 036 15760	Bottom ring
12	4222 036 02770	Brush
13	4222 036 15710	Trimmer assy
14	4222 036 15740	Side grip L & R
15	4222 036 19720	Back shell assy
	4222 036 11480	Screw