



Philips Consumer Lifestyle

# Service Manual

## PRODUCT INFORMATION

### Features

- Cordless Handblender with chopper accessory (including 2 knives) and beaker.
  - Design and execution optimized to support freedom to move as VoC.
  - Durable design and construction (plastic power-unit and alu pressed bar).
  - DC permanent magnet motor.
  - User Interface:
    - 2 levers, unlock lever and power lever
    - One release button on front
    - Charging indication with LED's on top of power-unit
  - Stable stand (incl. charging function), fixation of mounted appliance.
- 
- Speed : Full motorspeed (11500 rpm)
  - Main housing : Plastic structure laquered
  - Switches : Unlock lever, Power lever
  - Bar : Alu pressed
  - Accessories : Chopper, Beaker, 2 knives
  - Charging : Charging stand
  - User interface : LED's on top
  - Release system : One push button on the front

### Safety

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

### Design specifications:

- Chopper Lid : plastic
- Chopper Bowl : SAN transparent
- Knives : stainless steel
- Beaker Lid : plastic
- Beaker : SAN transparent
- Power Unit : plastic structure laquered
- Bar : Alu pressed
- Knife : stainless steel
- Stand : PBT + 15% GF

### Accessories

- Charging Base
- Chopper
- Chopper knife
- Ice Crusher knife
- Beaker (1,0 l) incl. Lid

## TECHNICAL INFORMATION

- Power adapter : 20 W
- Frequency : 50 / 60 Hz
- Voltage batteries : 7,4 V
- Voltage adapter : 100 - 240 V
- Maximum charging time : 2,5 h
- Quick charge (1 light application) : 15 min
- Cordset length : 1,8 m
  
- Size of appliance:
  - Length (motor unit) : 235 mm
  - Length (with bar) : 400 mm
  - Diameter : 55 mm
- Stand:
  - Height : 400 mm
  - Length : 220 mm
  - Width : 155 mm
- Weights
  - HR1379/00 : 1,84 kg
  - Stand : 0,84 kg
  - Power unit with Bar : 1 kg


## DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues

## REPAIR INSTRUCTIONS

### Serial number explanation:

The serial number can be identified on the typeplate sticker.  
See example below.

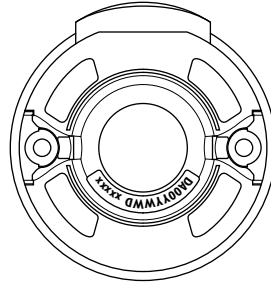


- DA (Domestic Appliances)
- 00 (used for major technical changes)
- YY (Year)
- WW (Week)
- D (Day / 1 = Monday)
- xxxxx (serial number 5-digits starting at 00001 at first day of each production week)

## OPTIONAL (accessories)

- No specific issues

## WIRING DIAGRAM

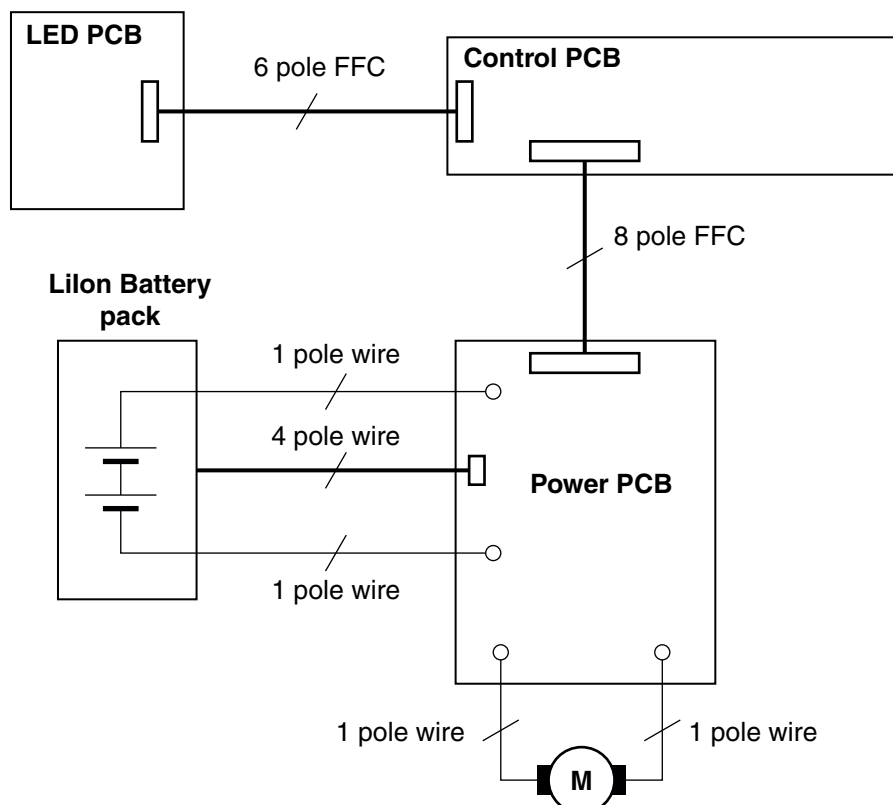



Pos	Service code	Description
1	4203 035 89350	Chopper Lid assy
2	4203 035 89360	Chopper Knife + protection
3	4203 035 89370	Crusher knife + protection
4	4203 035 89380	Chopper Bowl assy
5	4203 035 89390	Beaker Lid

Pos	Service code	Description
6	4203 035 89400	Beaker
7	4203 035 89410	Power unit assy
8	4203 035 89420	Bar assy + protection
9	4203 035 89430	Stand assy WEu
	4203 035 89440	Stand assy GB