



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General

- Corded and cordless use
- World wide automatic voltage selection 100 - 240 Volt
- Mains operating when battery is empty

Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 Volt
- Battery Li-ion
- Cutter need no oiling
- Length setting : up to 30 mm
- Operating time : up to 60 minutes
- Charging time : 1 hour
- 180° pivoting clipper head for maximum reach in all areas

DISASSEMBLY- AND RE-ASSEMBLY ADVICE

- No specific issues


REPAIR INSTRUCTIONS

- No specific issues

OPTIONAL (accessories)

Power plug:

- 2722 171 90128 Europe
- 2722 171 90137 USA, CA, TW, MEX, JAP
- 2722 171 90142 Australia/New Zealand
- 2722 171 90162 United Kingdom
- 2722 171 90135 Brasil
- 4222 036 18001 Pouch

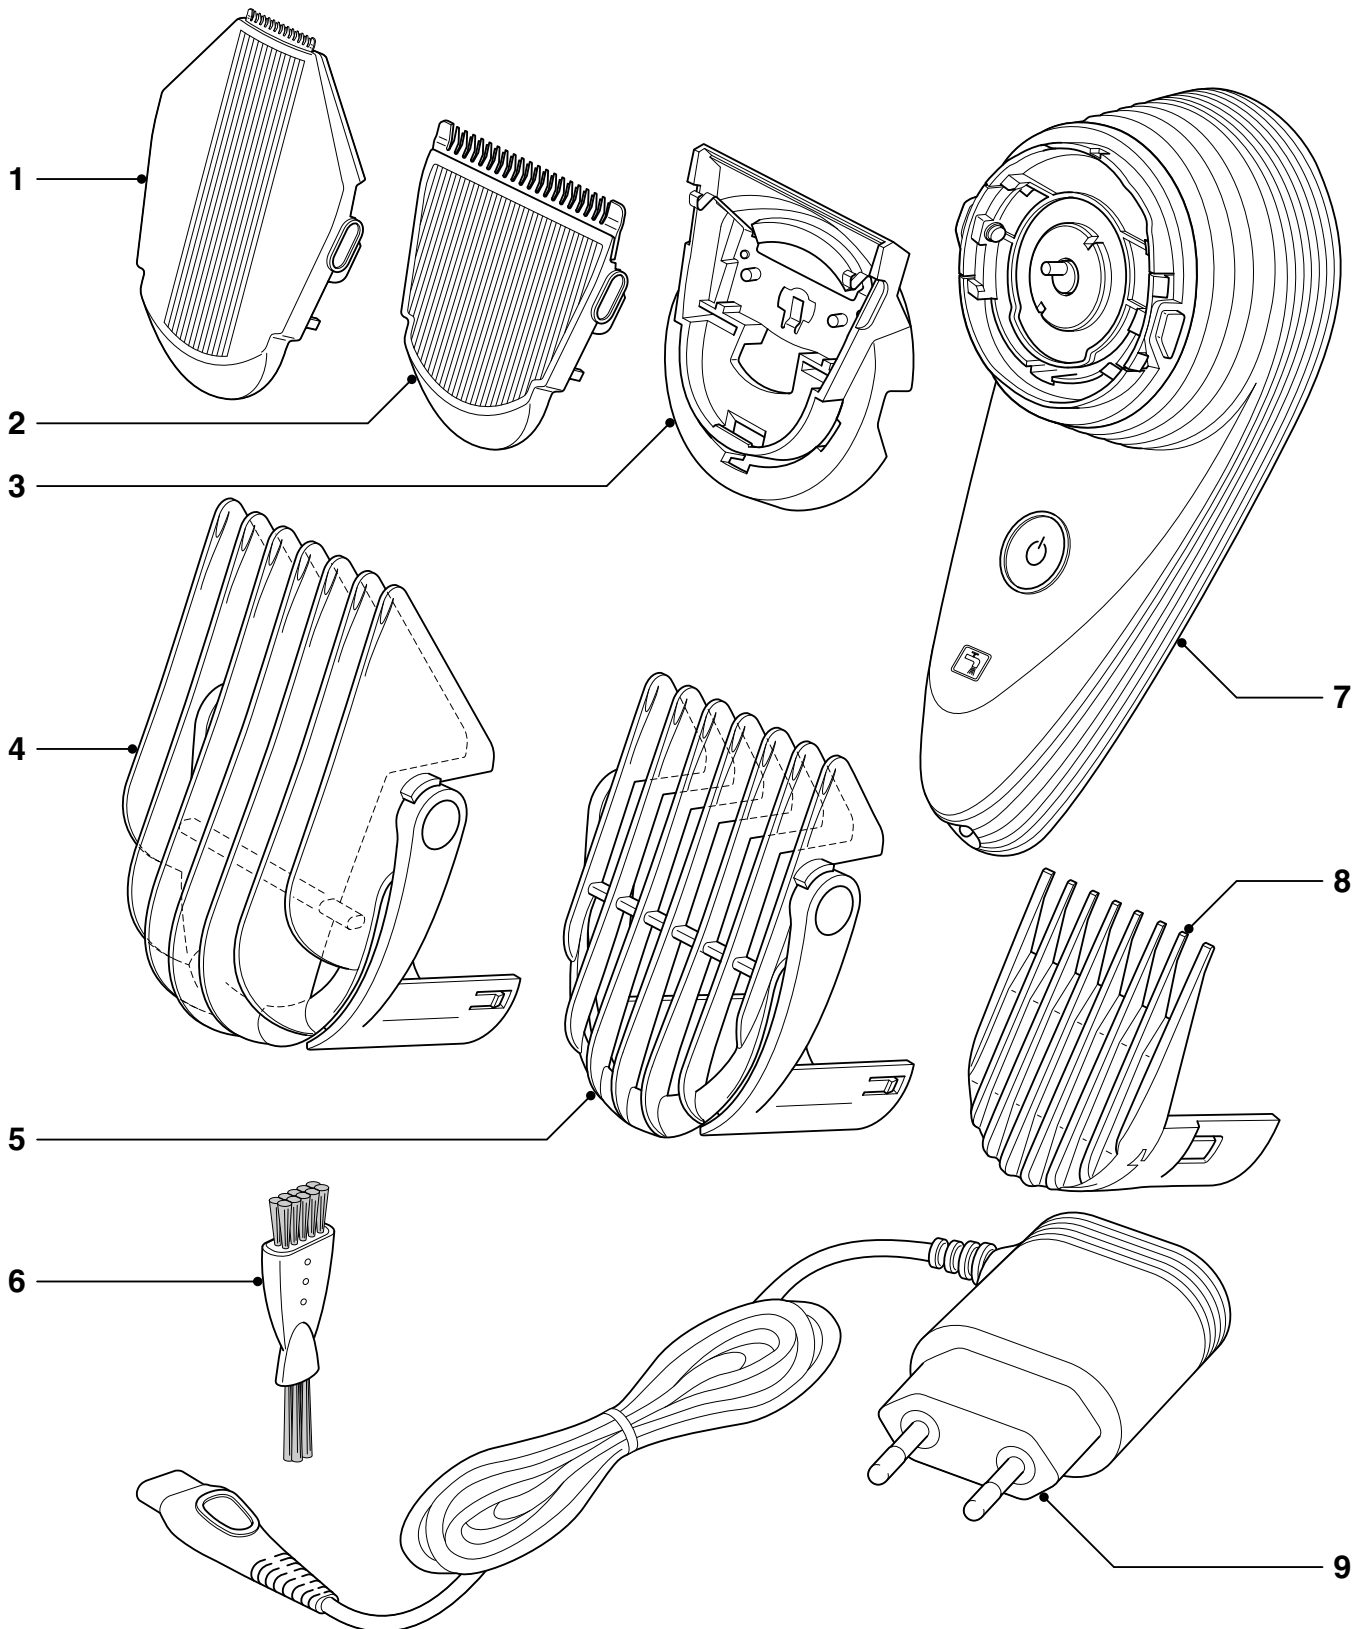

Pos	Service code	Description
1	4222 036 17971	Cutter assy 15 mm
2	4222 036 17961	Cutter assy 41 mm
3	4222 036 17951	Trimmer housing
4	4222 036 17941	Big comb
	4222 036 20001	Big comb USA

■ = changed

Pos	Service code	Description
5	4222 036 17931	Small comb
	4222 036 19991	Small comb USA
6	4222 036 02770	Brush
7	4222 036 18021	Housing
8	4222 036 18041	Precision comb
	4222 036 19981	Precision comb USA
9	See Optional	Power plug