

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General

- Corded and cordless use
- World wide automatic voltage selection 100 - 240 Volt
- Mains operating when battery is empty

Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 Volt
- Battery Li-ion
- Cutter need no oiling
- Length setting : up to 15 mm
- Operating time : up to 60 minutes
- Charging time : 1 hour
- 180° pivoting clipper head for maximum reach in all areas

DISASSEMBLY- AND RE-ASSEMBLY ADVICE

- No specific issues

REPAIR INSTRUCTIONS

- No specific issues

OPTIONAL (accessories)


Power plug:

- 2722 171 90128 Europe
- 2722 171 90137 USA, CA, TW, MEX, JAP
- 2722 171 90142 Australia/New Zealand
- 2722 171 90162 United Kingdom
- 2722 171 90135 Brasil

- 4222 036 18001 Pouch

EXPLODED VIEW

QC5550

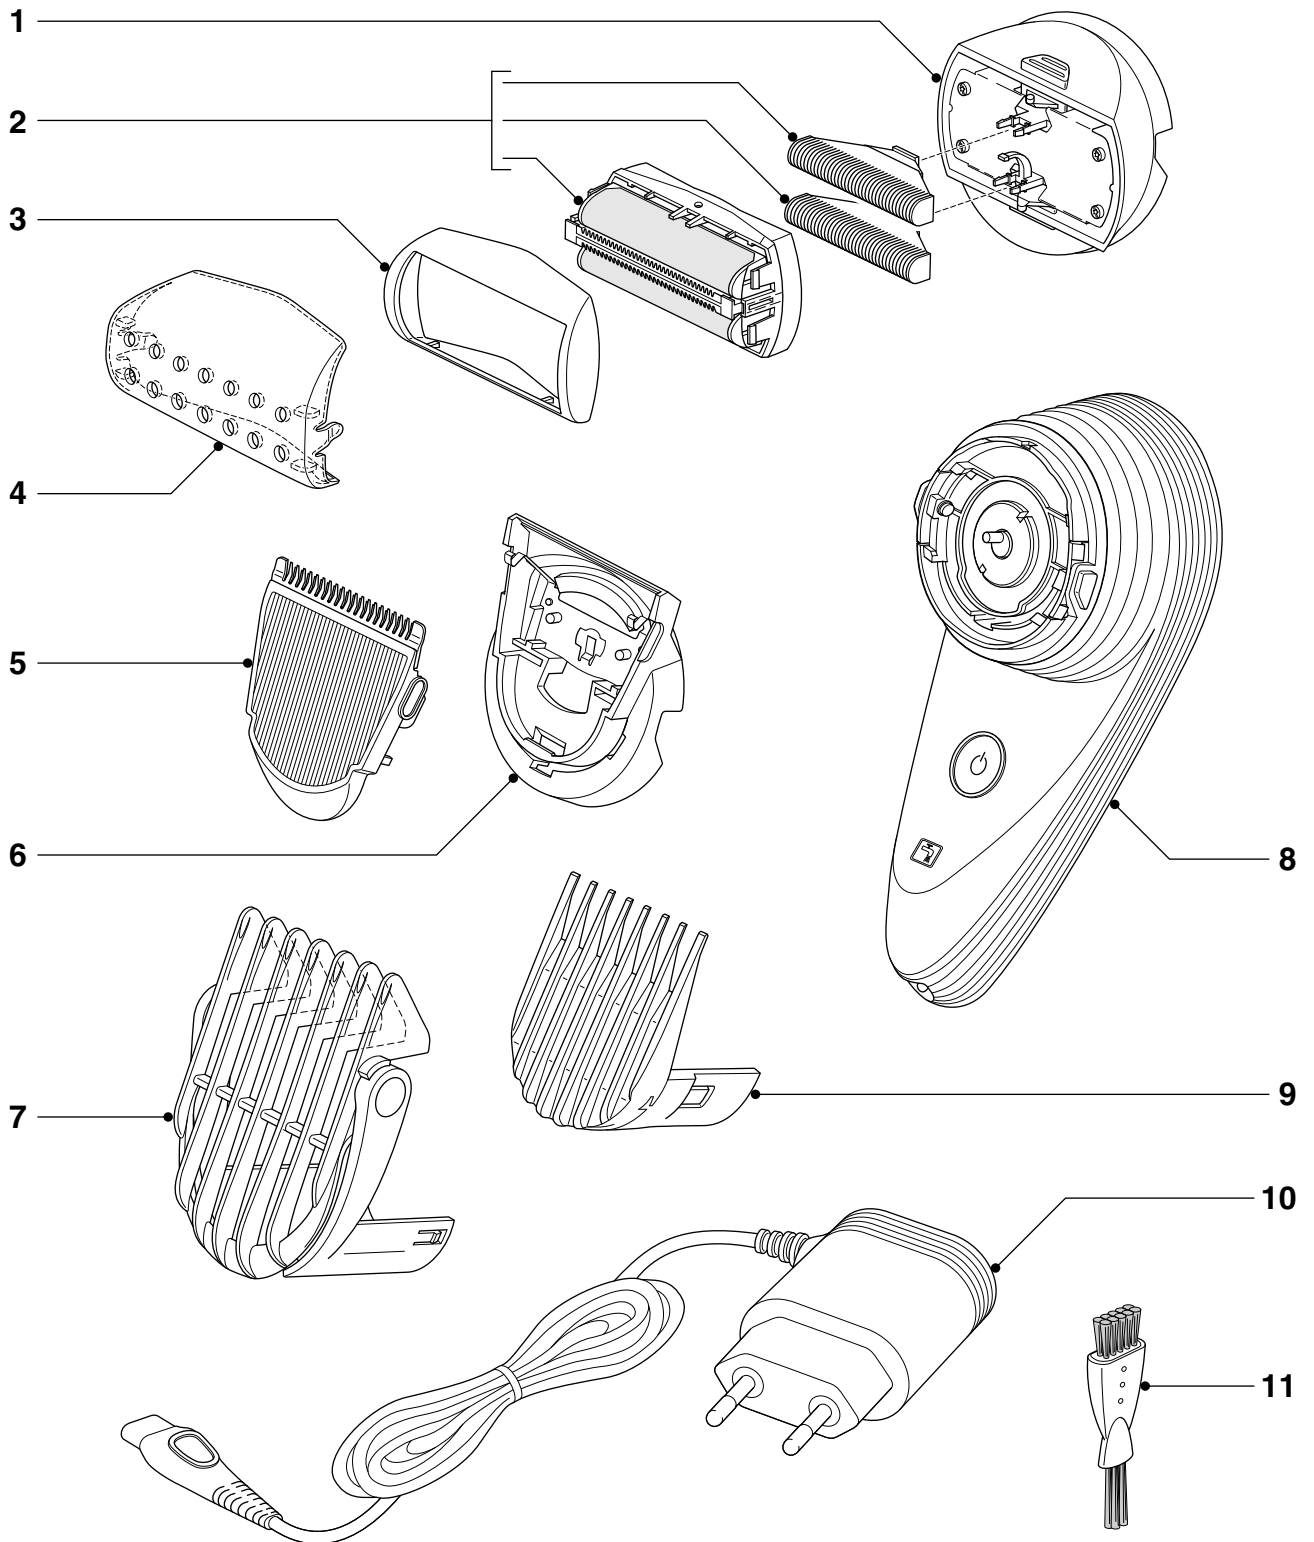

Pos	Service code	Description
1	4222 036 18121	Balder bottom part
2	4222 036 18111	Balder cutting unit
3	4222 036 17991	Balder bracket
4	4222 036 17981	Protection cap
5	4222 036 17961	Cutter assy 41 mm
6	4222 036 17951	Trimmer housing

Pos	Service code	Description
7	4222 036 17931	Small comb
8	4222 036 18031	Housing
9	4222 036 18041	Precision comb
10	See Optional	Power plug
11	4222 036 02770	Brush