

Service  
Service  
Service



Philips Consumer Lifestyle

# Service Manual

## PRODUCT INFORMATION


### General:

- Rechargeable total body grooming system
- World wide automatic voltage selection
- Washable
- 5 integrated length setting
- Cordless use only

### Safety information


- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

### Place of production date

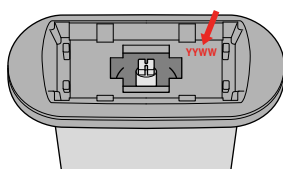


## TECHNICAL INFORMATION

- Mains : Voltage - Input : 100 - 240 V / 50 - 60 Hz  
- Output : 15 V
- Power system : Rechargeable
- Batteries : NiMh
- Charging time  
**Production date < 1150 : 8 hours**  
**Production date > 1151 : 1 hour**
- Capacity : up to 50 minutes
- Motor voltage : 2,4 Volt

 = changed

**Disassembly:**

1. Remove comb.
2. Open trimmer.
3. Remove trimmer by turning the trimmer to the left or the right. (see picture)

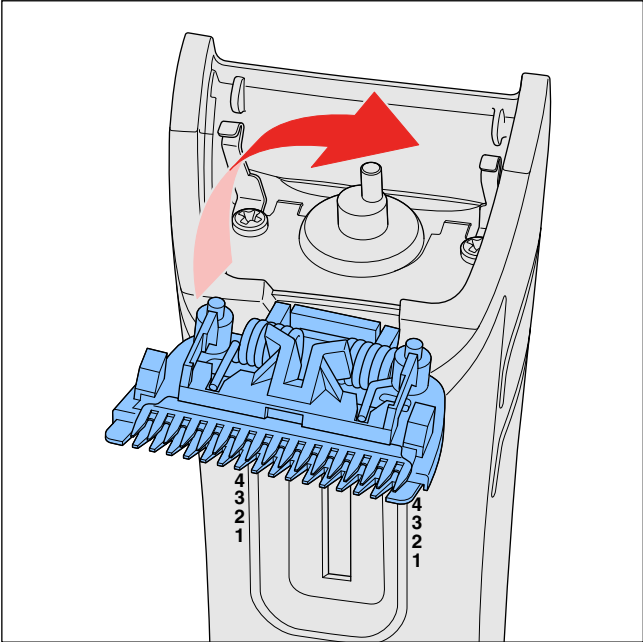

**Re-assembly**

- Do this opposite.

**REPAIR INSTRUCTION**

- No specific issues

**OPTIONAL (accessories)**

- No specific issues

**PARTS LIST**

Pos	Service code	Description
1	4222 036 02770	Brush
2	4222 036 17461	Cutter production, on or before week 1052
	4222 036 21351	Cutter production, on or after week 1101
3	4222 036 17471	Comb
4	4203 035 51110	Shaving unit
5	4222 036 17481	Stand
6	4222 036 04080	Power Plug EUR
	4222 036 05160	Power Plug NOR
	4222 036 05120	Power Plug AUS/NZ
	4222 036 04090	Power Plug GBR
	4222 036 05110	Power Plug CAN/TW
	4222 036 03810	Power Plug MEX
	4222 036 04850	Power Plug KOR
	4222 036 03870	Power Plug JAP
	4222 036 10320	Power Plug PRC
	4222 036 03760	Power Plug ARG
7	4222 036 18051	Body

