

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

Features

Iron

- SteamGlide Soleplate
- Continuous steam in horizontal & vertical position
- Adjustable steam rate up to 110 g/min
- Shot Of Steam up to 150 g/min
- Steam activator lock
- Automatic drip stop
- Soft touch hand grip
- Steam tip for hard-to-reach places
- Steam hose length : 1.7 m

Stand

- Anti-corrosion Inox boiler
- Boiler sensing : Electronic
- Boiler pressure : 5.0 bar
- Fast heat-up : steam ready in 2 mins.
- Cord length : 2.5 m
- Hose cord storage
- Easy to rinse
- Iron lock for safe storage
- Detachable tank : 1.4 L

Safety Information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down as this moment.

TECHNICAL INFORMATION

Voltage	: 220 - 240 V
Frequency	: 50 - 60 Hz
Power Iron	: 800 W
Boiler	: 1370 W
Dimension (F-box)	: 350 x 350 x 250 mm (L x W x H)
Weight (with packing)	: 6.4 kg

Water advice

If the tap water in your area is very hard, it is advisable to mix the tap water with an equal amount of demineralised water.

SteamGlide Soleplate

Scratch resistant, non-stick, easy to clean & very durable.

Fast ironing

Steam ready in 2 minutes & up to 5 bar of steam pressure penetrating deeper into the fabrics.

Iron lock

Safely store the iron on the stand.

Easy to rinse

The new design of the rinse cap makes it very easy to rinse the boiler regularly. Simply unscrew the cap and pour out the "dirty" water into the sink.
No hassle with coins, extra tubes or anything of this sort.

Large detachable water tank

1.4 Liter water tank allows up to 3 hours freedom of ironing without refilling.

BACKPLATE 1**SWIVEL 2****HOSE CORD ASSY 3**

- Remove Screw A
- Disassemble **BACKPLATE 1**
- Remove Screw B1, B2
- Remove Clamping plate
- Remove Power cord quick-connect S, E, L, N
- Remove Hose clip (a)
- Disassemble Steam hose
- Disassemble **HOSE CORD ASSY 3**

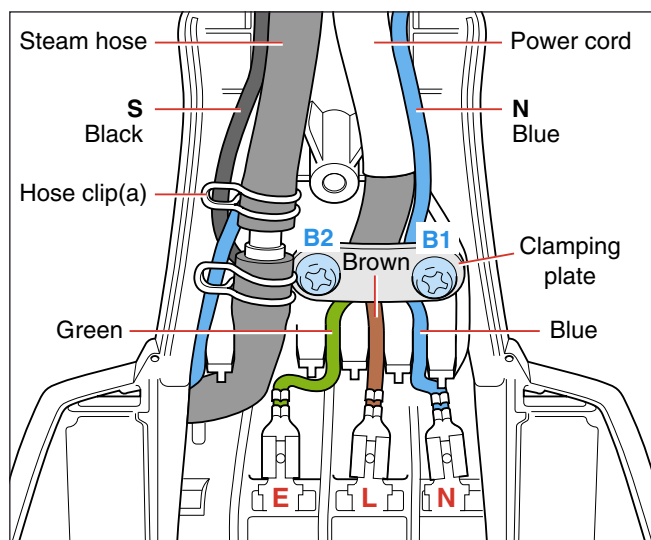


Fig 1. Wiring at rear HOUSING (Part 1)

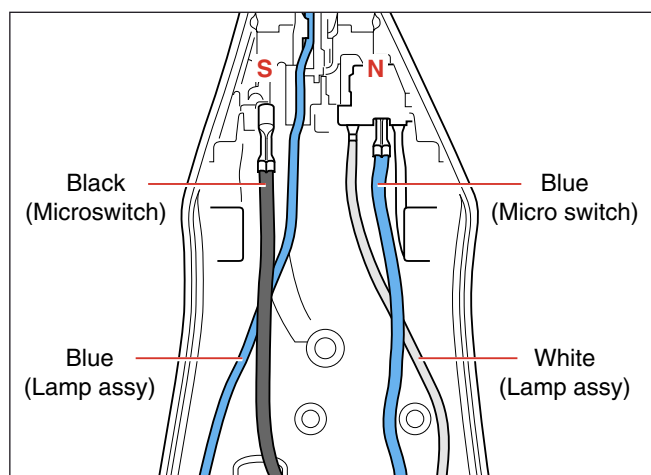


Fig 2. Wiring at rear HOUSING (Part 2)

INLAY 4**STEAM LOCK 6****LAMP ASSY 7****MICROSWITCH ASSY 9****SWITCH HOLDER 10****PIVOT HOLDER 11****TRIGGER 12****THERMOSTAT DIAL ASSY 14****HOUSING PRINTED 16****SOLEPLATE COVER 17****THERMOSTAT BUSH 19****RUBBER HOSE 25****BRASS JOINT 21****SOLEPLATE ASSY 23**

- Remove Screw A
- Disassemble **BACKPLATE 1**
- Release Inlay rear catch
- Disassemble **INLAY 4**
- Disassemble **STEAM LOCK 6**
- Disassemble **SWITCH HOLDER 10**
- Disassemble **MICROSWITCH ASSY 9**
- Remove Screw C
- Disassemble **PIVOT HOLDER 11**
- Disassemble **TRIGGER 12**
- Disassemble **THERMOSTAT DIAL 14**

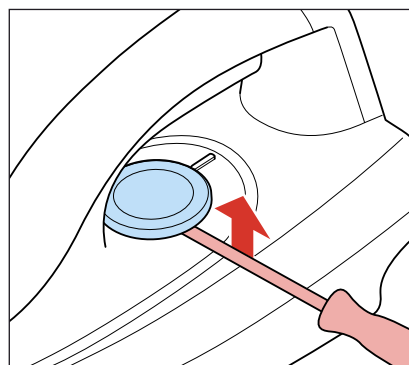


Fig 3.

- Remove Screws D1, D2, D3
- Disassemble **HOUSING PRINTED 16**
- Remove Screws E1, E2, E3
- Disassemble **SOLEPLATE COVER 17**
- Remove Hose clip (b)
- Disassemble **RUBBER HOSE 25**

Pos	Service code	Description
1	4239 026 24160	Backplate (Purple)
3	4239 021 37391	Hose cord mounted assy
4	4239 026 34880	Inlay SOS
5	4239 026 08280	Lamp cover
6	4239 026 21820	Steam lock
7	4239 021 36861	Lamp mounted assy
9	4239 021 31790	Microswitch assy
10	4239 026 21780	Switch holder
11	4239 026 21790	Pivot holder
12	4239 026 21800	Trigger
13	4239 010 09290	Trigger spring
14	4239 021 35310	Thermostat dial assy (Purple)
16	4239 021 51430	Housing printed
17	4239 021 32870	Soleplate cover painted
18	4239 015 70150	Ryton ring
19	4239 026 13220	Thermostat bush
22	4239 010 10280	Hose clip - braided rubber hose
23	4239 021 41330	Soleplate assy 230 V (Steamglide-SOS)
24	4239 015 56120	Rubber hose (SOS)
25	4239 015 56510	Rubber hose (dosing)
26	4239 026 24180	SOS knob (Purple)
27	4239 021 31780	Steam deviator assy
28	4239 010 10110	Hose clip



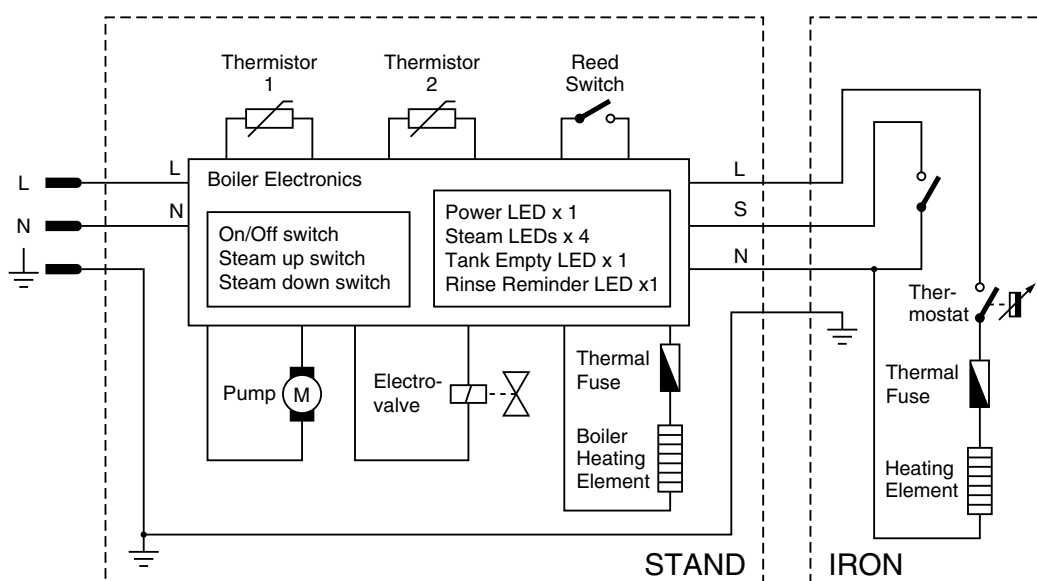


Fig 4 . Electrical diagram

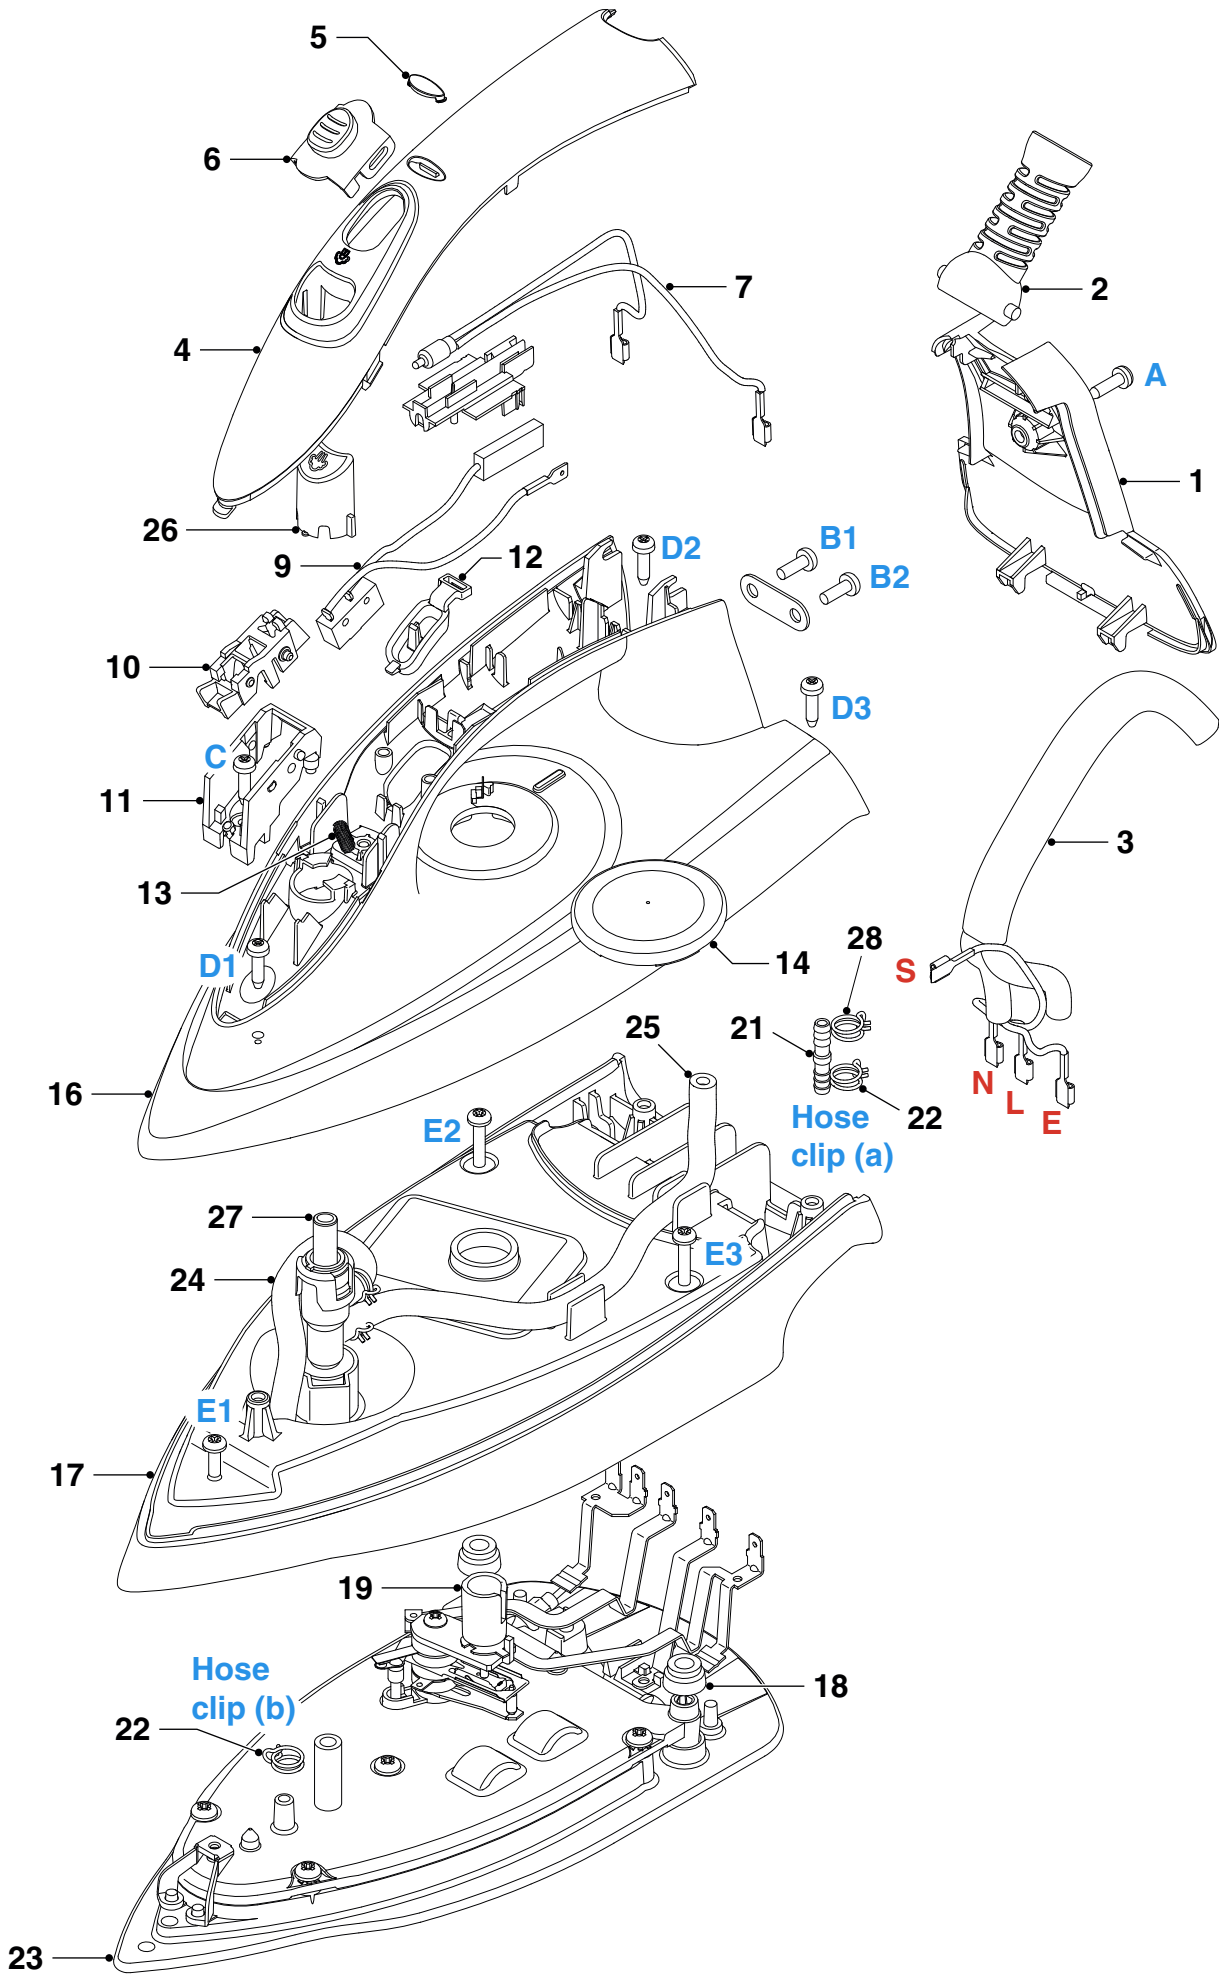

TRAY RUBBER (MAIN) 30
TRAY 33
STAND TOP 34
FRONT PANEL PRINTED 37
BOILER ASSY EE 38
ELECTROVALVE 40
POWER BOARD 43
CONTROL BOARD 44
PUMP ASSY 45
INLET TUBE 46
DE-AIR TUBE 47
RINSE RUBBER COUPLING 50
RINSE BUSH 51
SAFETY CAP ASSY 52
REED SWITCH ASSY 53


Remove	WATER TANK ASSY 70
Remove	TRAY RUBBER (MAIN) 30 (3x)
Remove	Screws J1, J2, J3
Disassemble	TRAY 33
Remove	Screws K1, K2, K3, K4
Disconnect	INLET TUBE 46
Disconnect	DE-AIR TUBE 47
Remove	SAFETY CAP ASSY 52
Remove	RINSE BUSH 51
Remove	RINSE RUBBER COUPLING 50
Disassemble	STAND TOP 34
Remove	Screws L1, L2
Disassemble	FRONT PANEL PRINTED 37

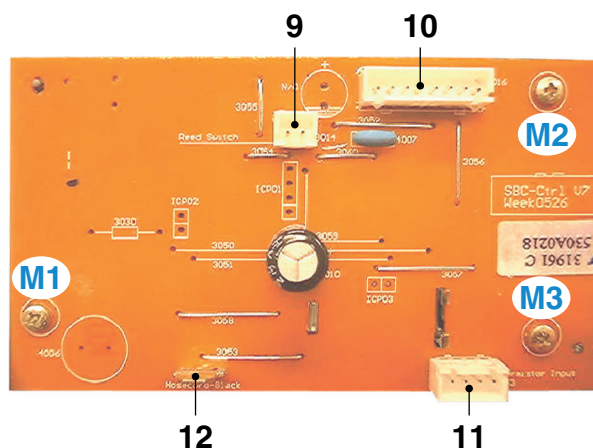

Pos.	Connected to	Pos.	Connected to
9	Reed switch	11	Thermistor
10	Power board	12	Hosecord (Black)

Fig 5. Connections on CONTROL BOARD 44

Remove	Connections 9, 10, 11, 12 (Fig 5)
Remove	Screws M1, M2, M3 (Fig 5)
Disassemble	CONTROL BOARD 44

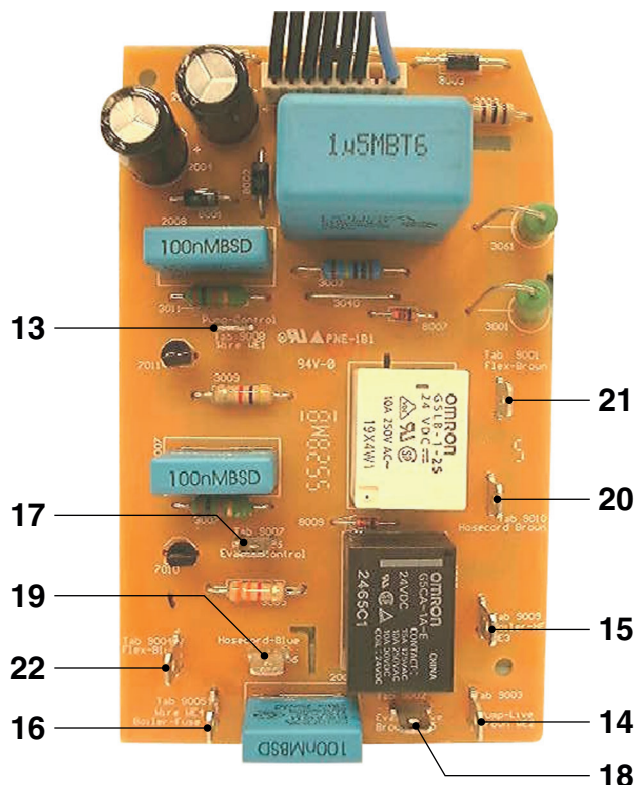

Pos.	Connected to	Pos.	Connected to
13	Pump-Control	18	Electrovalve-Live
14	Pump-Live (Brown)	19	Hosecord (Blue)
15	Boiler-Heating Element	20	Hosecord (Brown)
16	Boiler-Fuse	21	Cordset (Brown)
17	Electrovalve-Control	22	Cordset (Blue)

Fig 6. Connections on POWER BOARD 43

WATER TANK ASSY 70
TANK WASHER
TANK COUPLING
TANK LEVER
PICK UP TUBE
FILTER ASSY

Remove	Screws N1
Disassemble	TANK WASHER
Remove	SCREWS N2, N3
Disassemble	TANK COUPLING

Pos	Service code	Description
30	4239 015 56010	Tray rubber (Main)
31	4239 015 56030	Tray rubber (Rear)
33	4239 010 11380	Tray
34	4239 021 44051	Stand top assy (White)
35	4239 026 21930	Nipple plate
37	4239 022 56500	Front panel printed
38	4239 021 43800	Boiler assy EE
39	4239 026 22280	C-Wall
40	4239 017 10901	Electrovalve
41	4239 015 56160	Braided rubber hose
42	4239 010 10260	Inox clamp
43	4239 021 31970	Power board
44	4239 021 56881	Control board
45	4239 021 32480	Pump assy
48	4239 015 55980	Boiler rubber support A
49	4239 015 55990	Boiler rubber support B

Pos	Service code	Description
50	4239 015 56050	Rinse rubber coupling
51	4239 026 22330	Rinse bush
52	4239 022 62500	Safety cap assy
53	4239 021 31820	Reed switch assy
54	4239 026 22050	Reed switch holder
55	4239 000 09780	Cordset EU
	4239 000 09910	Cordset UK
	4239 000 09880	Cordset Swiss
56	4239 021 37631	Stand bottom assy
59	4239 015 56000	Power button cap (Silver)
60	4239 026 22410	Power button frame
61	4239 026 22420	Steam button frame
62	4239 026 22000	Light guide (ring)
63	4239 026 22020	Light guide (Steam)
64	4239 026 22040	Light guide (TE-RR)
66	4239 010 11111	Electrovalve mesh



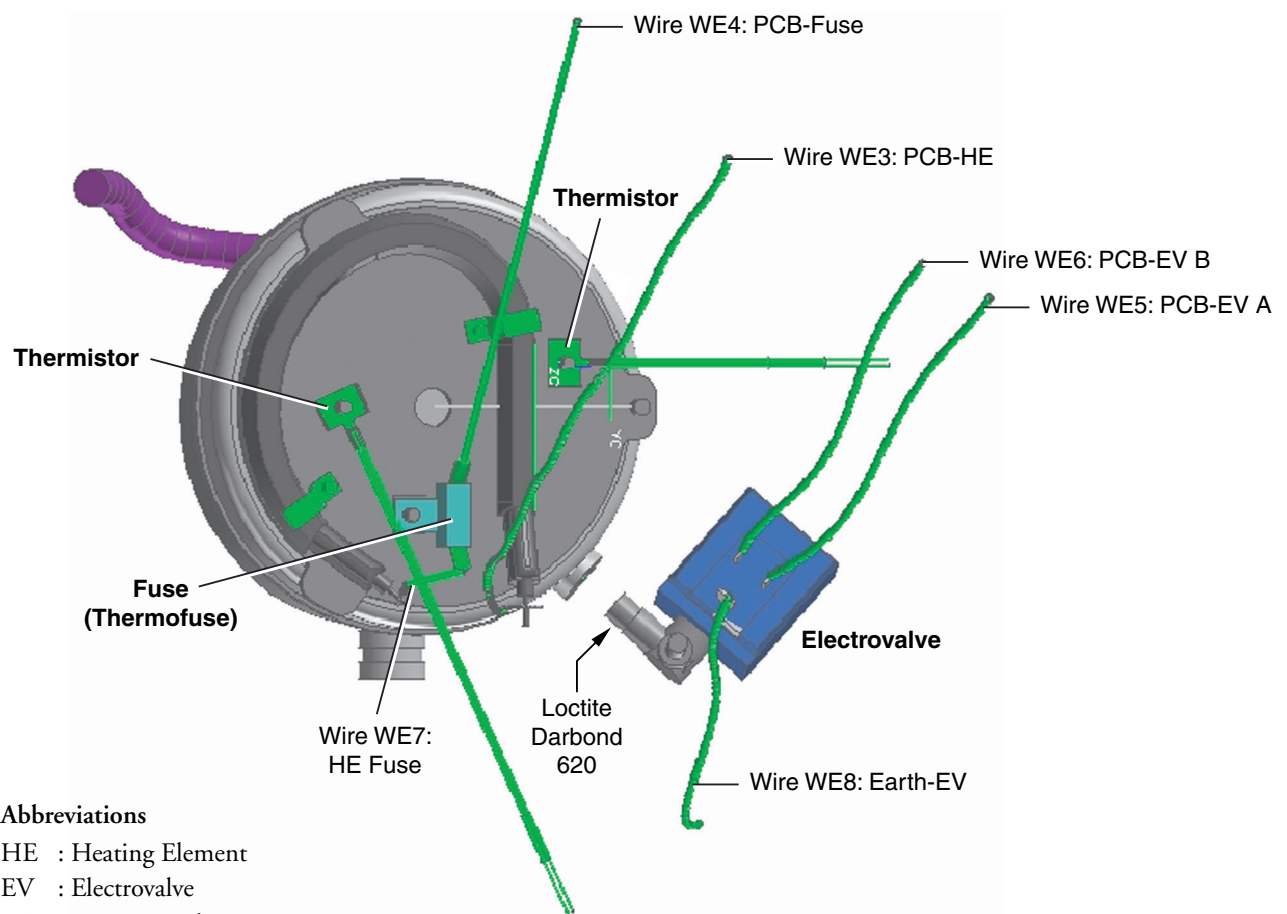


Fig 7. Boiler Assy EE - Wiring Diagram

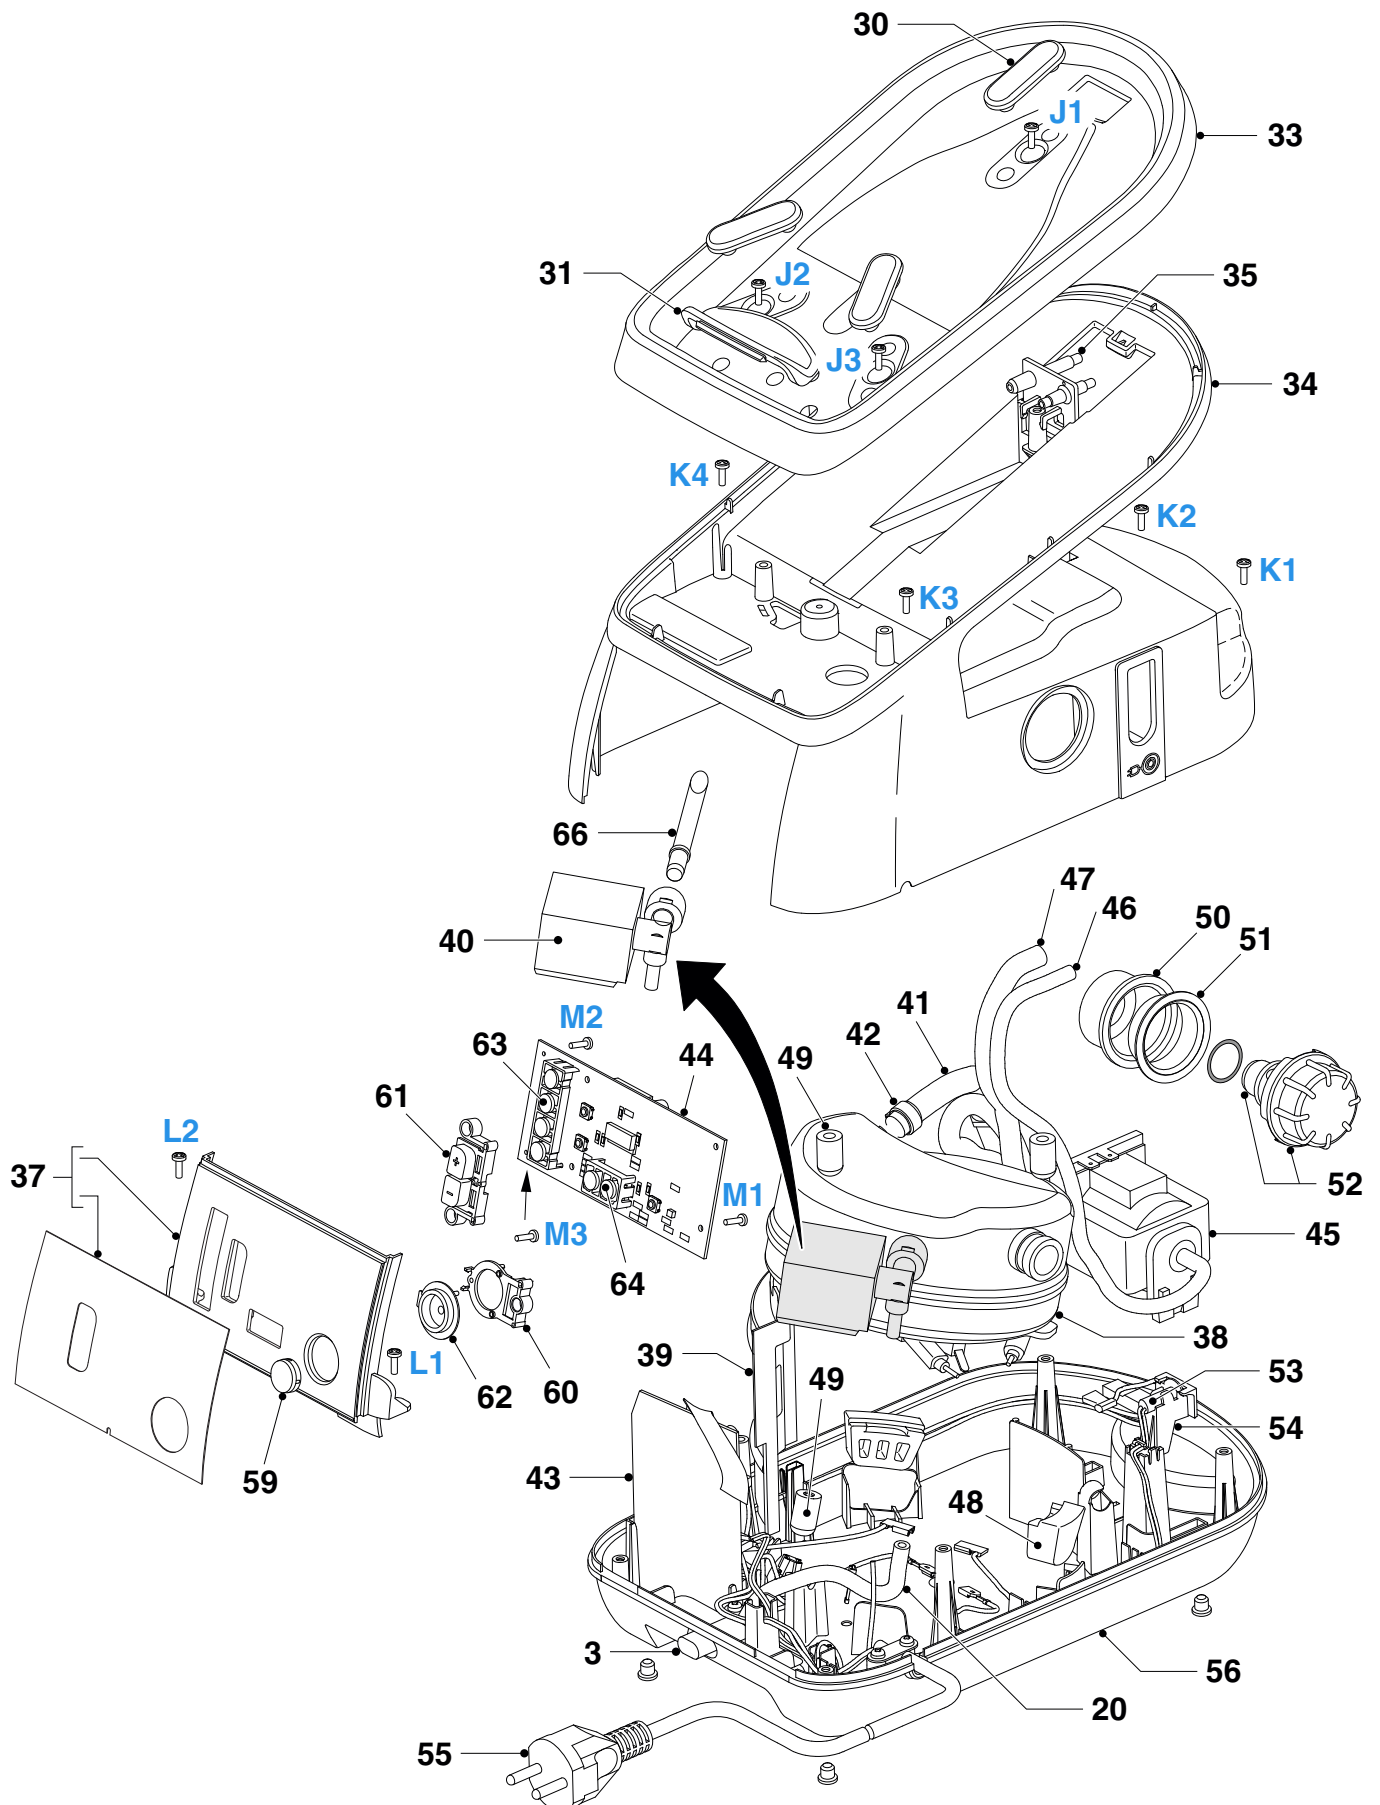

70

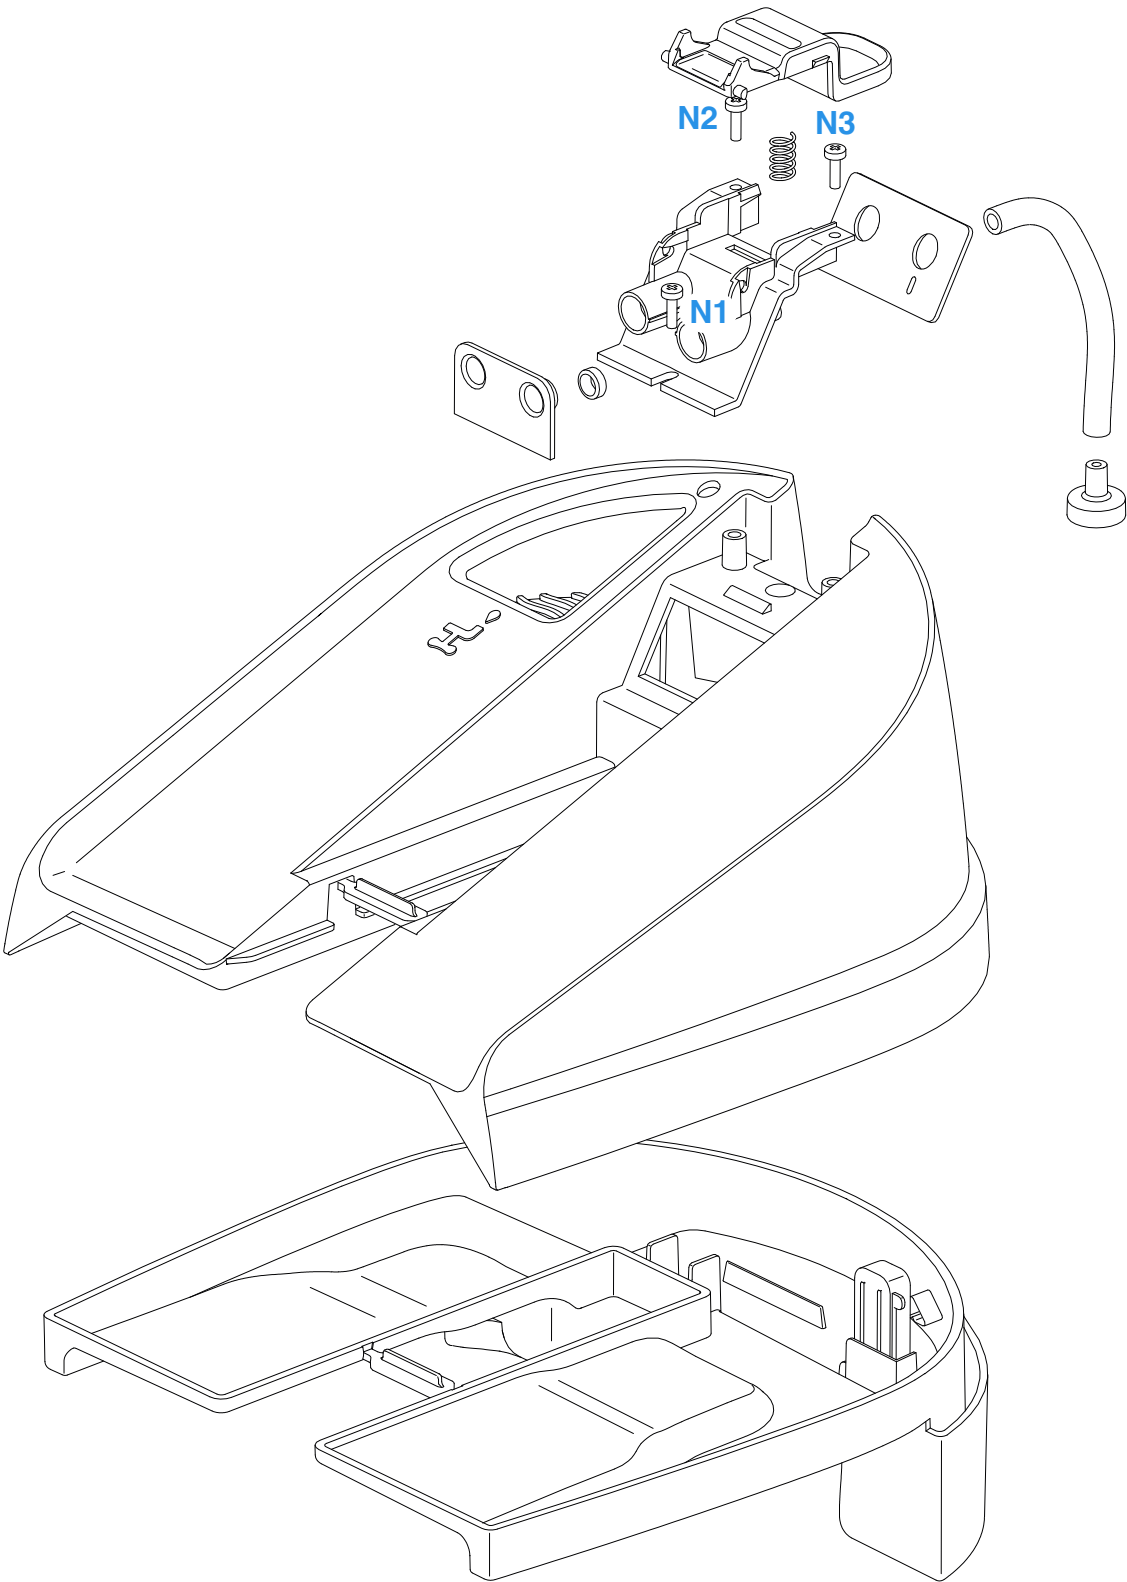


Pos	Service code	Description
70	4239 021 35320	Water tank assy (Purple)

- Due to the high wattage of the iron, only the specified cord set must be used.
- Should damage be observed on the **HOSE-CORD ASSY 3** or **CORDSET 55**, they must be replaced. Continued usage is not allowed.
- When replacing the **MICROSWITCH ASSY 9**, please dress the 2 attached wires such that they are free of tension. Pulling force on the wires may affect the steam triggering.
- To avoid damage to the sealing & components of the **BOILER ASSY 38**, **NEVER** clean the boiler assy with vinegar, descaling agent or other corrosive chemicals.
- When replacing **ELECTROVALVE 40** or **PUMP ASSY 45**, please be reminded to apply loctite at the joints for good sealing.
- After the product has been repaired, it should function properly and has to meet the safety requirements & legal regulations as laid down & officially established at this moment.
- The following tests are common checks that are conducted on a repaired product before it is returned to the consumer.

1. Soleplate temperature

Check that soleplate temperature is within IEC requirement.

Measure the temperature of the soleplate after the iron has reached steady state i.e connected to the mains for at least 15 minutes. The table below shows the temperature requirement.

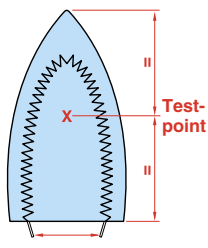Marking	Soleplate temperature (Deg C)			Material, for example	
	Minimum	Maximum	Nominal + Tolerance		
• (1 dot)	70	120	95 ± 25	Acetate, elastane, polyamide, polypropylene	
•• (2 dots)	100	160	130 ± 30	Cupro, polyester, silk, triacetate, viscose, wool	
••• (3 dots)	140	210	175 ± 35	Cotton, linen	

2. Leakage current

Check that leakage current is within IEC requirement.

Measure leakage current between LIVE/NEUTRAL & EARTH.

IEC requirement is that at 230 V supply, the EARTH leakage current must be less than 0.75 mA.

3. Water leakage / Functionality

Check that there is no water leakage from any part of the product during operation.

Check that the functionality of the product (product dependent) eg. steaming, variable steam, SOS, ASO etc is working properly.

4. Loose part

Check that there are no loose parts eg. extra screw in the product that can cause short-circuit or product malfunction.