



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Colour : Pearl Beige/Vivid Green
- Power consumption : 1250 W (IEC) 230 V
- Maximum Air displacement : 39 l/s
- Vacuum : 28 kPa
- Duststorage capacity : 3 L
- Cord length : 8 m
- Filter system : Classic S-Baglong performance
: 3 layer permanent motor protection filter
: Ultra clean air washable HEPA13 exhaust filter
- Net weight : 7.5 kg



ACCESSORIES

- Nozzle : Tri-Active all purpose nozzle
- Additional Nozzle : Super Parquet nozzle
- Tubes : Metal lacquered telescopic tube
- Handgrip : Ergonomic handgrip
- Accessories : Brush, crevice nozzle and small nozzle
- Accessory storage : Active accessory holder in tube
- Coupling : Button coupling


OPTIONAL (accessories)

- FC8021 : S-bag Classic
- FC8022 : S-bag Clinic
- FC8023 : S-bag Anti-Odour
- FC8038 : Ultra clean air washable HEPA13 exhaust filter


- To open the appliance, first remove the exhaust filter cover and filter.
- Remove the hinge lock-pin (see pictures).

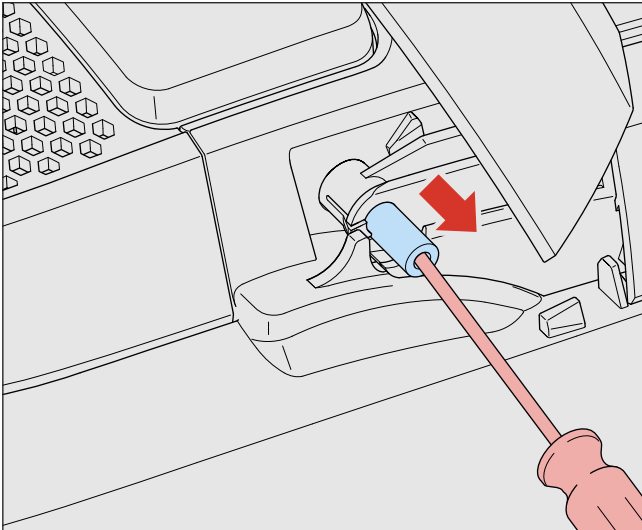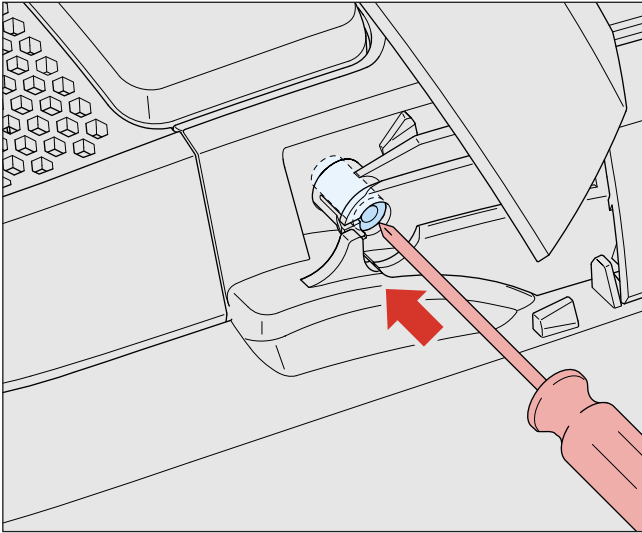

- Remove the dustcover by simultaneously pushing the click hook in the hinge and bending the hinge outside with a screwdriver (see picture).

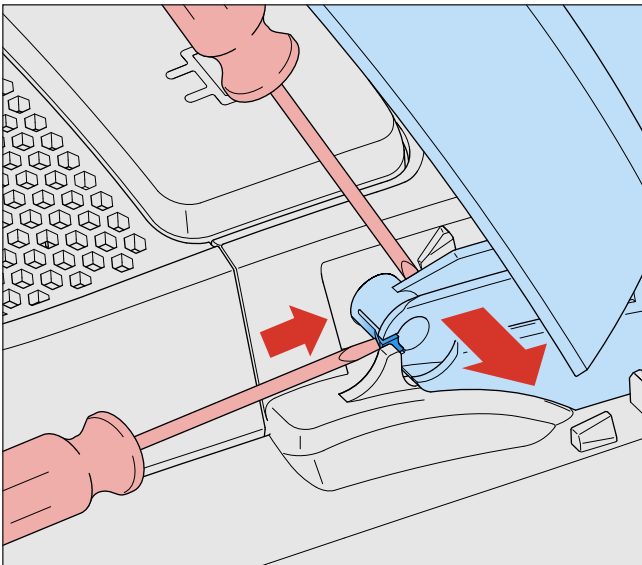

- To be able to remove the upper housing the cord outlet must be removed using a screwdriver in the lower section (see picture).

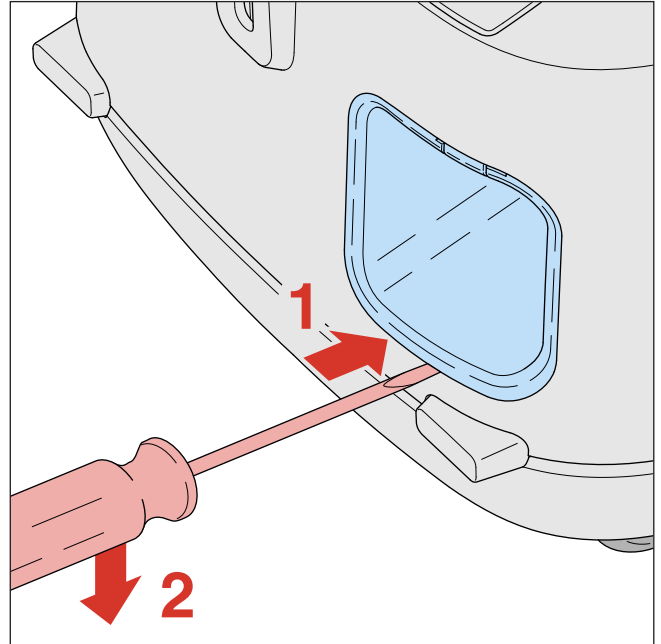

- After removing the 6 screws (A) the upper housing can be removed.
- When the repair is finished, check whether all functions of the appliance work properly.
- To disassemble the cord winder, use TORX screwdriver no. T10, which is one of a set consisting of T20; T15; T10; T9; T8; T7 and T6 (code number 4822 395 50145).

REPAIR INSTRUCTION

- The spare parts have been standardized as much as possible.
- Depending on the original cord, the spare cord must be shortened to the length of the original cord.
- The cord winder spring must be tensioned to the maximum level and then be rewound approx. 1.5 turn.
- Item 16, safety valve, opens to cool the motor if the air displacement is too low or if the airflow is blocked.
- To prevent the switch getting damaged by too much force, a protective ring (pos. 55) was added in the later versions. If this part is missing it must still be placed as modification!


 = changed


Pos	Service code	Description
1	4222 459 45586	Hinge pin
2	4222 459 45637	Dustcover assy FC9088 Beige
3	4222 459 45583	Dustbag detector incl. spring
4	4222 459 45578	Dustbagholder Vapour dusk
5	4222 459 45585	Handle assy White
6	4222 459 45579	Exhaust grille Beige
7	4322 004 93350	HEPA filter
8	4222 459 45638	Cord outlet Vivid green
9	4222 459 45581	HEPA lock grille Beige
10	4322 001 74110	Exhaust seal
11	4222 459 45605	Support right Beige
12	4222 459 45604	Support left Beige
13	4222 459 45592	Control wheel ring Chrome
14	4822 480 10228	Inlet filter
15	4322 003 33280	Inlet grille
16	4322 005 16990	DBFI/valve assy
17	4222 459 45595	Brake lever
18	4222 459 45640	CW button Pastel green
19	4222 459 45639	On/Off button Pastel green
20	4222 459 45641	Control wheel Vivid green
21	4222 459 45589	Switch lever
22	4322 006 23880	PCB assy Pilatus HV
23	4222 459 45590	Pedal spring
24	4222 459 45593	Backpanel/Dustchamber
25	4222 459 45594	Silencer 3
26	4222 459 45606	Motor housing top
27	4322 001 73440	Bufferring front
28	4322 009 09960	Motor Domel 1271 220-240 V


Pos	Service code	Description
29	4222 459 45607	Silencer 4
30	4222 459 45608	Motor bracket
31	4322 001 73450	Buffer back
32	4222 459 45609	Motor housing bottom
33	4222 459 45598	Front handle inside White
34	4222 459 45599	Front handle outside White
35	4322 009 00080	Cordwinder no cord!
36	4322 005 26610	Contact plate
37	4222 459 45596	Rubber knee bend dustchamber
38	4222 459 45603	Casterwheel kit Beige
39*	4322 006 07390	Cordset Euro 4.8 mm 9 m
40	4322 006 07400	Cordset Swiss 9 m
41	4222 459 45602	S-Class sealing
42	4222 459 45601	Silencer 2
43	4222 459 45600	Silencer 1
44	4222 459 45597	Lower housing Beige
45	4222 459 45642	Bend type 5/hose/connection assy Beige
46	4322 005 27980	Accessory holder Beige
47	4322 005 27930	2p telescopic tube act. bush Beige
48	4322 003 35550	Crevice nozzle Beige
49	4322 005 27970	Small nozzle Beige
50	4322 004 20860	Brush nozzle Beige
51	4322 004 20330	Tri-active nozzle Beige
52	4322 004 20110	Super parquet nozzle
53	4322 005 11040	Polishing disk
54	8838 041 01010	Polishing brushes
55	4222 459 48641	Protective switch ring


* Standardized colour

ELECTRICAL DIAGRAM

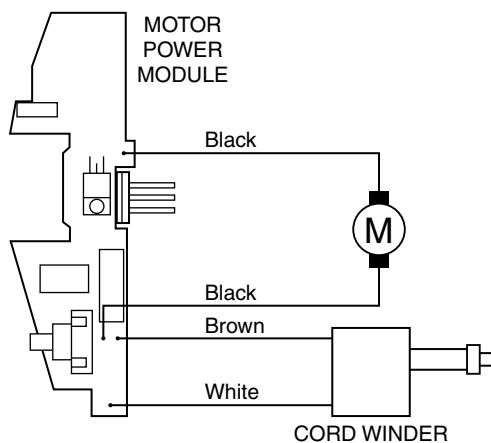

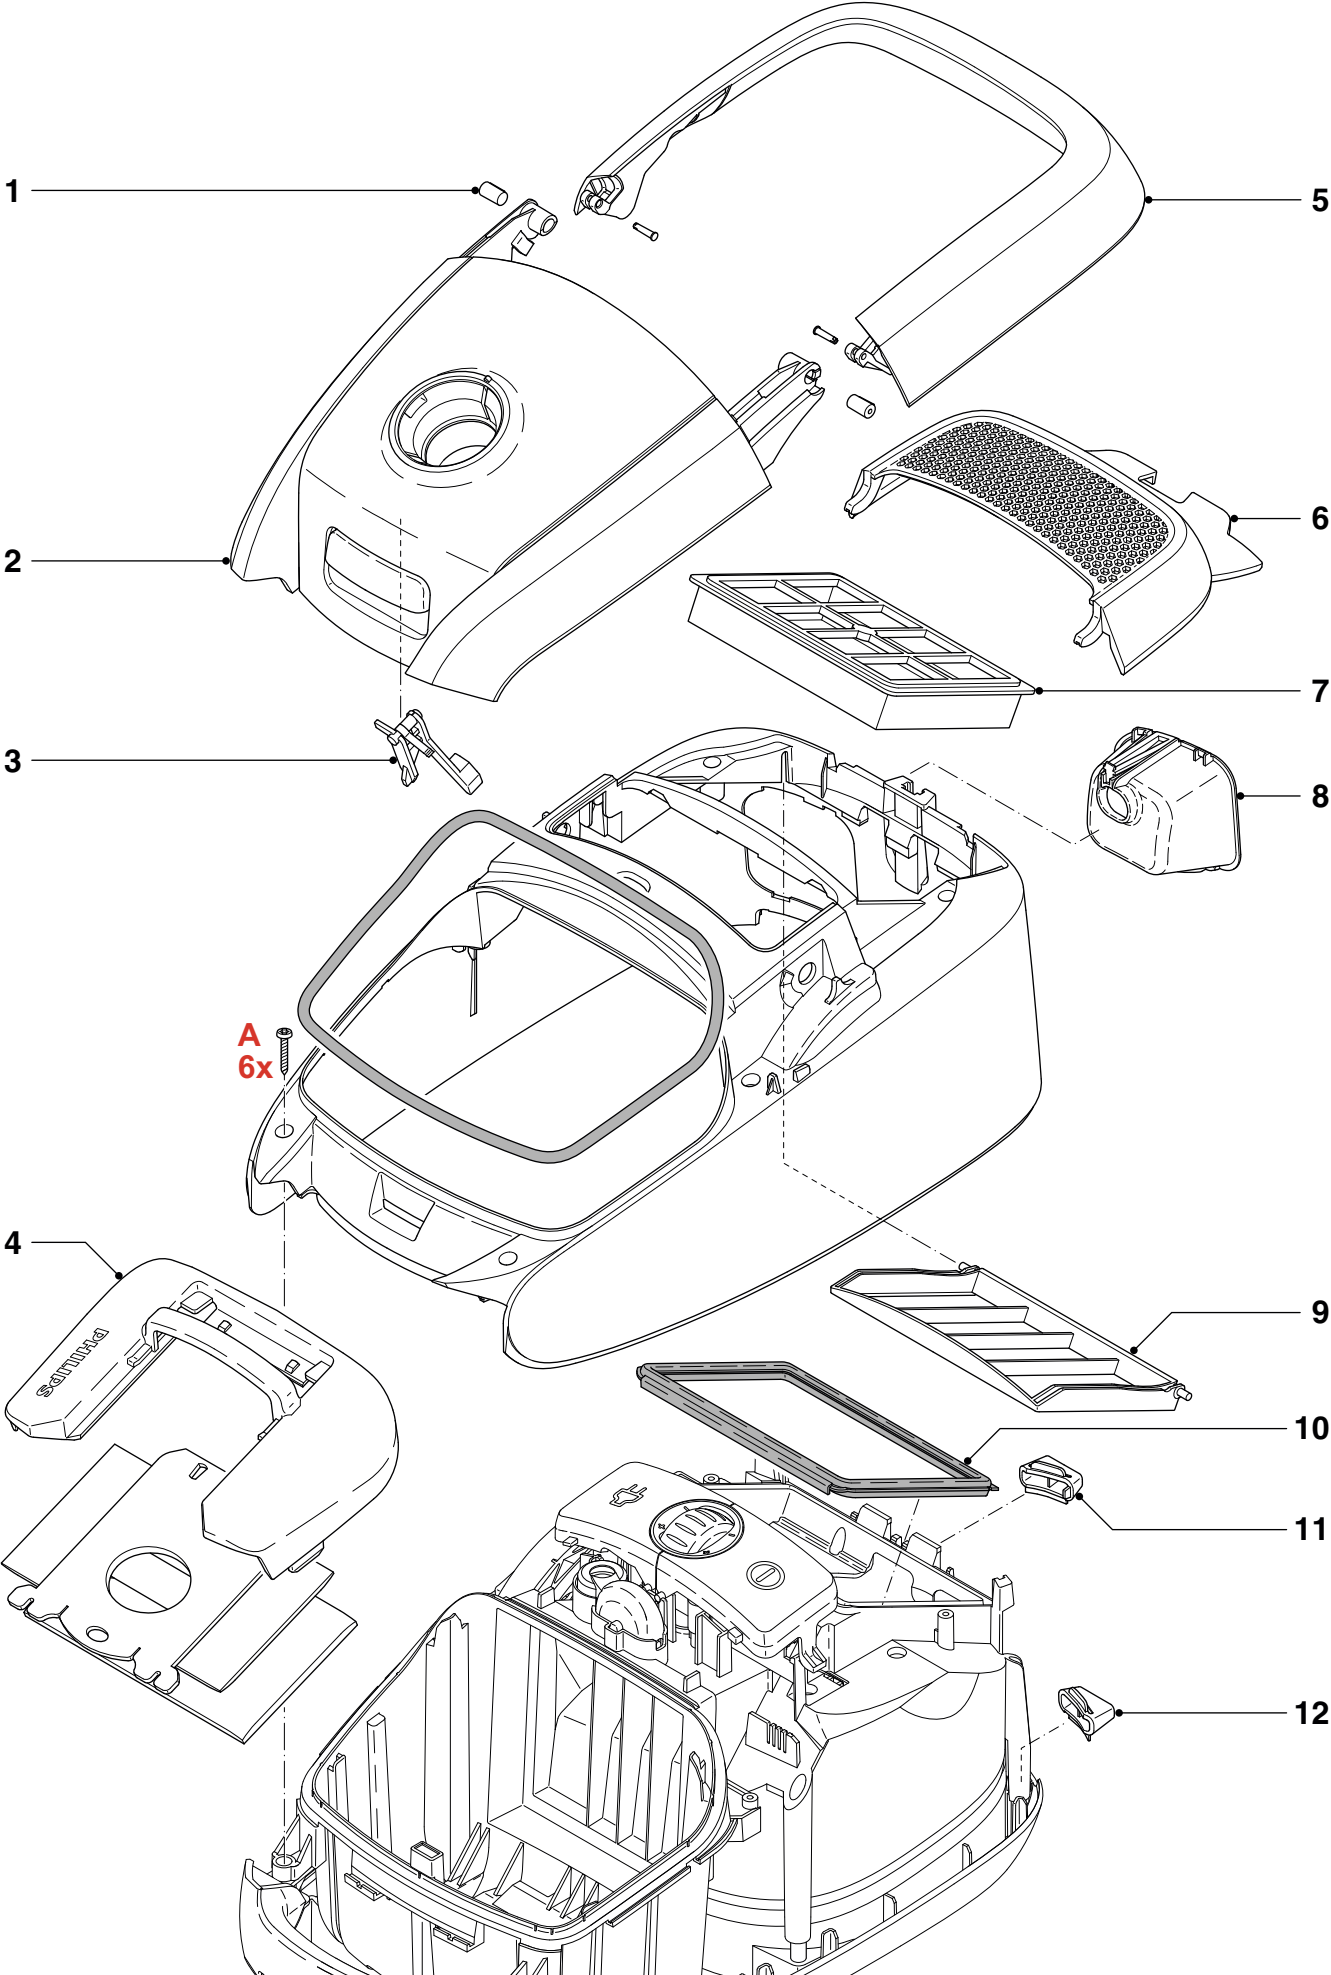

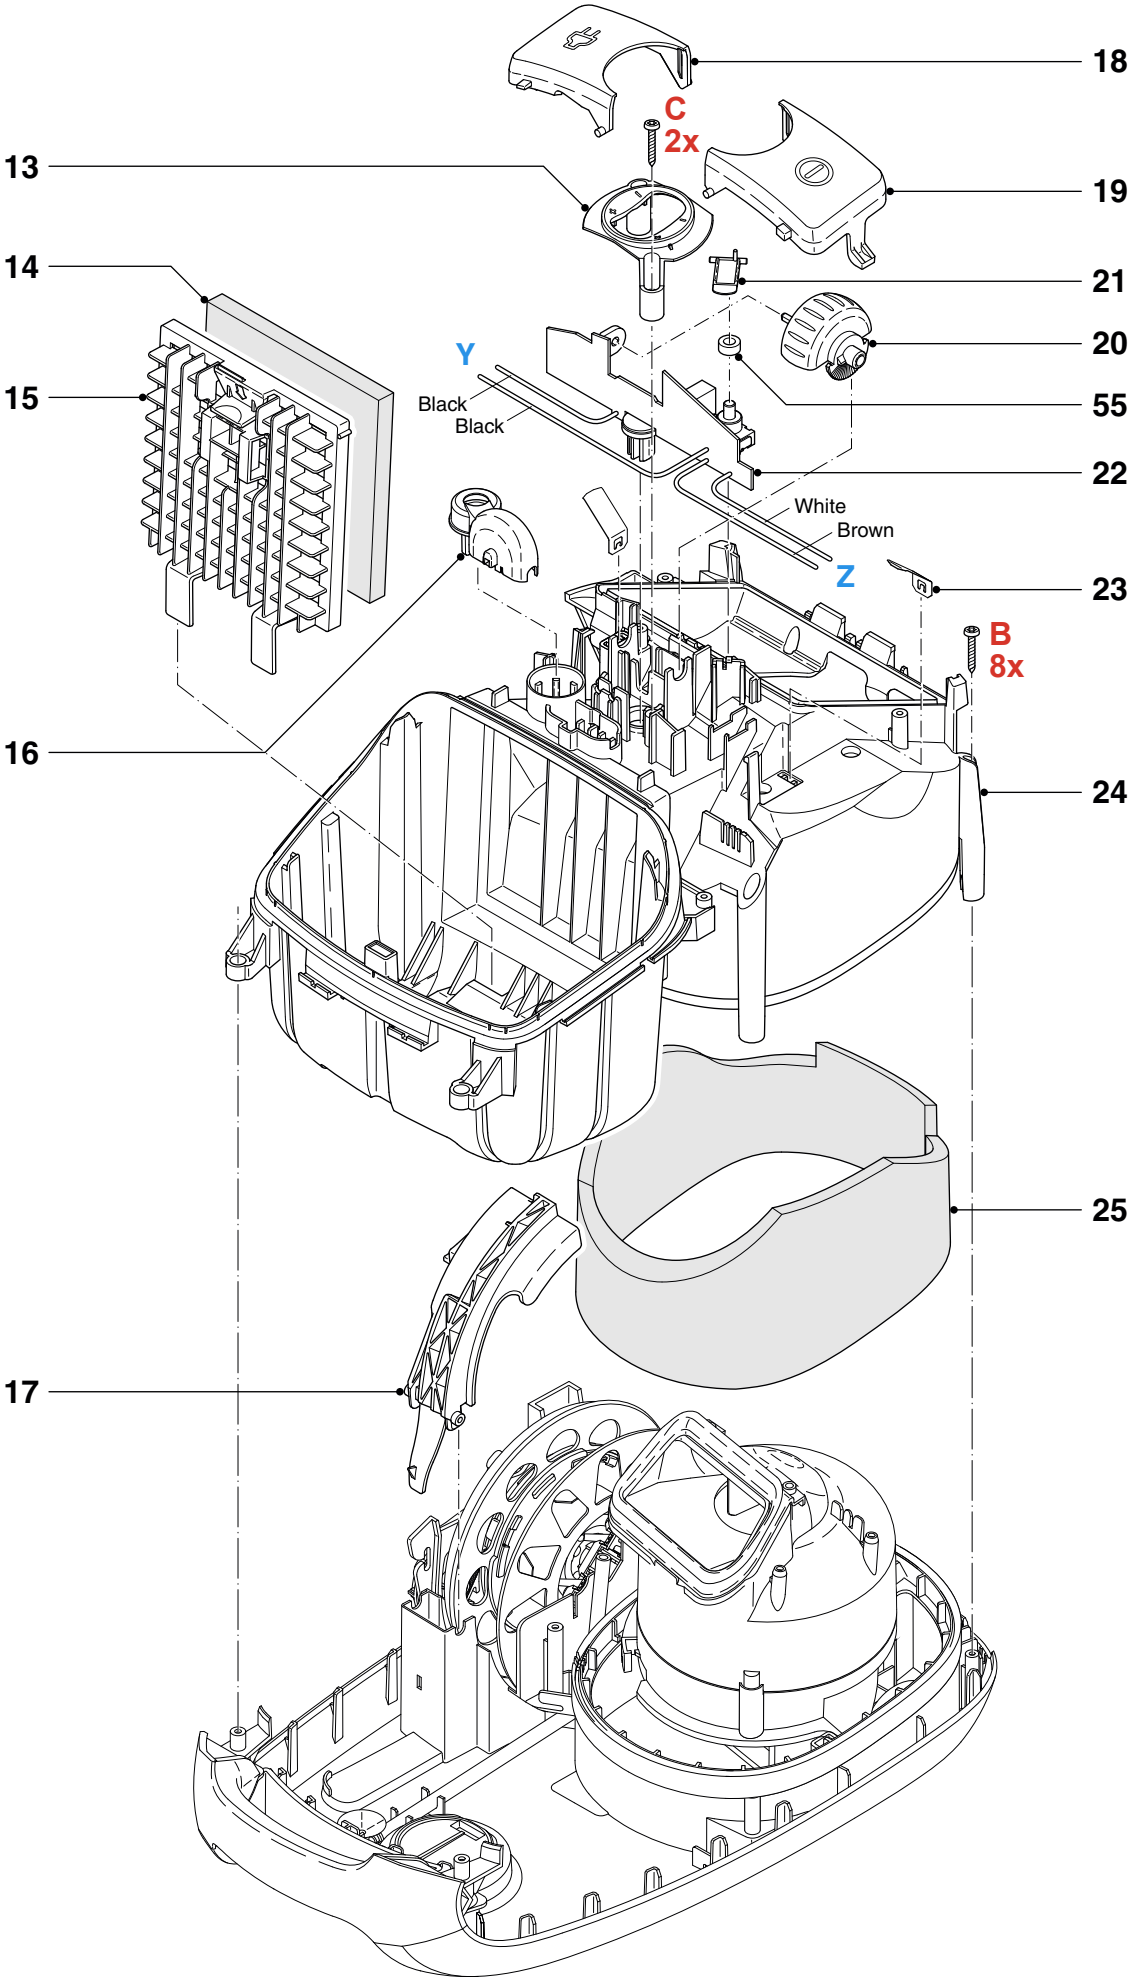

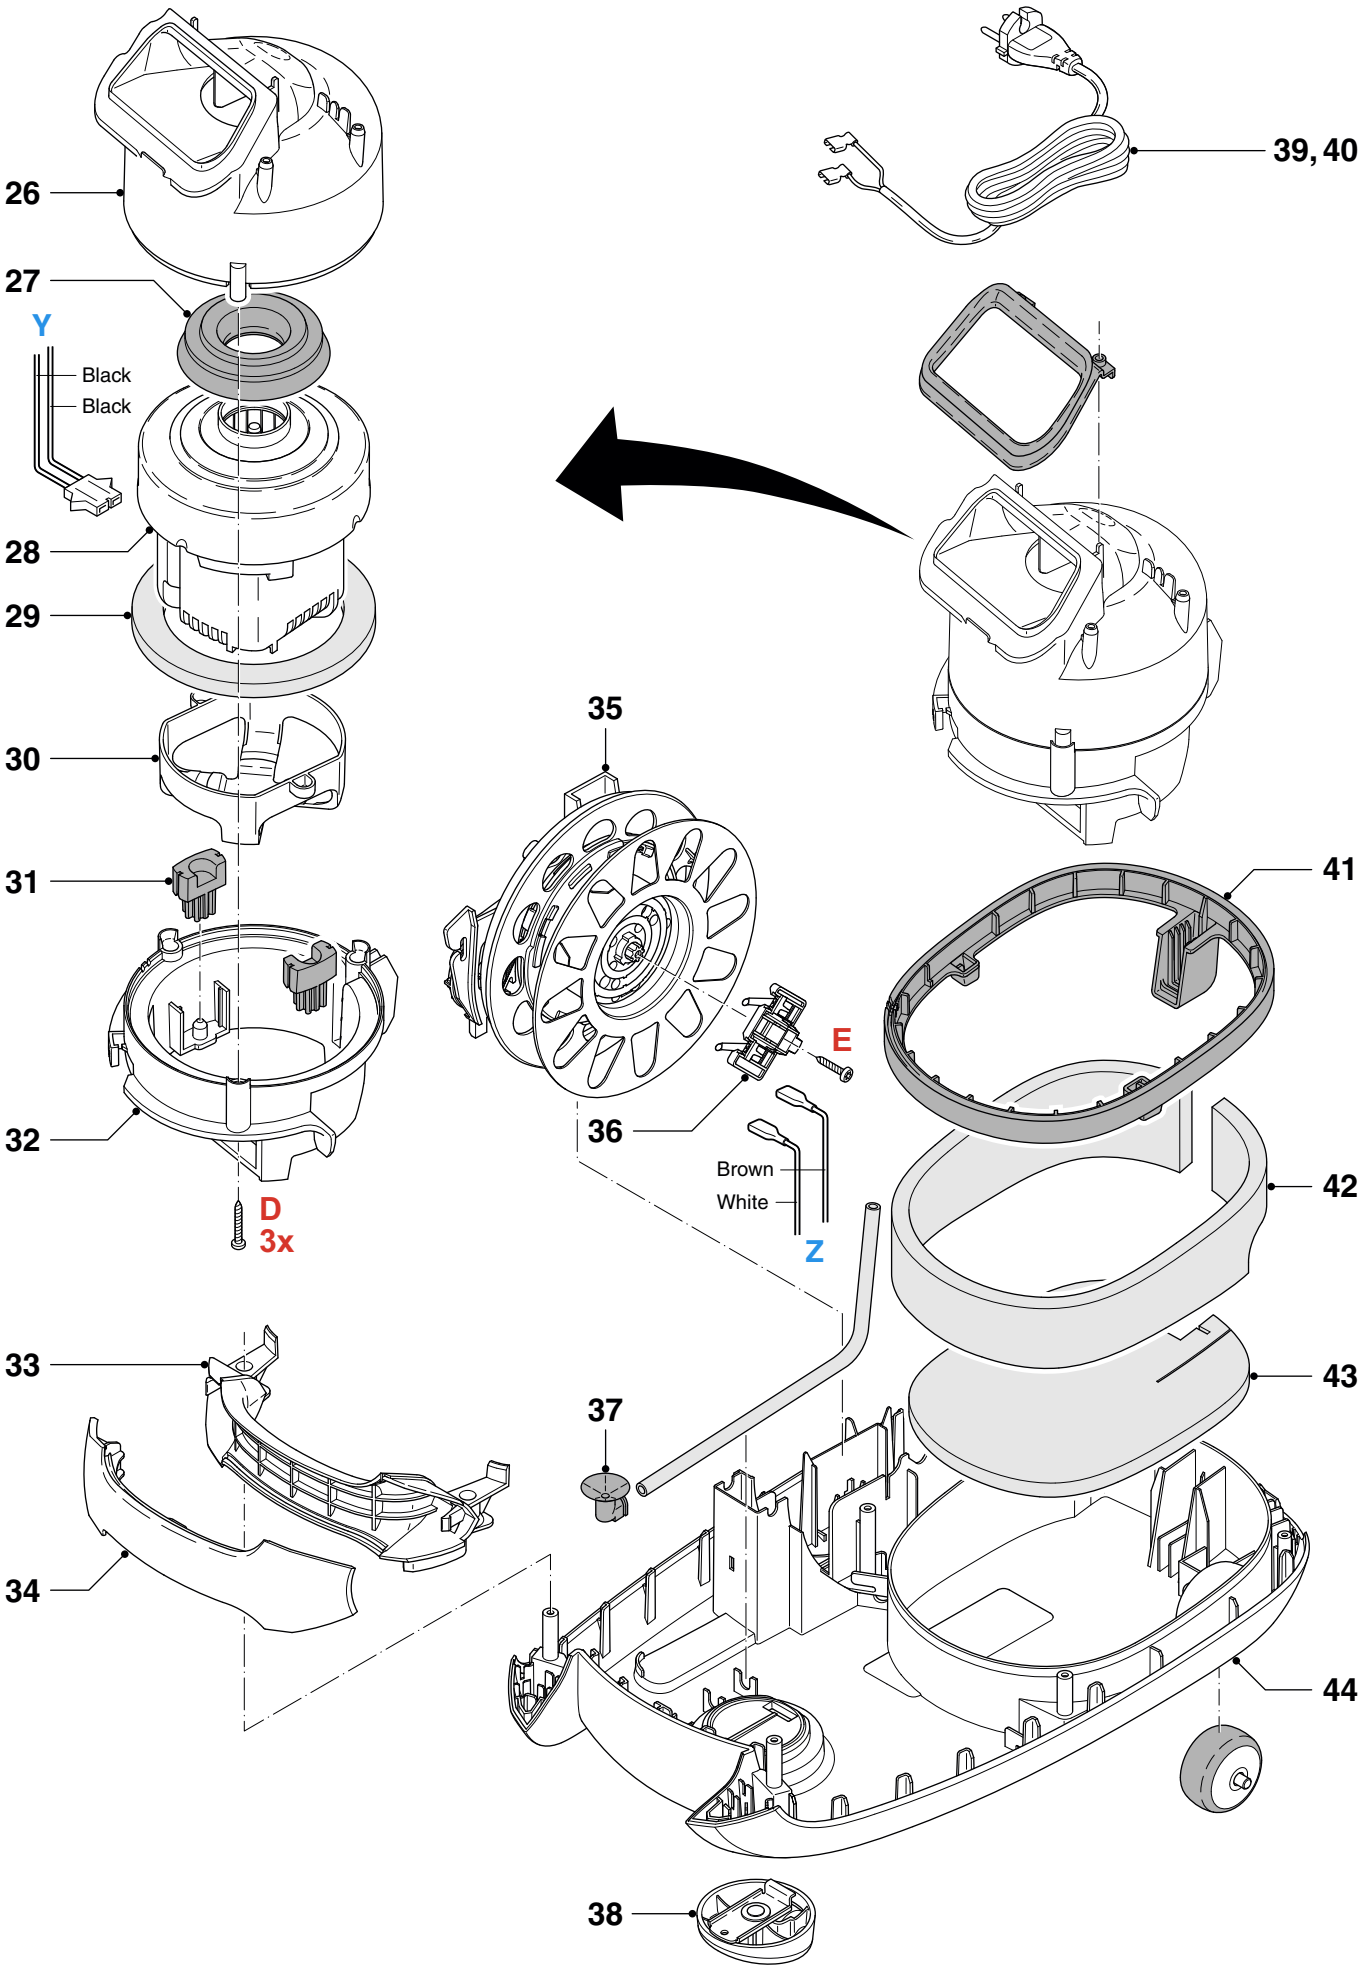

EXPLODED VIEW

FC9088

