



Service information

Reference no.: SDA_111053


Symptom

New SW for GranBaristo Avanti, Mid and Base.

Cure

INFO:

To avoid breaking of the tube, as shown in Image 01, a new SW has been released. It was decreased the time in the pre-load of the products, to reduce the excessive pressure generated in the hydraulic circuit, maintaining the amount of doses of the product unchanged.
Image01

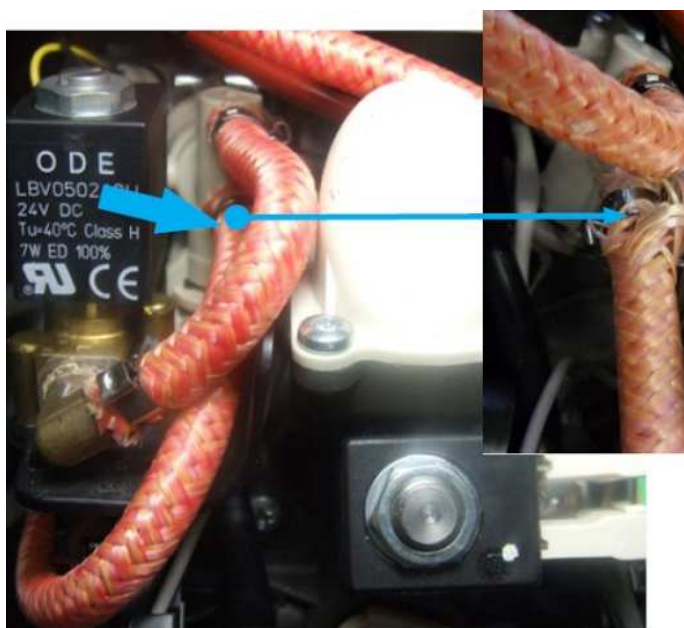

CURE:

Up to s.n. TU9015240068963 inserted the new SW
Gran Baristo AVANTI SW.06.03.10
Gran Baristo MID SW.02.07.10
Gran Baristo BASE SW.01.07.10

ADDITIONAL INFORMATION:

SERIAL NUMBER (First serial where solution has been implemented in production):

Up to s.n. TU9015240068963

IPM NUMBER (Philips Integrate Problem Management documentation reference number):

None.

FAQ NUMBER (for Call Center reference):

None.

INFORMATION FOR CALL CENTER:

None.

INFORMATION FOR CONSUMER:

None.

HISTORY:

29/07/2015 - First Release