



Service information

Reference no.: SDA_92449


Symptom

The coffee is dispensed drop by drop in Lavazza a Modo Mio

Cure

INFO:
coffee is dispensed drop by drop in Lavazza a Modo Mio.

CURE:
To solve this issue, please follow these procedures:
Machines with serial number up to 9011sc10274241: if the drilling support (image 01 pos. 05) is "old", replace it with the new (image 02, old model is transparent color - new model is beige color) and, replace also the pump.
Machines with serial number from to 9011sc10274241: replace the pump.

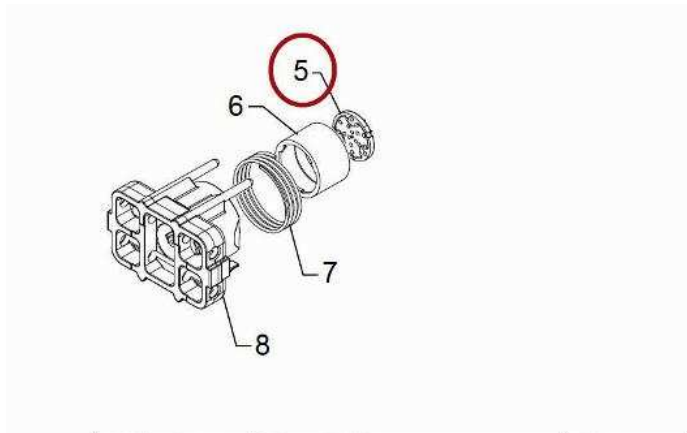

POS	CODE	DESCRIPTION	NOTE
01	11020017	L-F-BRASS BLK MEC.MOVE CHAMBER.P004 ASSY	
02	20000940	KIT SPARES BLACK CRANK MECH.MOVING P604	
03	11007486	ZAMA PIN FOR HANDLE MECH.P604	
04	12000850	LOCKING SHAFT RING D=8 UNI 7434	
05	11014278	SUPPORTO FORATORE PEEK LB2-LB5 LB4000	
06	11007467	BLACK RING FOR FIX CHAMBER MECH.P604	
07	11007490	SPRING FOR RING FIX CHAMBER MECH.P604	
08	11007466	BLACK FIX CHAMBER FOR MECH.P604	

