



Service information

Reference no.: SDA_96591

Symptom

Instruction for assembly of pwr board in Xelsis-Exprelia-Energica and Accademia machines

Cure

INFO:

Possible wrong connection of the flat cable on the pwr board in Xelsis-Exprelia-Energica-Accademia machines.

CURE:

The pwr board cod.11024263 has two different connections for flat cable: one for Xelsis - Accademia machines and one for Exprelia - Energica machines (see image 1).

- 1) When replacing the pwr board in the Xelsis and Accademia machines insert the flat cable as indicated in Image 2.
- 2) When replacing the pwr board in the Exprelia and Energica machines insert the flat cable as indicated in image 3.

Image 1

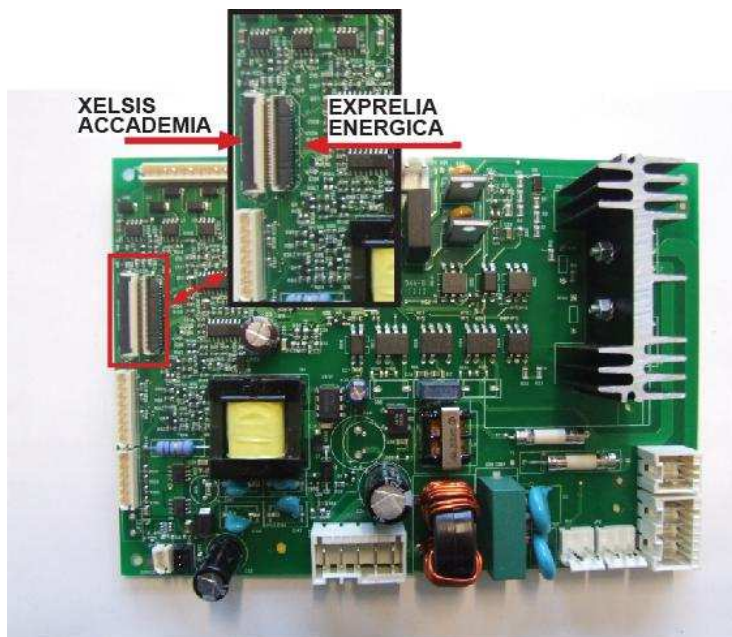


Image 2



Image 3

