Satinelle - ICE HP6481/00





Philips Consumer Lifestyle

ServiceManual

PRODUCT INFORMATION

The new Satin Ice combinates a new ceramic epilating system with a contour following skin cooler and a massaging system.

Safety

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Power Source		:	AC (mains)
- Voltage			100 V - 240 V
U			(50 - 60 Hz)
- Motor		:	DC - Motor 14 V
- Power Cor	nsumption	:	7,5 W
- Number o	f Discs	:	13
- Number o	f catching points	:	24
- RPM sp	oeed I	:	2200
sr	oeed II	:	2700
- Pulling act	ions/second		
sp	oeed I	:	880
sp	oeed II	:	1080
-			

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues.

REPAIR INSTRUCTION

- This is a replacement appliance. For this Epilator only the parts shown in the exploded view will be supplied.

Hints for repairs:

- No specific issues.

OPTIONAL (accessories)

- No specific issues.

PACKAGING

F-box dimensions

- Width : 192 mm
- Depth : 114 mm
- Height : 235 mm
- Weight F-box : 0.639 kg


ATTENTION:

- By ordering pos. 2 and pos. 6 see remarks in the partslist due incompatible between old and new parts.

Published by Philips Consumer Lifestyle

Subject to modification



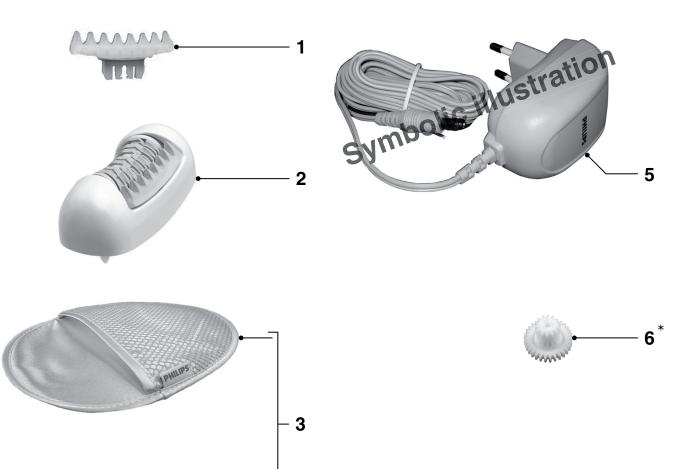

Pos	Service code	Description	
1	4203 035 53990	Massage Attachment HP6481	
2	4203 035 91701	Repair Kit (For products with production date till 744)	
	4203 035 54170	Epilation Head new (From 744 onwards)	
3	4203 035 86400	Cooling Glove + Cooling Pad	
5	4203 035 51810	Adapter WEU	
	4203 035 51900	Adapter GB	
	4203 035 51860	Adapter ARG	
	4203 035 51870	Adapter KR	
	4203 035 51850	Adapter UNI - JPN/TW/USA/CD/MX	
6*	4203 035 54180	Gearwheel 3 new (From 744 onwards)	

* For replacing the gearwheel see the instructions on the next pages.

1.0


Instruction for exchanging the Gearwheel 3

Remove the small gearing cover with a small screwdriver.


HP6481/00



Here you see the opened gearing. As you can see, the small edge from the release knob is hampering you by removing the damaged gearwheel.

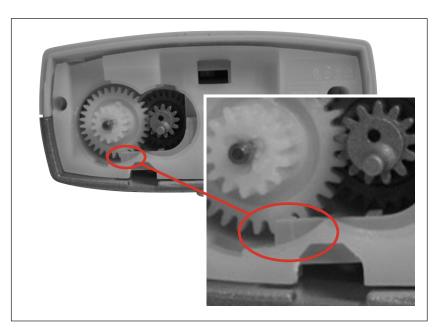


Cut this small edge with a very sharp knife, so that the damaged gearwheel becomes free.

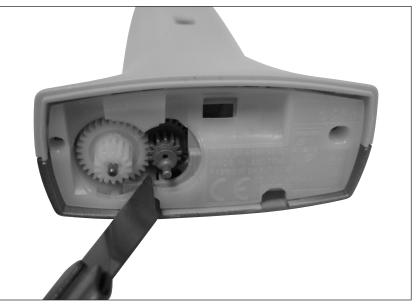

Instruction for exchanging the Gearwheel 3

Cutted edge.

HP6481/00

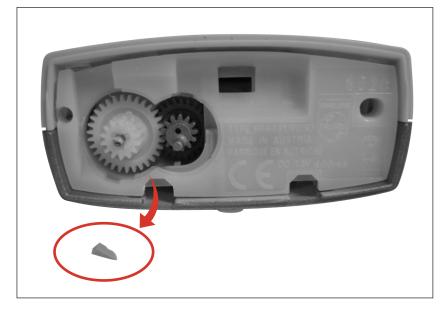

Now you are able to exchange the damaged gearwheel.



INSTRUCTION SHEET

HP6481/00

For Repair Kit 4203 035 91701

Only for products with production date till 0744.

1. Exchanging gearwheel 3 and small cover on old epilation body.

- Open the small gearing cover.
- Remove small cover and gear wheel 3.
- Exchange the 2 parts with below 12 NC's.



4203 035 90860 Small cover

4203 035 54180 Gear wheel 3 new




2. Preparing the epilating head.

 Please use:

 4203 035 54170
 Service Epi Head HP648x

 4203 024 00561
 EPI-Head



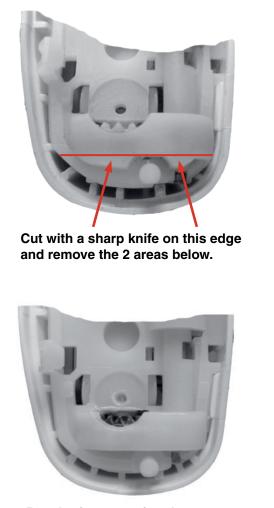

Result after removing the 2 areas.