



Service information

Reference no.: SDA_100438

Symptom

Cost Reduction in Lavazza AMM

Cure

INFO:
Move chamber doesn't work properly.

CURE:
The move chamber assy (Image 1) is not longer available, according with updated Exploded views (Image) is possible to order the singles defective components.

Attached the instruction for repair the move chamber.

Image 1


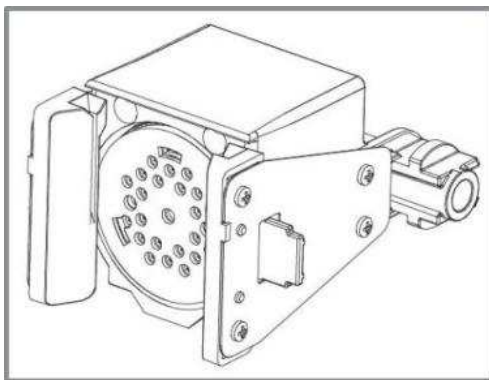


Image 2

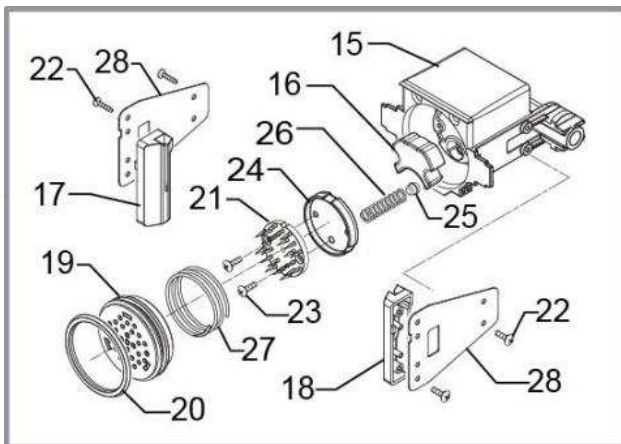

HISTORY:
05/12/2013 - Second Review: Inserted, in the instructions attached, the grease code to be used for lipseal gasket.
05/08/2013 - First Release