

Service information

Reference no.: SDA_113911_E97_G_B_HOUSINGPART

Symptom


Improved bottom housing does not fit anymore

Cure


The improved bottom housing part 996510064773 used in HD776x does not fit on top housing part 996510064758 used in HD7761 & HD7762.

CURE:

Modify(cut 2 rims, see pictures below) bottom housing part 996510064773 to make it fit again on the 996510064758 used in HD7761 &

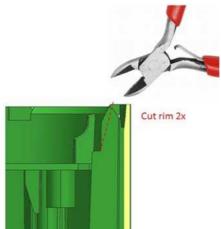

9965 100 64773 - Bottom housing

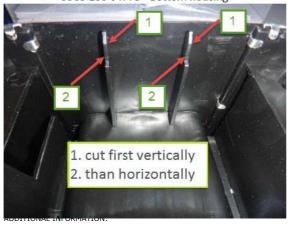

IPM NUMBER (Philips Integrate Problem Management documentation reference number): IPM-119152

FAQ NUMBER (for Call Center reference): None

INFORMATION FOR CALL CENTER: None

INFORMATION FOR CONSUMER: None

HISTORY: 27-06-2016 - First Release