

Service Service Service

Incanto



Service Manual

Rev. 03 MAY 2016

General Information

Description	Value
Housing material	Thermoplastic type
Size (w x h x d)	221 x 340 x 430 mm (data may vary depending on the model)
Size EXT(w x h x d)	221 x 386 x 430 mm (data may vary depending on the model)
Weight	7,5 kg (data may vary depending on the model) 8 kg (EXT)
Power cord length	800 - 1200 mm
Control panel	Front type
Cup size	Up to 152 mm
Water tank	1.8 litres - 2.5 litres (EXT) Removable type
Coffee bean hopper capacity	250 g - 500 g (EXT)
Coffee grounds drawer capacity	15
Milk carafe capacity	0,5 l (OTC version)
Pump pressure	15 bar
Boiler	Stainless steel boiler
Safety devices	Thermal fuse
Energy saving mode	< 1 Wh
Nominal voltage - Power rating - Power supply	Read the data plate placed inside the service door

All parts of this document are the property of Philips.

All rights reserved. This document and all the information herein is provided without liability deriving from any errors or omissions. Furthermore, no part may be reproduced, used or collected, except where express authorisation has been provided in writing or through a contractual agreement.

Table of contents	Page	Table of contents	Page
1. Introduction		5.3. Error Codes	9
1.1. Documentation required	1	5.4. Saeco Service Center - Quick Start Guide	9
1.2. Tools and equipment required	1		
1.3. Material	1	6. Standard checks	
1.4. Safety warnings	1	6.1. Repair Flow	1
1.5. Service Policy	3		
1.6.1. External machine parts Incanto OTC	4	7. Disassembly	1
1.6.1.1. External machine parts Incanto OTC EXT	5	7.1. Outer Shell	1
1.6.2. External machine parts Incanto AMF - CMF	6	7.2. Dispenser	3
1.6.3. Internal machine parts	7	7.3. Coffee grinder	4
		7.4. Grinder blades	5
2. Technical specifications		7.5. Coffee grinder adjustment	6
2.1. Technical specifications	1	7.6. Carafe connection and hot/Steam water dispenser	7
2.2. Specification for the measurement of the coffee products temperature	2	7.7. Central plate	
2.2.1. Specification for the measurement of the milk products temperature	3	7.8. Pin boiler	
2.3. Machine parameters and performance	5	7.9. Gear motor	1
		7.10. Pump	2
3. Brief instructions		7.11. Flow-meter	3
3.1. Customer menu in the Incanto	1	7.12. Boiler	5
3.2. Operation, cleaning and maintenance	3	7.13. CPU board	
		7.14. Programming access for SSC (Saeco Service Center)	
4. Operating logic		7.15. KYB interface and display	1
4.1. Water circuit Incanto	1	7.15. Fitting and removing Oetiker clamps	3
4.2. Milk carafe	2		
4.3. Single microswitch	3	8. Notes	1
4.4. Temperature sensor	3		
4.5. Coffee grinder	4	9. Water circuit diagram	2
4.5.1. Autodose sistem description	4		
4.5.2. Coffee lack detection and coffee grinder blocked.	5	10. Electrical diagram	3
4.6. Coffee cycle	6		
4.7. Water level detection (water tank)	7		
4.8. Aqua Clean water filter	7		
5. Troubleshooting			
5.1.1. Test mode Incanto	1		
5.1.2. Grinder Tuning	7		
5.2. SteamOut	7		

MODIFICATIONS TO SERVICE MANUAL

From Rev.	To Rev.	Chapter	Inserted	Modified
Rev.02	Rev03	01		Par. 1.3 Material
		04		Par. 4.8. Inserted code AquaClean water filter and text
		05	Par. 5.1.2. Grinder Tuning	
		05	Par. 5.4. Saeco Service Center - Quick Start Guide	
		06		Par 6.1. Repair flow

CHAPTER 1

INTRODUCTION

1.1 Documentation required

The following documentation is needed for repair procedures:

- Instruction booklet for specific model
- Technical documentation for specific model (diagrams, exploded view, symptom cure and service manual)

1.2 Tools and equipment required

As well as the standard equipment, the following is required:

Qty.	Description	Notes
1	Screwdriver	
1	Pliers for Oetiker clamps	
1	CC -A - Vdc tester	
1	Digital thermometer	Scale limit > 150°C
1	SSC (Saeco Service Center)	Programmer (for programming and diagnostics mode)

1.3 Material

Material	Code and Description
Thermal paste	Heat resistance > 200°C
Descaler	21001901 "ACC SAE DECALCIFIER 5 L 1 UNIT"
Grease solvent	132253695601 "PARALIQ GB 363"
Silicone grease	14-INTGR22004 "ACC TUBE FIN FOOD GREASE 2 400 ML"

1.4 Safety warnings

We recommend you consult the technical manual of the machine before performing any maintenance work.

Observe all applicable standards relating to the repair of electrical appliances.

Always disconnect the power plug from the mains before beginning repair work.

Always disconnect the power plug from the mains before beginning repair work.



Simply turning off the main machine power switch is not an adequate safety precaution.

This domestic appliance is rated as insulation class I.

On completion of the repair work, insulation and dielectric rigidity tests must be performed.




Disassembling the machine, the operator must pay attention to hot and under Pressure parts: boiler, pin-boiler, valves, dispensing, steam tube, brew unit, connections and pipes to avoid burns. Please refer to specific hydraulic circuit (Image1) to know the parts in detail.



The machine hydraulic circuit can reach maximum pressure of 16/18 bar. To operate in safety condition is recommended to perform the Steam Out procedure in order to remove the pressure and hot water inside the hydraulic circuit.

When the machine arrives at the Service Center in descaling mode interrupted, or making Descaling, be very careful not to come into contact with the Descaler.

After the product has been repaired, it should function properly and has to meet the safety requirements and legal regulations as officially laid down at this moment

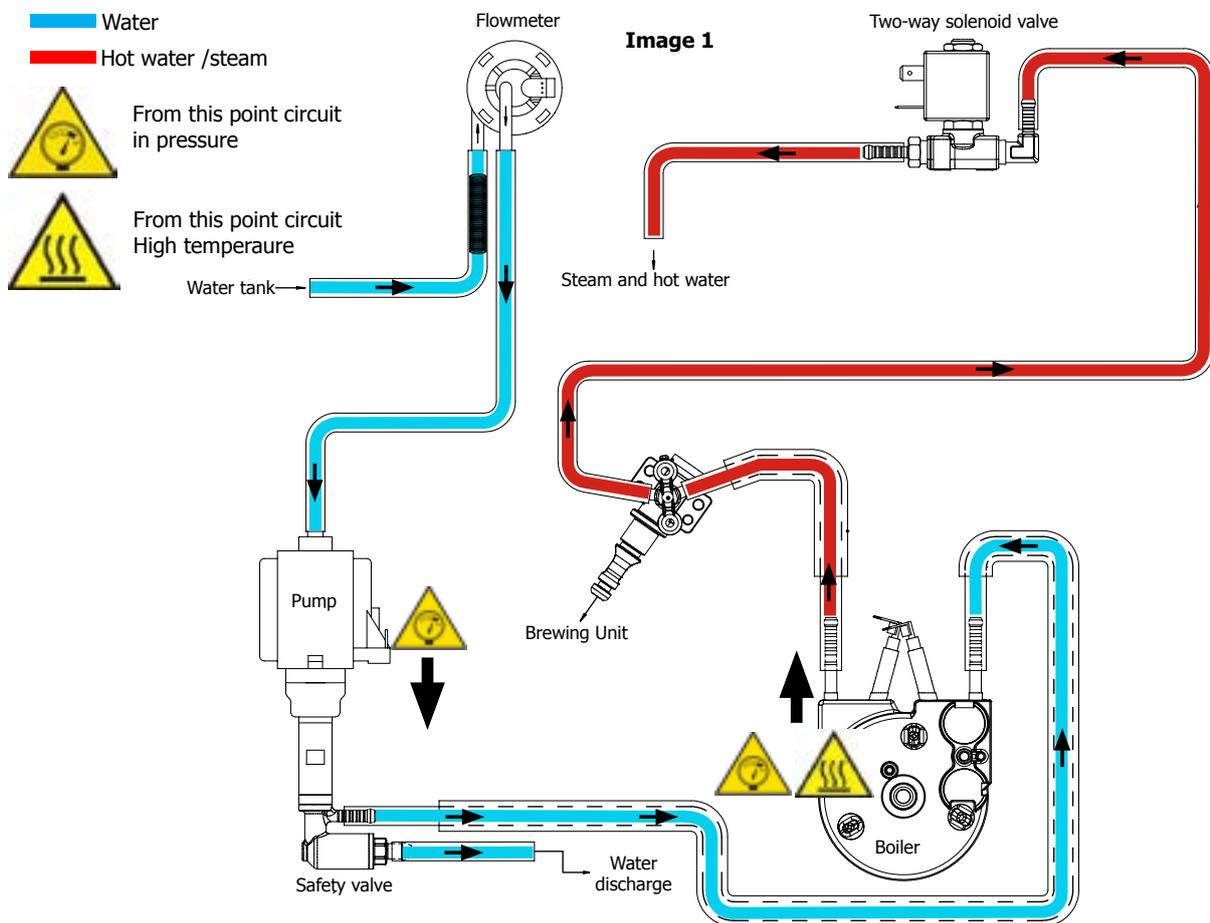

1.5 Service POLICY grid as used for coffee machine


For IN WARRANTY repairs is recommended to use when and where possible the single components, available in the exploded views of the coffee machines or of the specific components. If you find the information "SEE THE EXPLODED VIEW E....." in the assembly description field, it means that the single components of the assembly are available in the other pages of the exploded view. It's possible to use the assembly only if there is a specific Symptom Cure that include this possibility or when the single components are not available for the order.

List of principal assembly present in all our coffee machines

Components	Assembly use	Single components available
COFFEE GRINDER	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine or of the Coffee Grinder on website
BREWING UNIT	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine or of the Brewing unit on website
BOILER	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine on website
GEAR MOTOR	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine on website
FILTER HOLDER	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine on website
MILK CARAFE	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the machine on website
THERMAL CARAFE	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the Thermal Carafe on website
MILK ISLAND	<u>Only for OOW repairs</u>	YES , to consult the specific exploded-view of the Milk Island on website


1.6.1. External machine parts Incanto OTC

Main components

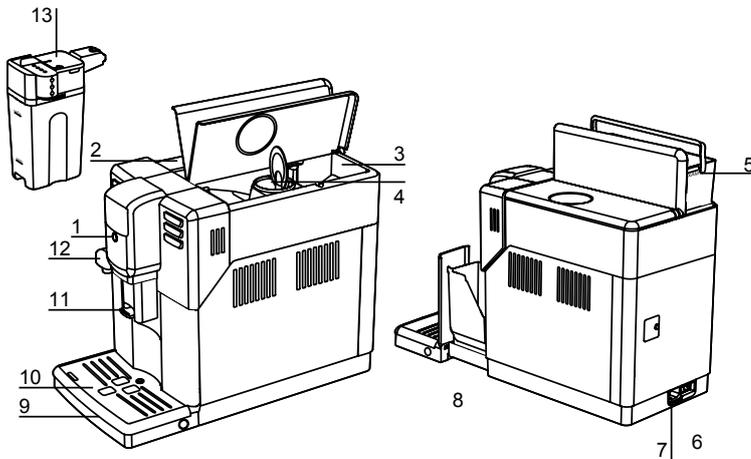


1	STAND-BY button
2	Water tank seat
3	Coffee bean hopper
4	Pre-ground coffee compartment
5	Removable water tank
6	Main switch
	I. ON
	O. OFF
7	Power cord socket
8	Coffee grounds drawer
9	Drip tray
10	Drip tray grill
11	Coffee dispensing spout
12	Hot water dispensing spout
13	Milk carafe

Main removable parts

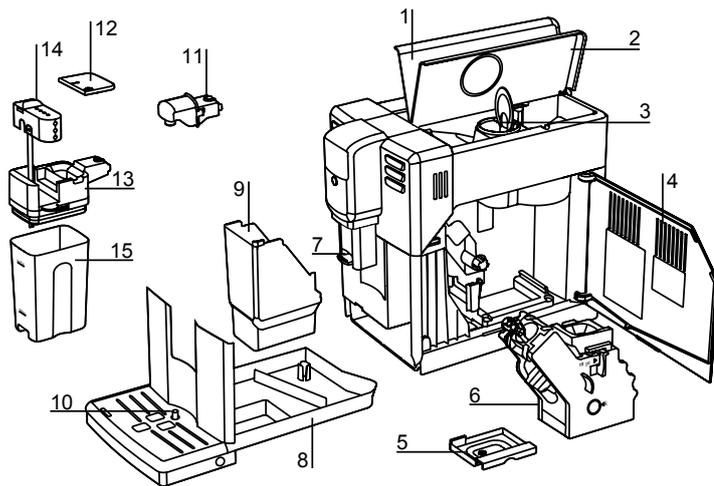

1	Water tank lid
2	Coffee bean hopper lid
3	Pre-ground coffee compartment lid
4	Service door
5	Coffee residues drawer
6	Brew group
7	Coffee dispensing spout
8	Drip tray
9	Coffee grounds drawer
10	'Drip tray full' indicator
11	Hot water dispensing spout
12	Milk carafe lid
13	Milk carafe top
14	Milk frother dispensing spout
15	Milk container


Control buttons and display

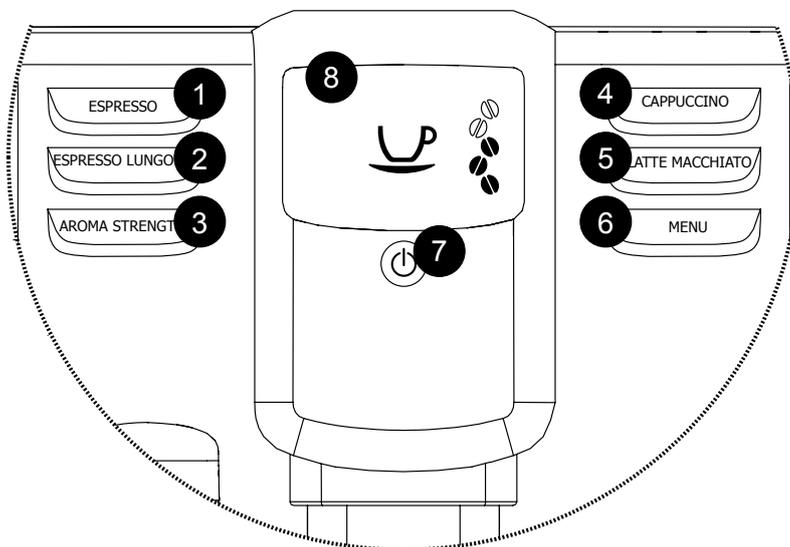

1		ESPRESSO button
		ESC button
2		ESPRESSO LUNGO button
3		AROMA STRENGTH button
		OK button
4		CAPPUCCINO button
		UP button
5		LATTE MACCHIATO button
6		MENU button
		DOWN button
7		STAND-BY button
8		Display
		In the example: Main menu; ready for brewing


1.6.1.1. External machine parts Incanto OTC EXT

Main components

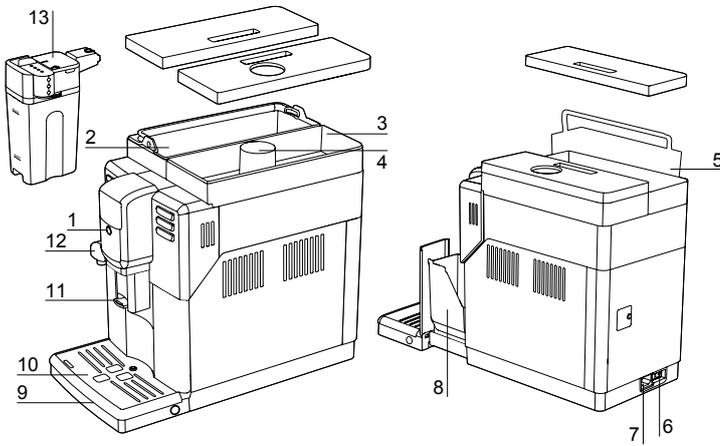


1	STAND-BY button
2	Water tank seat
3	Coffee bean hopper
4	Pre-ground coffee compartment
5	Removable water tank
6	Main switch
	I. ON
	O. OFF
7	Power cord socket
8	Coffee grounds drawer
9	Drip tray
10	Drip tray grill
11	Coffee dispensing spout
12	Hot water dispensing spout
13	Milk carafe

Main removable parts

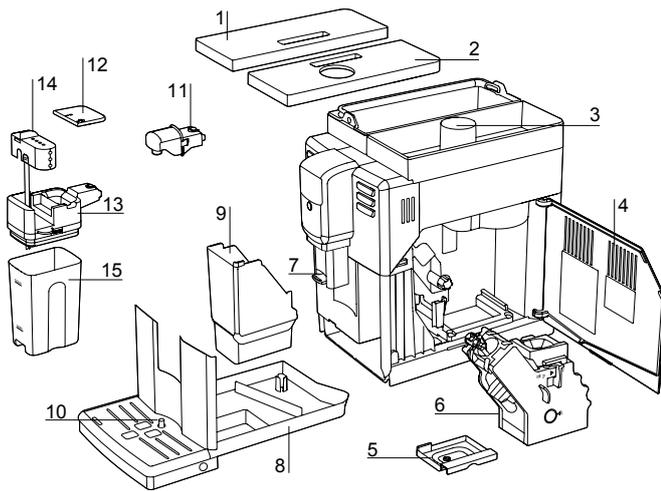

1	Water tank lid
2	Coffee bean hopper lid
3	Pre-ground coffee compartment lid
4	Service door
5	Coffee residues drawer
6	Brew group
7	Coffee dispensing spout
8	Drip tray
9	Coffee grounds drawer
10	'Drip tray full' indicator
11	Hot water dispensing spout
12	Milk carafe lid
13	Milk carafe top
14	Milk frother dispensing spout
15	Milk container


Control buttons and display

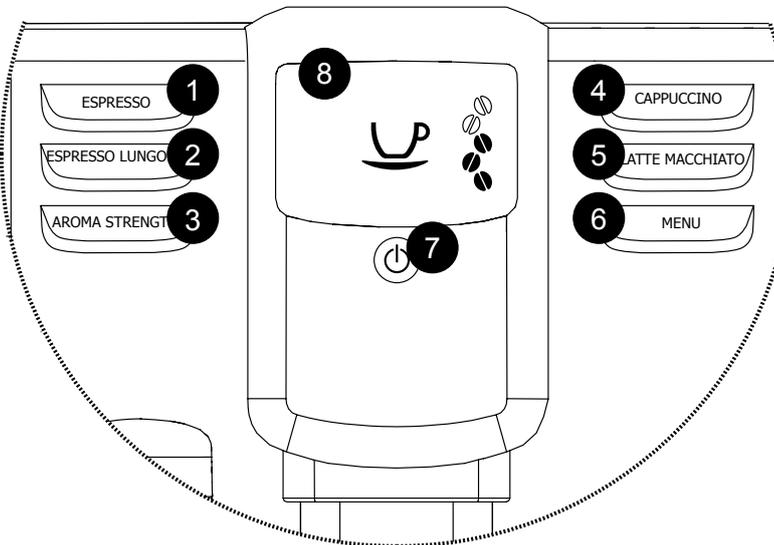


1		ESPRESSO button
		ESC button
2		ESPRESSO LUNGO button
3		AROMA STRENGTH button
		OK button
4		CAPPUCCINO button
		UP button
5		LATTE MACCHIATO button
6		MENU button
		DOWN button
7		STAND-BY button
8		Display
		In the example: Main menu; ready for brewing

1.6.2. External machine parts Incanto AMF CMF

Main components

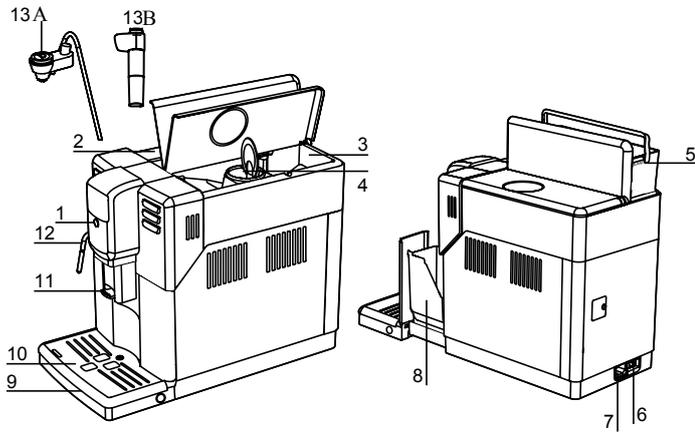


Main removable parts

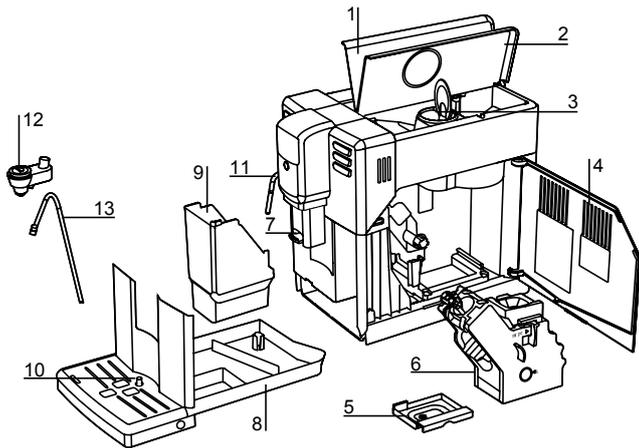




1	STAND-BY button
2	Water tank seat
3	Coffee bean hopper
4	Pre-ground coffee compartment
5	Removable water tank
6	Main switch
	I. ON
	O. OFF
7	Power cord socket
8	Coffee grounds drawer
9	Drip tray
10	Drip tray grill
11	Coffee dispensing spout
12	Steam/hot water dispensing spout
13A	Automatic milk frother (AMF)
13B	Classic milk frother (CMF)

1	Water tank lid
2	Coffee bean hopper lid
3	Pre-ground coffee compartment lid
4	Service door
5	Coffee residues drawer
6	Brew group
7	Coffee dispensing spout
8	Drip tray
9	Coffee grounds drawer
10	'Drip tray full' indicator
11	Steam/hot water dispensing spout
	Steam wand (fixed)
	Rubber grip
12	Automatic milk frother top
13	Milk frother suction tube

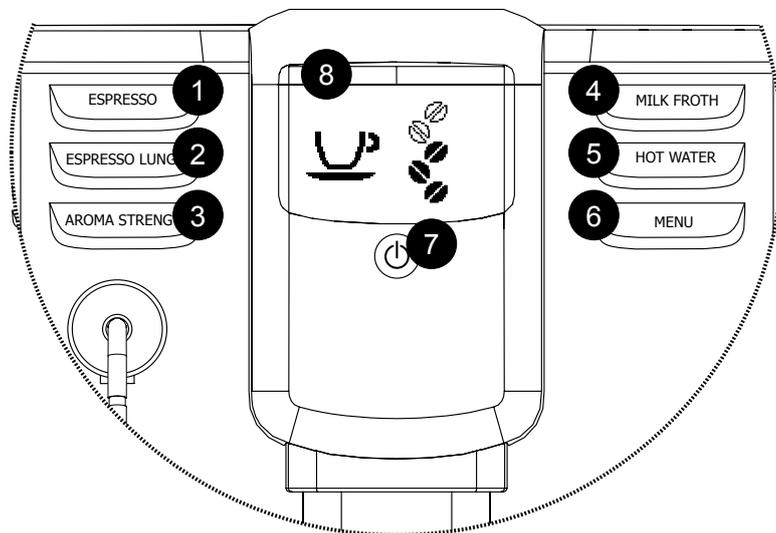

1		ESPRESSO button
		ESC button
2		ESPRESSO LUNGO button
3		AROMA STRENGTH button
		OK button
4		MILK FROTH button
		UP button
5		HOT WATER button
6		MENU button
		DOWN button
7		STAND-BY button
8		Display
		In the example: Main menu; ready for brewing

1.6.3 Internal machine parts

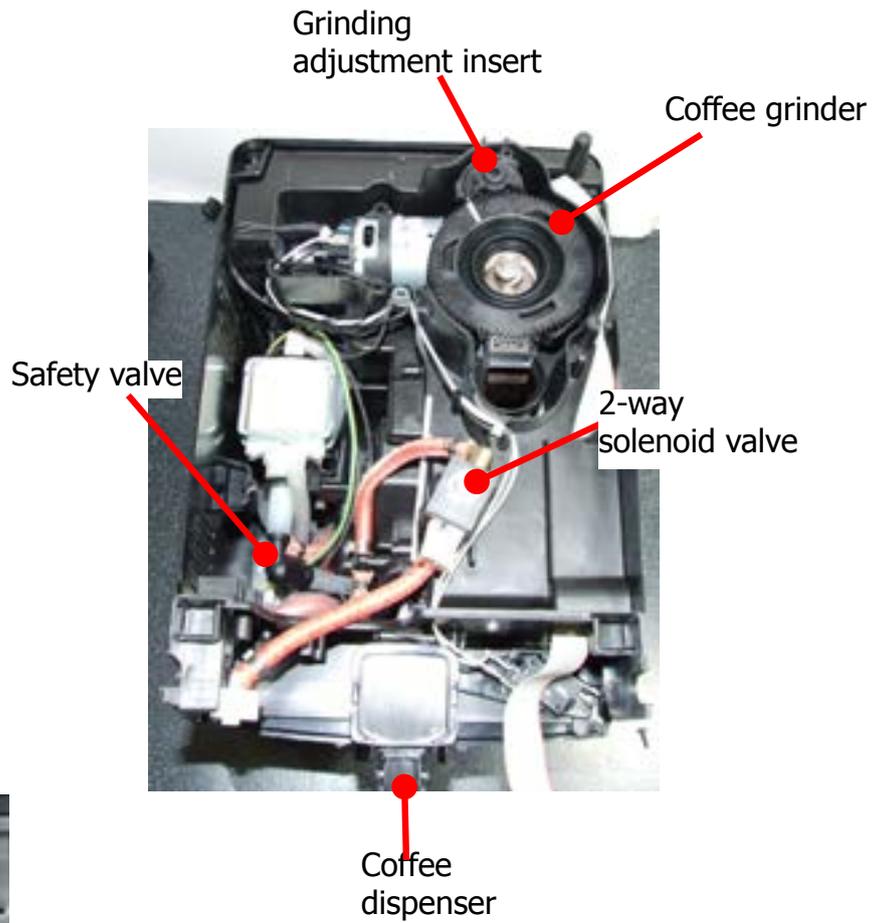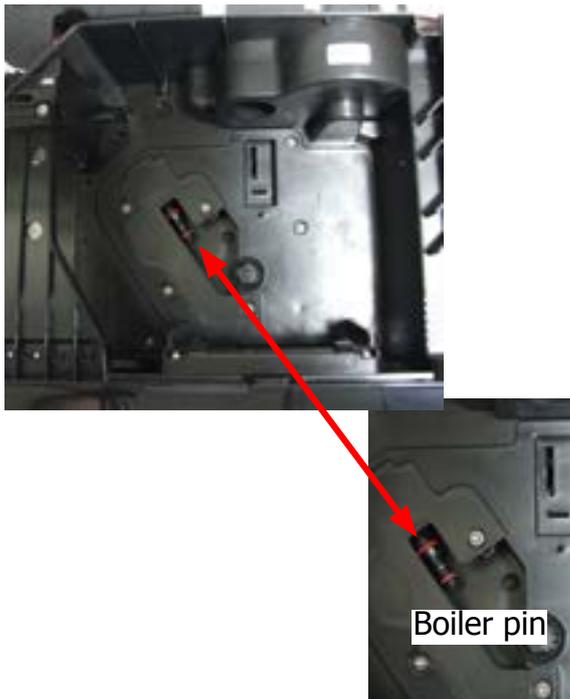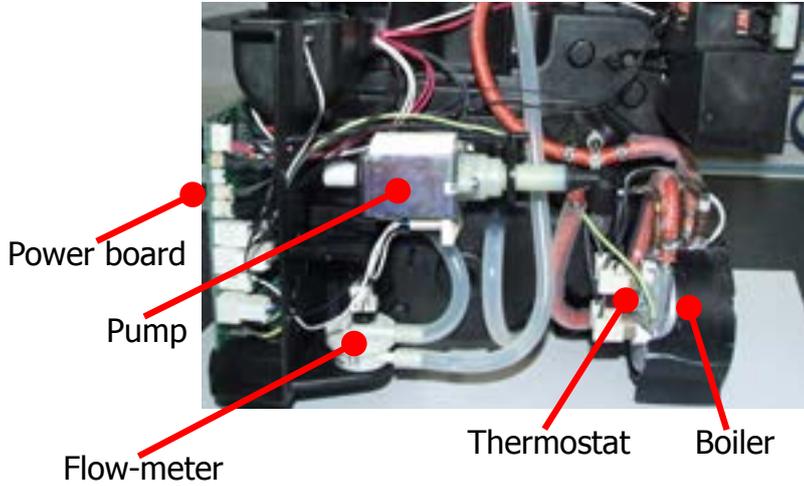

CHAPTER 2

TECHNICAL SPECIFICATIONS

2.1. Technical specifications

Power supply and output:	240 V~ 50 Hz 1850 W - 230 V~ 50/60 Hz 1850 W 120 V~ 60 Hz 1500 W
Temperature monitoring:	(NTC) variable resistor sensor - transmits the value to the electronic card
Safety system:	2 thermostats at 190°C one shot
Coffee heat exchanger output: Stainless steel	(230 V~) 1900 W - (120 V~) 1300 W - (100 V~) 1100 W for coffee, hot water and steam dispensing
Gear motor:	2 rotation directions; power supply 24VC
Pump:	Ulka Type EP5/S GW approx. 13-15 bar with reciprocating piston and thermal switch 100°C 48 W, 230V, 50 Hz, 120V, 60Hz 100V, 50/60 Hz
Overpressure valve:	Opening at approx. 16-18 bar
Water filter:	In tank
Coffee grinder:	Direct current motor with flat ceramic grinder blades
Automatic dosage:	Dose adjustment controlled by the electronic system
Power consumption:	During heating phase- approx. 5.6 A
Dimensions: W x H x D in mm:	221 x 340 x 430 mm (data may vary depending on the model)
Dimensions (EXT): W x H x D in mm:	221 x 386 x 430 mm (data may vary depending on the model)
Weight:	7.5kg - 8.0Kg (EXT) (data may vary depending on the model)
Water tank capacity:	1.8 l - 2.5 l (EXT)
Coffee bean hopper capacity:	250 g. - 500 g (EXT)
Dreg drawer capacity:	15
Water circuit filling time:	Approx. 15 sec Max. on first filling cycle
Heating time:	Approx. 45 sec.
Grinding time:	Approx. 8-10 sec.

2.2. Specification for the measurement of the coffee products temperature.

The temperature is influenced by the flow from the dispenser and stratification of temperatures in the glass. In order to consider these phenomena and to introduce measures that allow comparisons in controlled conditions, below guidelines must be followed:

Conditions:

- a) Water temperature in tank: 23°C (+/-2°C).
- b) It must be used a plastic cup (see picture N°1).
- c) It must be used a thermocouple thermometer (e.g. type K - see picture N°2).
- d) The coffee machine is tested without any change of parameters or calibrations, which may affect the temperature of products, so the measurement of temperature must be done with machine in default factory setting.

Procedure:

1. The temperature must be measured in the cup, immediately after dispensing. Cup has to be placed on a non-metal surface using a thermocouple thermometer (Picture 1).
2. The temperature in the cup is measured by immersing the probe of the thermometer up to touch the bottom. The probe then must be moved in a circular motion for 5/6 rotations. At the of the rotations, stop in the center of the cup (Picture 2).
3. The highest temperature measured during the rotations is the value we are searching for, and that must be reported;
4. Test measurement: from end of dispensing to the end of rotations must be completed within 12 seconds.
5. the distance of the probe from the bottom of the glass is a function of the quantity of coffee dispensed: 10mm for 35gr - 17mm for 60gr - 35mm for 120gr and superior (Picture 3).

Limits of acceptability



The acceptance limits are divided by features and products and are the following:

Espresso Coffee Italy Q.ty 25/40 gr.

Temperature of 1st product 69°C ≤ 85°C
 Temperature of 2nd product 72°C ≤ 85°C

Coffee Q.ty 70/120 gr.

Temperature of 1st product 69°C ≤ 85°C
 Temperature of 2nd product 72°C ≤ 85°C

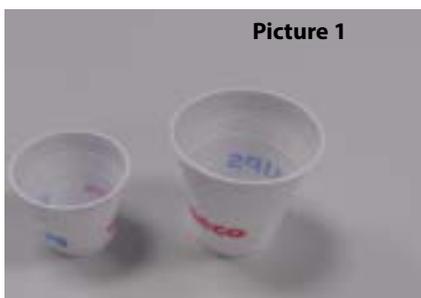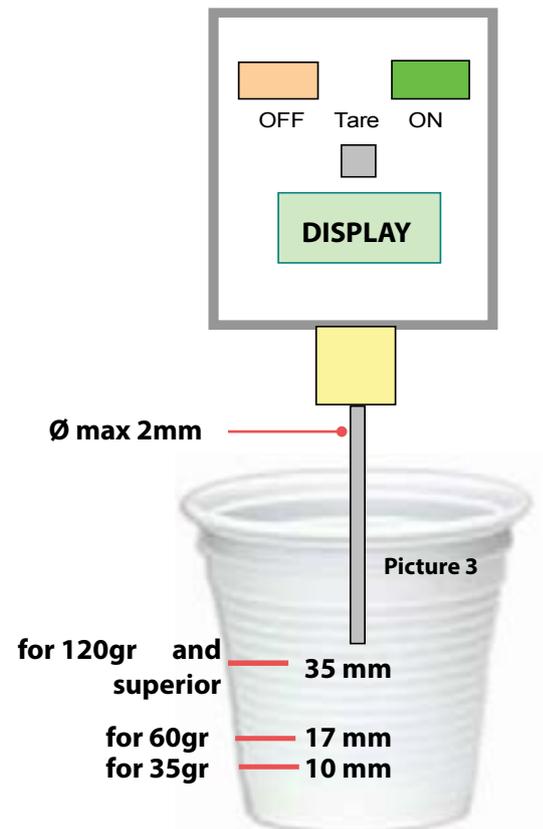

Picture 1



Picture 2

2.2.1. Specification for the measurement of the Milk products temperature.

Milk evaluation

To carry out the test, a partially skimmed UHT milk with a percentage of grease between 1.5-1.8% at a refrigerator temperature T_{refr} . (between 4 to 10°C) must be used.

The milk product must be checked on a beaker of 250 ml of capability and with an inner diameter of 70mm, brewing 100gr of product.

Parameters to be respected:

The parameters to be respected are: milk temperature and height of the cream. Each of these parameters, however, must be evaluated depending on the type of system used for the production of hot milk. Actually three types of devices are present on the appliances:


- Manual system (pannarello)
- Semi-Automatic system (cappuccinatore)
- Automatic system (carafe, Pinless wonder system, etc.)

Milk temperature in the beaker:

System with Pinless Wonder: With milk at T_{refr} . (about 4-10 °C): $\rightarrow \Delta \geq 45$

how does it work:

1. The milk is heated in the first chamber of the carafe thanks to the steam.
2. Then, it is mixed with air and frothed in the middle chamber.
3. Finally, in the outlet chamber, the 'typhoon effect' perfects the milk texture by removing the large bubbles

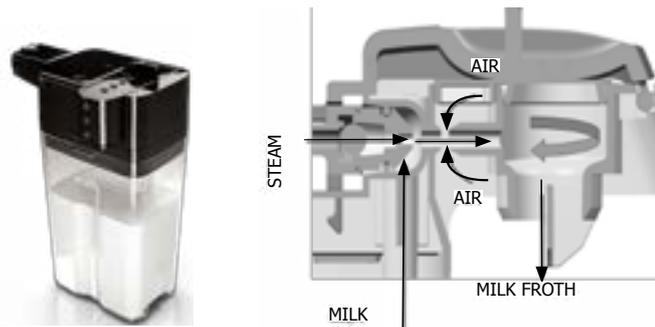

Height of the milk cream in the beaker:

Manual system (pannarello) $\geq 15\text{mm}$ on 100gr. of brewed product

Semi-automatic system (cappuccinatore) $\geq 20\text{mm}$ on 100gr. of brewed product

Automatic system: carafe, cappuccinatore, Pinless wonder e.g. (New Royal, Energica Pure, Intelia EVO latte) $\geq 20\text{mm}$ on 100gr. of brewed product

How to measure the temperature of the milk.

1. The measurement is carried out in the beaker, immediately after the end of milk brew, positioned on a non-metallic surface, using a thermocouple thermometer (eg. Type K). Stop the preparation of mixed product: at the end of milk brewing, where "One Touch product" function is present.
2. The temperature is measured by immersing the probe of the thermometer, positioning the probe inside the beaker at about 10mm from the bottom of the container, then the probe moves in a circular motion for 3-5 turns, stopping at the end, at the center of the beaker. It detects the maximum temperature reached in a time of relief between 3 to 5 seconds. It is important the mixing of milk before the measurement at 10mm from the bottom of the beaker. If the mixing is correct, temperature, for a few fractions of a second, during the measurement should not oscillate.

How to measure the milk cream.

The temperature (Trefr or Tamb) of the milk doesn't affect as much the test result on measuring the milk cream; by convection is assumed to always use milk at refrigerator temperature Trefr.

Manual systems (Pannarello)

Pour 100cc. of milk at Trefr. in a beaker of 250 ml of capacity and with a inner diameter of 70 mm; with machine in steam mode:

1. Open the steam knob to discharger water circuit for 4 sec, then close the knob.
2. Place the beaker with the frother dipped in milk, open the steam knob to maximum and start the chronometer.
3. After about 30 to 60 seconds, close the knob and check the result on milk.

Semi-automatic systems (cappuccino)

Pours milk at Trefr. in a container ; with the machine in steam mode:

1. Open the steam knob to discharge water circuit for 4 sec. then close the knob.
2. Insert the silicone tube in the milk container, placing a beaker of 250 ml capacity and with an inner diameter of 70 mm under the cappuccino maker and open the steam knob.
3. After having provided 100gr. of product, close the knob and check the result obtained on milk. Note: The same applies to machines which have a steam key on the user interface and a solenoid valve in place of the steam tap.

Automatic: Carafe, Cappuccino Pinless wonder (New Royal, Energica Pure, Intelia EVO Latte), etc..

After setting the machine to delivery of 100gr. of product:

1. Launch the "hot milk" function.
2. Collect the product in a beaker with a 250ml of capacity and with an inner diameter of 70 mm, and verify the result obtained on milk. Carry out the test using milk at a Trefr..

In case the machine allows modify of the emulsion through the menu, use the machine with the emulsion set to the default value.

Related to the above testing procedure derives the following table of acceptability:

Manual, Semi-Automatic and Automatic's Milk System	
Grams of Product	Minimun Height of the milk cream
≥ 130	≥ 30mm
120	≥ 25mm
110	≥ 22mm
100	≥ 20mm
90	≥ 16mm
80	≥ 13mm
70	≥ 11mm

NB: To verify more accurately the height of the cream, a practical expedient dictated by experience is to add to the product just delivered a small amount of coffee. The addition of coffee immediately put in evidence the surface of separation between liquid and cream.

2.3. Machine parameters and performance

PRODUCT QUANTITY	Default quantity (Grams)	User programmable	Programm. by Production / Service
Espresso	40 +/- 10gr	Yes	No
Espresso lungo	120 +/- 14%	Yes	No
Hot water	Continues until the water supply has been exhausted (capacitive sensor)		
Steam pannarello (frother)	time-out 03 minutes.		

DREG DRAWER	Description and values
Time-out for dreg drawer	5 sec.
Reset dreg counter	Dreg emptying alarm, if the dreg drawer is removed for more than 5 seconds.

STANDBY	Description and values
Inlet time (default)	15 minutes
Inlet time programmed by Production/Service	Yes
Boiler temperature during Standby	Boiler OFF

WATER TANK	Description
Water reserve (pulses) with water filter	200
Water reserve (pulses) with no water filter	200
Water reserve modifiable by Production/Service departments	No
"Fill tank" alarm	Yes
"No tray" alarm	Yes (Fill tank)
Water mains	No

Descaling frequency in AQUACLEAN

The first activation must make before you've paid up to 5000ml products because mind thinks as if he had the filter

Hardness	Filter number	Percentual on display 10% the icon flashes slowly. (encourage the consumer to buy the filter)	Percentual on display 0% the icon flashes quickly. (tell the consumer to change the filter)	MAX Quantity water, the icon turns off. (replace filter)	
Indifferent	From 1/8 to 7/8	8050ml	2000ml	62500ml 75000ml only OTC	Replace filter (you can not turn off)
	8/8				Descaling

If after descaling or after the use of a filter this is not reactivated , the machine recognizes the water hardness setting and calculates as in the table below

Descaling cycle frequency

Hardness	WATER HARDNESS	Without water filter	Not reactivating the filter
1	Soft (up to 7°dH)	240 litres (480,000 pulses)	210 litres (420,000 pulses)
2	Medium (7° - 14°dH)	120 litres (240,000 pulses)	105 litres (210,000 pulses)
3	Hard (15° - 21°dH)	60 litres (120,000 pulses)	52.5 litres (105,000 pulses)
4	Very hard (over 21°dH)	30 litres (60,000 pulses)	26.25 litres (52,500 pulses)




The default water hardness level is 4. Each litre of water corresponds to approximately 2,000 pulses.

CHAPTER 3

BRIEF INSTRUCTIONS

3.1. Customer menu in the Incanto

List of default settings

Display	Setting	Setting	Value	Description
		Coffee temperature	average	Coffee brewing temperature setting.
		Stand-by time	15 minutes	Stand-by time setting.
		Contrast	average	Display contrast setting.
		Water hardness	4 (very hard water)	Water hardness setting.
		AquaClean water filter	to be installed	AquaClean settings.

Changing the default settings

It is possible to customise the machine functions through the programming menu. The machine must be turned on and ready to work.

If necessary, refer to the "8.1 List of default settings" chapter.

- >  Press the MENU button and scroll through functions list to select the function whose settings are to be modified:

Note: the images at the side refer to a sample function.


- >  Press the OK button to select the desired function

Once selected:

- >  Press the UP button to increase the value.
- >  Press the DOWN button to decrease the value.
- >  Press the OK button to confirm the change.

When the change has been implemented, the OK message will be displayed.

- >  The modified but unconfirmed values will not be stored.
- >  Press the ESC button to exit the programming function.
The machine automatically exits the programming mode if no button is pressed for 3 minutes.

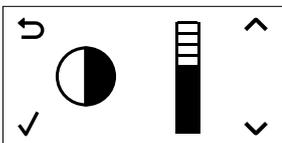

Reset to the default settings



- It is possible to restore the default settings through the programming menu. The machine must be turned on and ready to work.
- > Press the MENU button and scroll through functions list to select the RESET function.
 - > Press the OK button to select the function. When the change has been implemented, the OK message will be displayed.
 - > Press the ESC button to exit the programming function. The machine automatically exits the programming mode if no button is pressed for 3 minutes.


Alarm signals summary: red display

Display	Description	Display	Description
	Put back the drip tray and coffee grounds drawer; close the service door.		Coffee grounds drawer full.
	Coffee bean hopper empty.		Water tank empty.
	Brew group not inserted.		The machine is out of service.

Warnings signals summary

Display	Description	Display	Description
	The machine is ready to brew products: coffee bean hopper empty		The machine must be descaled.
	If the filter signal starts blinking, the AquaClean filter must be replaced.		The machine is heating up.
	The machine is waiting to start the water circuit priming process.		The machine is rinsing.
	Only OTC The milk carafe ducts should be cleaned.		Brew group rebooting.

The machine is out of service

<p>Red Display</p> 	<p>If the machine error alarm signal is triggered, the error code is displayed in the bottom right corner of the display.</p>
--	---

Error code	Behaviour	Cause	Action
1	Coffee grinder blocked	Coffee outlet duct clogged	Clean the coffee outlet duct thoroughly.
3 - 4	Brew group locked, cannot be taken out	The brew group is incorrectly positioned.	Close the service door. Turn the machine off and back on again. Wait for the 'Ready for brewing' signal and then remove the brew group.
5	Water circuit error	Air in the water circuit	Remove and restore the water tank a couple of times, making sure to position it correctly. Check that the water tank seat is clean.

3.2. Operation, cleaning and maintenance


Operating the machine		
1	Fill water tank	
2	Fill the coffee bean hopper	
3	Switch on the appliance	
4	Press the button to start the appliance	
5	Heating	When the heating phase begins, wait for it to finish
6	Rinse	Carry out a rinse cycle for the internal circuits
7	Machine ready	The machine is ready to dispense beverages

CLEANING AND TECHNICAL SERVICING		
A	Empty the dregs drawer	When indicated
B	Empty the drip tray	As necessary
C	Clean the water tank	Weekly
D	Clean the coffee bean hopper	As necessary
E	Clean the casing	As necessary
F	Clean the brewing unit	Every time the coffee bean hopper is filled or weekly
	Lubricate the brewing unit	After 500 dispensing cycles or when the grease is no longer present on the brewing unit
	Clean the unit housing	Weekly
H	Descaling	When indicated

CHAPTER 4

OPERATING LOGIC


4.1. Water circuit Incanto

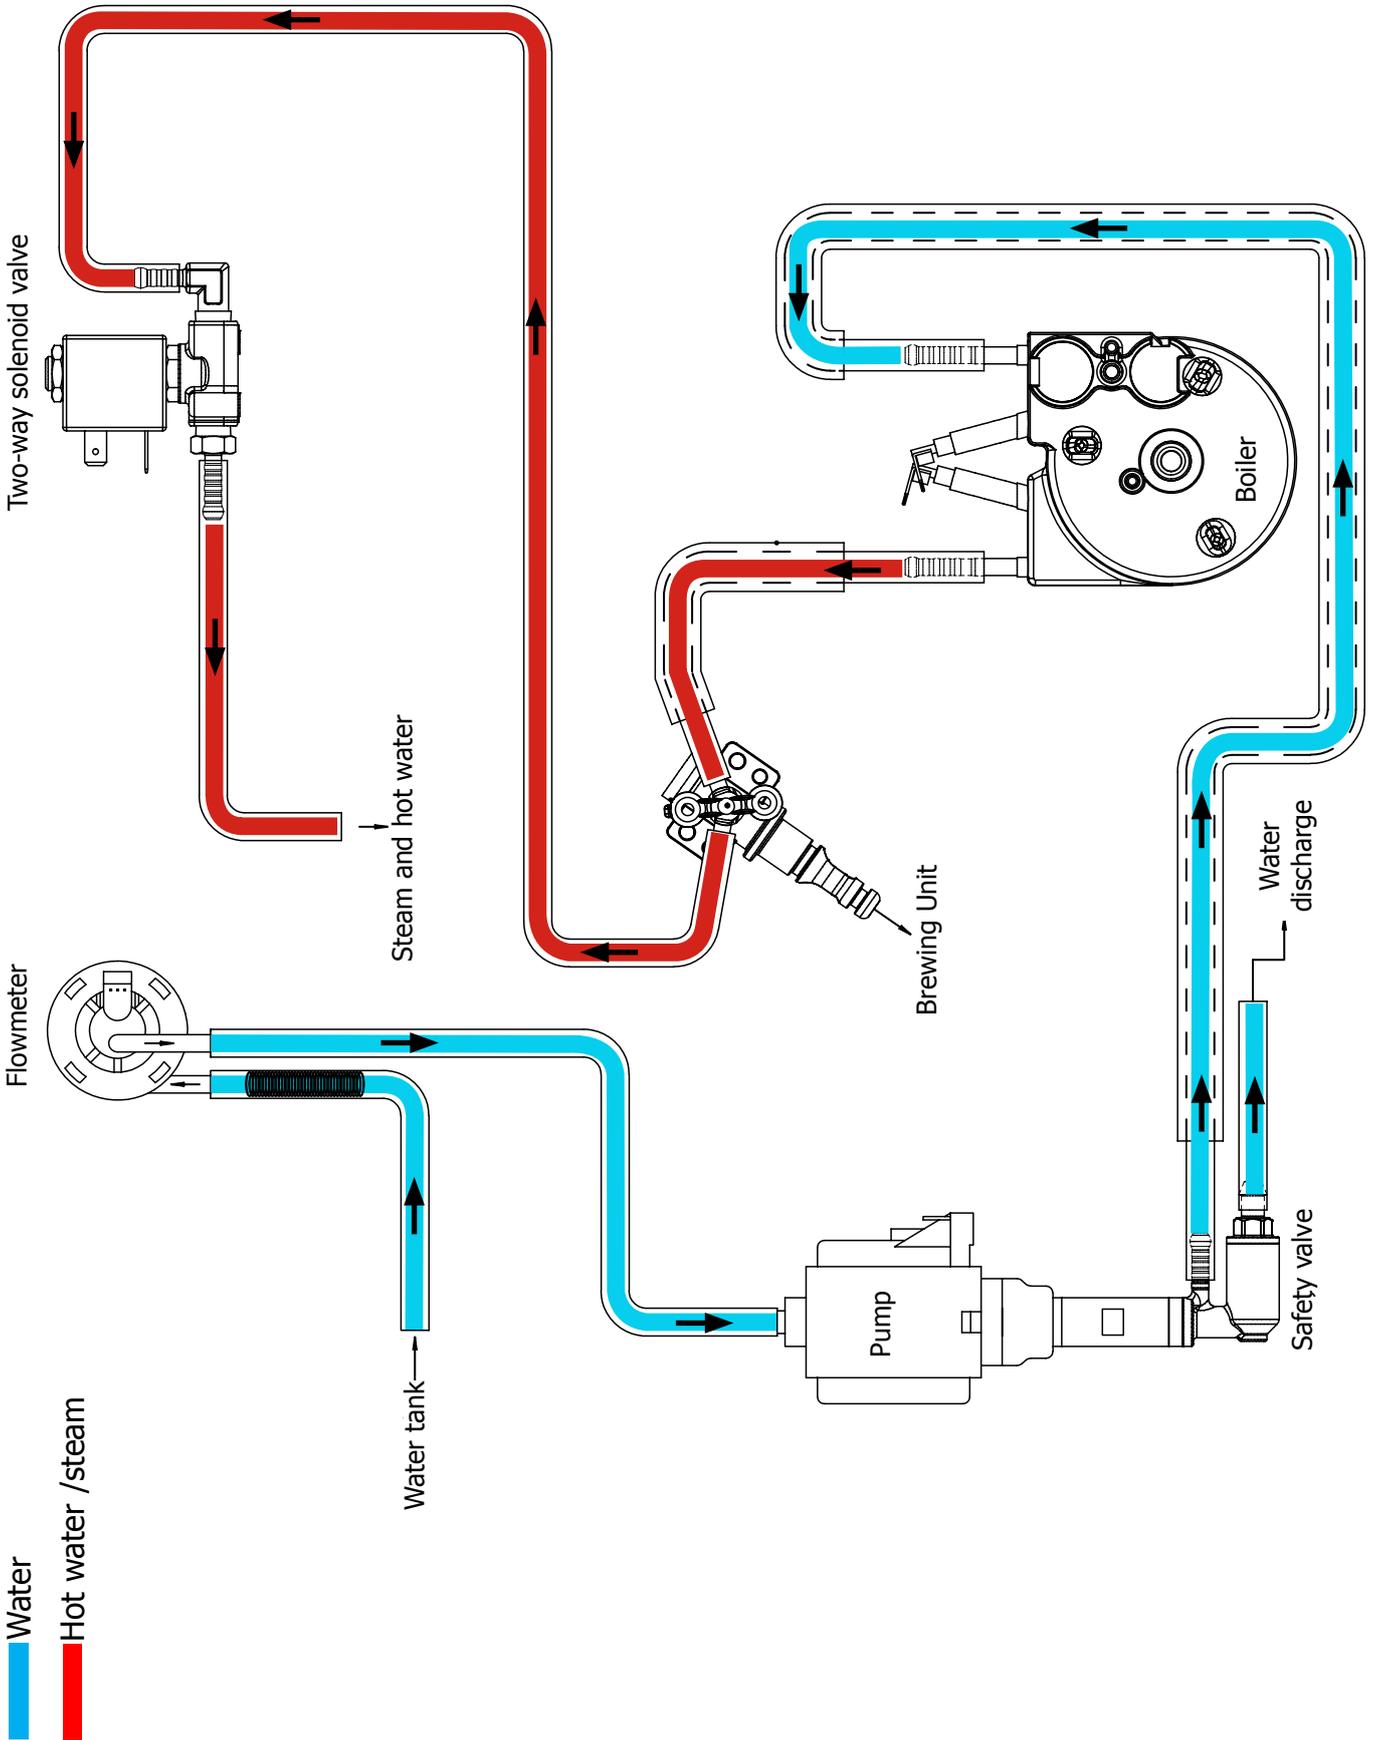

4.2. Milk Carafe Incanto OTC



- 1) Steam input
- 2) Bring the cappuccino maker into dispensing position
- 3) Milk tank

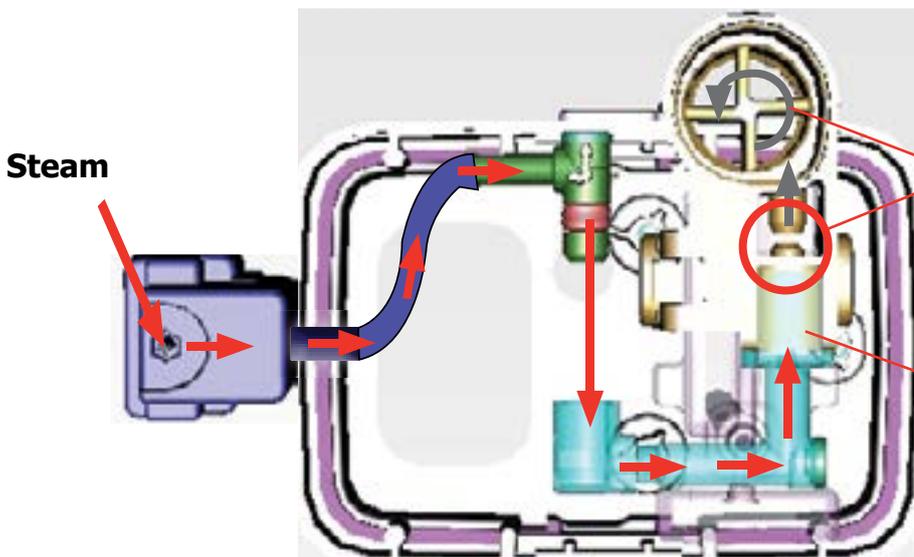

The milk is heated by the steam and taken towards the emulsion chamber where it is mixed with air and transformed into foam


The steam passes through the pipe creating a sucking effect that pulls the milk upwards

4.3. Single microswitch

Switching on

When the machine is switched on, the gear motor repositions itself as follows:

- It acts on microswitch 1
- The gear motor changes its rotation direction and moves upwards again by approx. 1-2 mm.
- The boiler begins to heat the water for approx. 45 sec., at full power, in order to reach the optimal temperature. The temperature will then remain at a constant level.

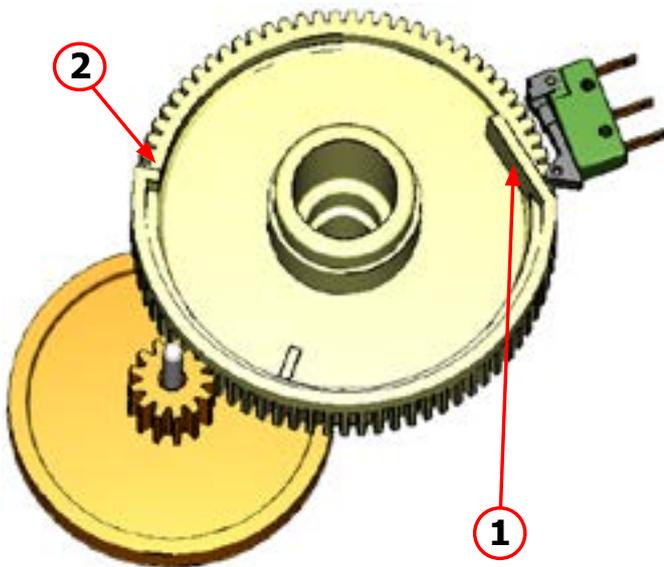

The gear motor is powered by a direct current motor that engages with the smaller double toothed wheel using a worm screw. The unit is mounted on the axle of the large gear wheel and when a coffee is requested, it moves from the standby position to the dispensing position, and then back to the standby position again.

- **Standby position: 1**

- **Dispensing position: 2**

4.4. Temperature sensor (adjustment)


Temp. (°C)	R nom (kΩ)	ΔR (+/- %)
20	61.465	8.6
50	17.599	5.9
75	7.214	4.1
80	6.121	3.7
85	5.213	3.4
90	4.459	3.1
100	3.3	2.5
125	1.653	3.9
150	0.893	5.1

An NTC is used as a temperature sensor; in the event of overheating this reduces boiler element power consumption.

The electronic system detects the current boiler temperature from the drop in voltage of the sensor and adjusts it accordingly.


Heating element values and corresponding temperatures: see table.

4.5. Coffee grinder

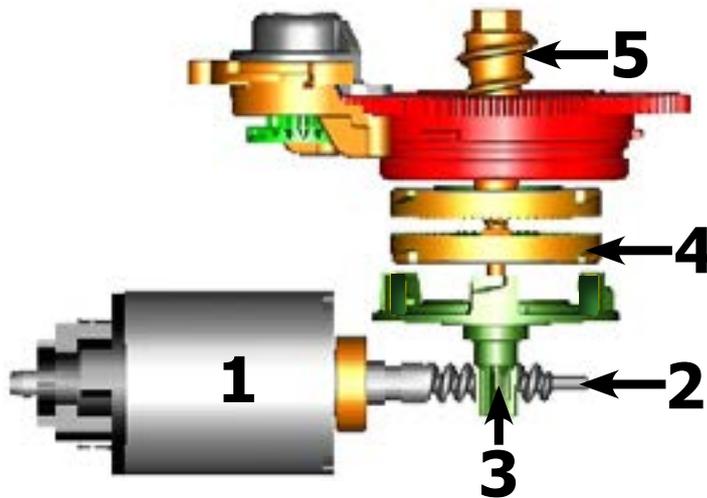

The coffee grinder is driven by a direct current motor (1) using a worm screw helicoidal wheel transmission (2).
 The worm screw (2) drives a plastic gear wheel (3), which turns the lower grinder (4) and the increment pin (5)

4.5.1 Autodose system description

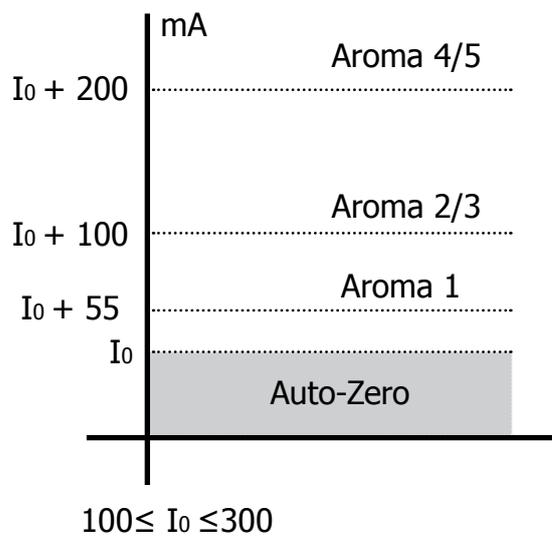

I_0 = current when the BU is moving without load, i.e. without coffee. It occurs, for example, during the rinsing phase of coffee spout.

Current targets:

- Aroma 1 → 55mA
- Aroma 2/3 → 100mA
- Aroma 4/5 → 200mA
- $100 \text{ mA} \leq I_0 \leq 300 \text{ mA}$

If the BU current is \leq the current target → the grinding time ↑
 If the BU current is \geq the current target → the grinding time ↓

1) When the system get the stability (i.e. the system got the current target) the coffee doses should be:

A1	A2/3	A4/5	
7,5	9,0	10	±1,5 grams

with medium grinding (500±60µm) and using coffee of test.

2) the 3 grinding times are always:

$$T_1 < T_2 < T_3$$

beside, every grinding time is, respectively:

$$4,0s \leq T_3 \leq 10s \text{ (10000ms)}$$

$$3,5s \leq T_2 \leq 9s \text{ (9000ms)}$$

$$3,0s \leq T_1 \leq 8,1s \text{ (8100ms)}$$

5 levels		DOSE ADJUSTMENT			
		Grinder Time	Min Grinder Time	Max Grinder Time	Curret target
Aroma of the grinded product	Aroma1  Very Light	T ₁	3s	8,1s	I ₀ + 55mA
	Aroma2  Light	T ₂	3,5s	9s	I ₀ + 100mA
	Aroma3  Med				
	Aroma4  Strong	T ₃	4s	10s	I ₀ + 200mA
	Aroma5  Very Strong				

4.5.2. Coffee lack detection and coffee grinder blocked

When the coffee grinder is working, the software monitors the current consumption. If the current value is very low, the machine concludes that coffee is missing; if the current value is very high, the machine concludes that the coffee grinder is blocked; instead, if the current value is in the middle, the machine concludes that all is ok and it goes on to do the product.

Because the current consumption of grinder changes depending on the situations (motor new or old, cold or hot, etc., coffee blends), these current thresholds are not static, but dynamic.

4.6. Coffee cycle

Main switch ON	START		STOP
Time			
Coffee grinder			Time (Dosage)
Heating	approx. 45 sec.		
Pump			Pump operation (flow meter pulses) in accordance with the amount of product selected.
Brewing unit gear motor			*
Status	Heating	Ready	Coffee cycle

Notes: * Only with Pre-brewing



Single microswitch gear motor

Switching on


When the machine is switched on, the gear motor repositions itself as follows:

- It acts on microswitch 1 (see following chapter).
- The gear motor changes its rotation direction and moves upwards again by approx. 1-2 mm.
- The boiler begins to heat the water for approx. 45 sec., at full power, in order to reach the optimal temperature. The temperature will then remain at a constant level.

Coffee cycle

1. The coffee grinder starts the grinding process (controlled by Time).
2. The gear motor (brewing unit) moves to the brewing position.
3. Preliminary dispensing phase (short pump activity, short pause).
4. Product dispensing (the pump operation period is defined by the amount of product dispensed).
5. The gear motor moves to its home position (the dregs are expelled automatically).

4.7. Water level detection (water tank)

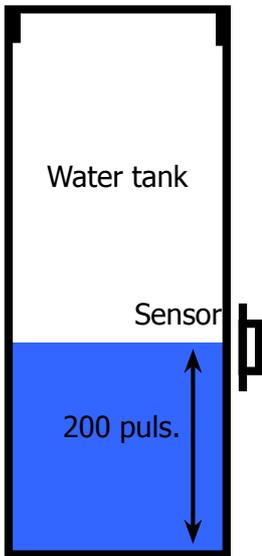

“Water low” message (water reserve)

Function:

The water level is monitored by a capacitive sensor, located one third of the way up the water tank wall. If the electronics assembly detects, by means of the sensor, that the amount of water in the tank has dropped below the above mentioned level, a water reserve remains available for the dispensing process underway (this will cover 200 flow meter pulses).

The product dispensing process will then come to an end.

If a dispensing cycle ends after the sensor has been triggered (in the reserve) then the display “Water low” continues to be displayed during the following dispensing cycle.

4.8. AquaClean water filter (Cod.421944050461 ACC SAE WATER FILTER LGV 1UNIT EU)

The Incanto machines are the first machines that have installed the new filter AquaClean. They were created to accommodate both new and the old filter, mounting the water container code 17001363-996530073476. From S.N. TW901539488484 the Incanto machines will mount a new water container that can only accommodate the new filter (the assy code is visible on exploded view of reference).

The SAECO AquaClean water filter purifies the water your machines uses for brewing coffee. This results in a greater coffee taste. Moreover it prevents mineral deposits in the water to build up, which eliminates the need of descaling your machine for 500000ml of water. We recommend installing the water filter AquaClean the first use of the machine to the maximum before using 5000 ml of water.

After a period of uses the machine, the display will indicate when the filter needs to be replaced, the maximum limit equivalent to 62500ml.

In this way you can replace the filter 8 times without the need for descaling. This equals approx. 500000ml of water. When Aquaclean filter is activated the display will show an icon indicating the percentage of use (initially 100%).

The conditions related to the filter work environment, water, therefore, an active environment for bacteria and microorganisms, require the replacement with a minimum frequency. The filter, indeed, is activated and starts working from the time is filled with water and continues working even with the machine off.

3 months from the activation is the correct replacement frequency to ensure the best performance and the proper operation.

The filter can not be deactivated manually, as it must end its life cycle.

The filter symbol flashes slowly when the autonomy of the current filter becomes less 8050ml (percentage shown on the display 10%). When the autonomy of the current filter becomes less than 2000ml (percentage shown on display 0%) the icon flashes quickly. After a maximum of 62500ml of water supplied the flashing light turn off. Because you did not activate a new filter, the machine will show that after a while' you need to start descaling. After the flashing light goes out is calculated:

(for example) After using 1 filter, the TH reduces of 1/8. With Water hardness 4 and brewing just coffee/water products the TH is set to 30 liters. 30 liter minus 1/8 is 26,25 liters. The first filter expires at 62,5liters - > the warning “DESCALE” should appear at 26,25+62,5 = 88,75 liters from start.

If the consumer is using the AquaClean filter, and replaces it when indicated by the machine. The machine needs to be descaled after 8 filter replacements. When the 8th filter needs to be replaced the machine will inform you need to descale before placing a new filter.

Note: the quantities of water, for each cycle of the filters, are not affected by the hardness of the water itself. The machines : Intelia Evo2 , Granbaristo V2 , Exprelia V2 , New Incanto e Cattiva will mount a water container can only mount the filter Aquaclean and will not be able to mount the old.

Descaling frequency in AQUACLEAN

The first activation must make before you've paid up to 5000ml products because mind thinks as if he had the filter

Hardness	Filter number	Percentual on display 10% the icon flashes slowly. (encourage the consumer to buy the filter)	Percentual on display 0% the icon flashes quickly. (tell the consumer to change the filter)	MAX Quantity water, the icon turns off. (replace filter)	
Indifferent	From 1/8 to 7/8	8050ml	2000ml	62500ml 75000ml only OTC	Replace filter (you can not turn off)
	8/8				Descaling

If after descaling or after the use of a filter this is not reactivated , the machine recognizes the water hardness setting and calculates as in the table below

Descaling cycle frequency

Hardness	WATER HARDNESS	Without water filter	Not reactivating the filter
1	Soft (up to 7°dH)	240 litres (480,000 pulses)	210 litres (420,000 pulses)
2	Medium (7° - 14°dH)	120 litres (240,000 pulses)	105 litres (210,000 pulses)
3	Hard (15° - 21°dH)	60 litres (120,000 pulses)	52.5 litres (105,000 pulses)
4	Very hard (over 21°dH)	30 litres (60,000 pulses)	26.25 litres (52,500 pulses)

The default water hardness level is 4. Each litre of water corresponds to approximately 2,000 pulses.

CHAPTER 5

SERVICE MODE

5.1.1. Test Mode Incanto


Introduction

This document describes the Test Mode of the Incanto (CMF,AMF and OTC) Coffee Machine. This application is used in order to test the machine in its mechanics and electronic components.

To enter Test Mode

The machine enters in Test mode by holding pressed together **Z1** and **Z6** buttons while switching on the machine by the main switch on the backside of the CA.

Once entered in Test Mode, the display shows the firmware version (Level 0).

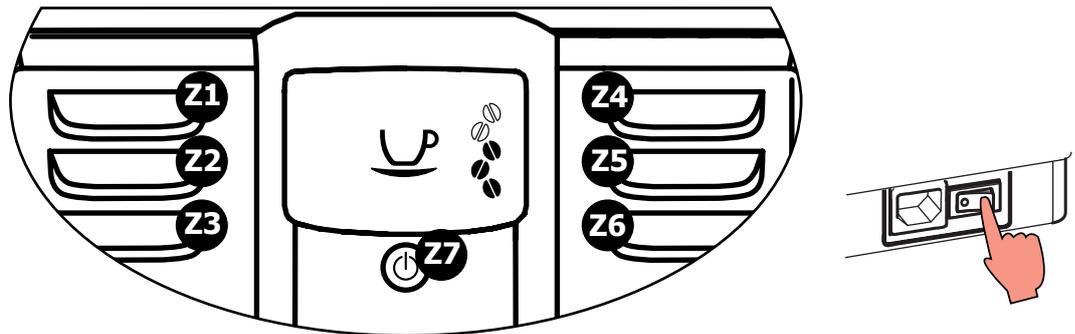

The Test Mode is organized into **6 different** pages, each level the coffee machine can execute different commands:

Page 0: The display shows:

- Firmware version.
- Version of machine (Focus ⇒ CMF, Class ⇒ AMF, Top ⇒ OTC).
- Voltage of PCB.
- Main supply frequency (50 or 60 Hz).

Page 1: Keyboard and display's colour test:

- Z1 button
- Z2 button
- Z3 button
- Z4 button
- Z5 button
- Z6 button
- Z7 button
- Backlight colors

Page 2: Input signals test:

- Water level sensor
- Micro-switch door closed/opened
- Microswitch presence of the Brew Unit

Page 3: Low voltage loads test:

- Brew Unit movement upward and downward (24V DC)


Page 4: High/Low voltage loads test (Pump, E.Valve) :

- Pump (230V AC)
- DC Solenoid valve (24V) (The door must be closed !!)
- Flow-meter

Page 5: High voltage loads test (Heater , Grinder):

- a) Heater (230V AC)
- b) Grinder (320V DC)

The user can change the page by pressing the **Z7** button.
 Page 0 is accessible only entering Test Mode from power-off mode; at the start up all loads are turned off.

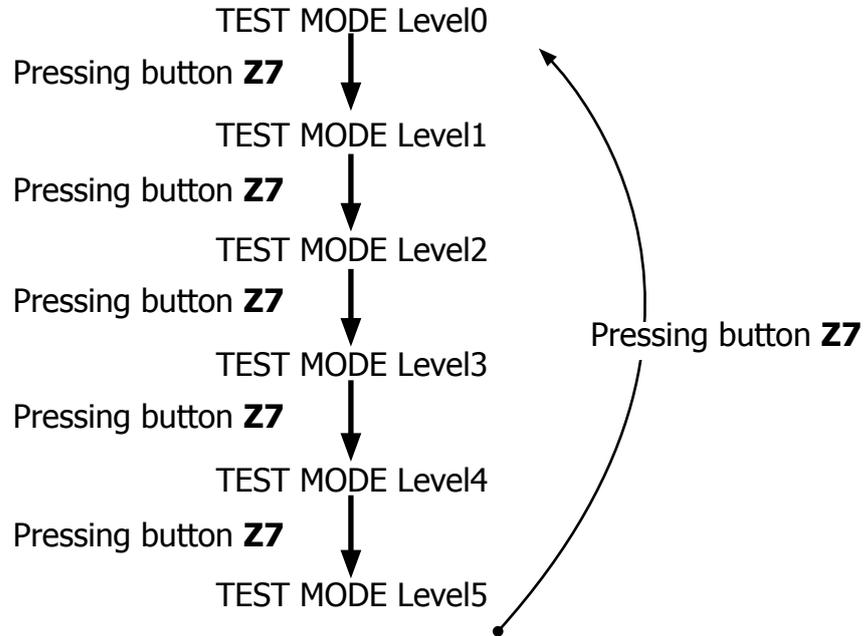

Page 0 (FIRMWARE)

Verify the firmware version




Firmware version on the display.
 The machine model is shown (Focus ⇒CMF, Class ⇒AMF, Top ⇒OTC).
 The voltage of the main supply "230V"
 The frequency of the main supply is shown (50 or 60 Hz)

ERROR: If in machine model field is written "Unknow" and backlight of display is Red, check the jumper in interface.



The firmware version is the same as the label on MicroController
ERROR: The firmware version is different from the label on MicroController; change the CPU_POWER Boards !

Press **Z7** " ⏻ " to move to the next screen

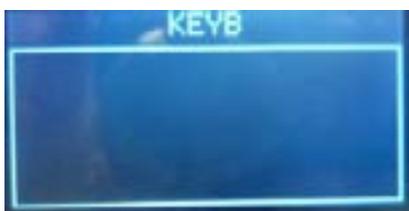

The machine passes to the Page 1 (KEYBOARD)
ERROR: The page does not change; Check the interface board and the flat cable (JP21)

Page 1 (KEYBOARD)



Start condition

Press buttons from 1 to 7

Only when a button is pressed a O appears on the relative position of button pressed.



In the middle of display appears the name of the button pressed and the backlight color changes from WHITE to RED.

When a button is pressed, also the Stand-By led (RED) turn ON.

Note: Press button Z7 as the last once, since it makes change the test page.

Note: If 2 or more buttons are pressed the name that appears on display could be wrong.

ERROR: If nothing appears on display; check the interface board and the flat cable (JP21).

ERROR: If during the movement the backlight remain WHITE check the wiring (JP1) from the interface board and the display.


ERROR: The name displayed is wrong; check the position of jumper in interface in JP5. It must be the same of machine model.

Press **Z7** "  " to move to the next screen



The machine passes to the level 2 (INPUTS)

Page 2 (INPUTS)

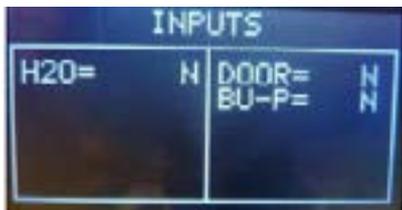


Start condition


Insert a full Water Tank.

The indication H2O changes from "N" to "Y".

NOTE: the switching from "N" to "Y" requires about 1-2 seconds.

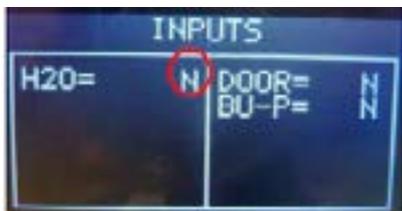

ERROR: The indication TANK-H2O doesn't change; check the capacitive sensor (fixing) and the wiring (JP23)

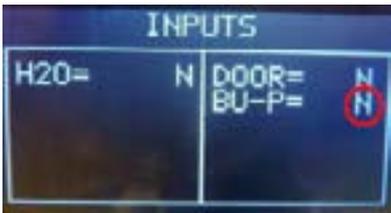

Insert the BrewUnit

The indications **BU-P** changes from "N" to "Y".

Note: removing the BrewUnit the indication from "Y" to "N" requires about 2-3 seconds to switch.

ERROR: Check the BU presence Microswitch and the wiring (JP16).




Close the Door and Dreg Drawer

The indication **DOOR** change from "N" to "Y"

ERROR: The indication **DOOR** does not change; check the Microswitch for the door and the wiring (JP14).

Note: without the Dreg Drawer correctly inserted the DOOR indication cannot change!

Press **Z7** "  " to move to the next screen

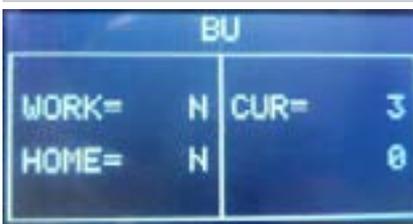

The machine passes to the Page 3 (**BU PAGE**)

Page 3 (BU)




Start condition




Press the Z1 button to move the BU to Work

IMPORTANT NOTE: If the DREGDRAWER is not inserted or the DOOR is not closed the BU test cannot be performed. If these 2 inputs are not in the right position, a warning message will be shown and the display turns to red.

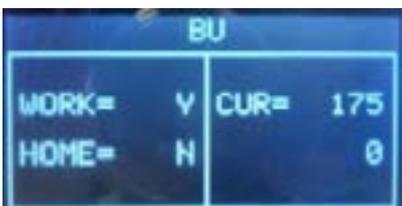

When the BU reaches the work position the indication **WORK** changes from "N" to "Y", the number of the current is less than 200mA (without BU) or 300mA (with BU).

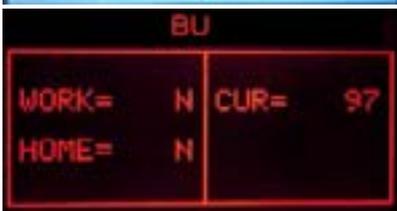

ERROR: The indication **WORK** doesn't change and remain "N", the display backlight changes from white to red; Check the work microswitch (broken?), the BU motor (blocked?) and the wiring (JP16).




ERROR: (Without BU) The absorbed current is more than 200mA, the display backlight changes from white to red; check the BU and the motor.




ERROR: (With BU) The absorbed current is more than 300mA, the display backlight changes from white to red; check the BU and the motor




Press the Z3 button to move the BU to Home
When the BU reaches the home position the indication **HOME** changes from "N" to "Y", the number of the current is minus than 200mA (without BU) or 300mA (with BU).

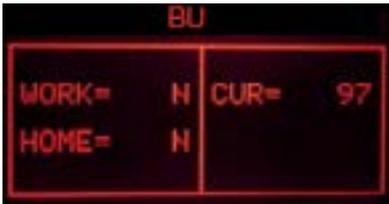

ERROR: The indication **HOME** doesn't change and remain "N", the display backlight changes from white to red; Check the work microswitch (is broken), the BU motor (is blocked) and the wiring (JP16)

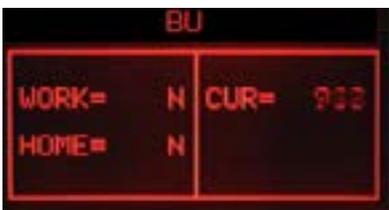

ERROR: (Without BU) The absorbed current is higher than 200mA, the display backlight changes from white to red; check the BU and the motor.

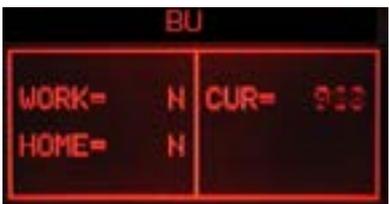

ERROR: (With BU) The absorbed current is higher than 300mA, the display backlight changes from white to red; check the BU and the motor.

Press **Z7** " ⏻ " to move to the next screen



The machine passes to the Page 4 (**EV - PUMP**)

Page 4 (EV - PUMP)



Start condition



Press the Z1 button to open the Electro Valve
IMPORTANT NOTE: If the DREGDRAWER is not inserted or the DOOR is not closed the EV test cannot be performed. If these 2 inputs are not in the right position, a warning message will be shown and the display turns to red.




It is possible to hear the "click" from Electro Valve. The indication beside the **EV1** changes from "OFF" to "ON".



Press and Release the Z4 button to switch on the pump (100 impulses)

The water goes out from the pipe and the indication **IMP** shows increasing numbers. The indication L/H must be within the range 10-18.

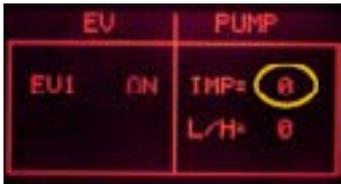

ERROR: The display backlight changes from white to red and the impulse remains 0; If water comes out the pipe: check the wiring from the flowmeter to the CPU/POWER board (JP5). If no water comes out the pipe: check the pump and the wiring from the pump to the CPU/POWER board (JP24).



ERROR: The L/H is zero or very low; the Electro Valve does not open. Check the wiring from the Electro Valve to the CPU/POWER board (JP3) and the Electro Valve.

Press **Z7** "  " to move to the next screen



The machine passes to the level 5 (Heater-Grinder)



Press the Z4 button to switch on the grinder.

The grinder rotates and in the indication **GRINDER** the number increasing up to 5000 (5seconds test). The other numbers inside the **GRINDER** box are not important for this test.



ERROR: The number remains 0 or the grinder does not run, the display backlight changes from white to red; check the Grinder and the wiring from the Grinder to the CPU/POWER board (JP8)



Check the temperature

The number shows the heater temperature.



ERROR: In the indication **HEATER** appears "SHORT", the **NTC** temperature-sensor is shorted, the display backlight changes from white to red; check the wiring from the NTC temperature-sensor to the CPU/POWER board (JP13).



ERROR: In the indication **HEATER** appears “**OPEN**”, the **NTC** temperature-sensor is detached or broken, the display backlight changes from white to red; check the wiring from the NTC temperature-sensor to the CPU/POWER board (JP13).



Press the Z1 button to switch on the Heater

The absorbed current (Amperometer on the main supply) is OK, the indication **HEATER** changes from “OFF” to “ON” and the temperature starts increasing.



If temperature is over 100°C, the backlight change from WHITE to RED. This is a ALERT message to avoid heating the HEATER element over dangerous temperature.

ERROR: the absorbed current is KO or the temperature does not increase; check the wiring from the heater to the CPU/POWER board (JP19) and the wiring of the NTC temperature-sensor (JP13).

5.1.2. Grinder Tuning



Start condition

Press the **Z5** button for 3sec to reset a parameter of the Grinder



The aging parameter of the grinder is setted to his initial value —→ a screen with the text “RESET GRINDER PARAMETERS” is showed for 3sec.



ERROR: The display doesn't change

5.2. SteamOut


Not mandatory, but if necessary, before executing the steam out procedure, descale the machine taking care to remove the Aquaclean filter from the appliance.

In case the filter on the machine is active (or it's in the machine) provide the consumer with a new one.

This document describes the Steam-Out procedure; the application is used in order to empty the heater.

To enter in SteamOut

The machine enters in Steam-Out mode by holding pressed together: the “**ESPRESSO LUNGO**” button and the **MENU** button; while switching on the machine by main switch behind the machine.

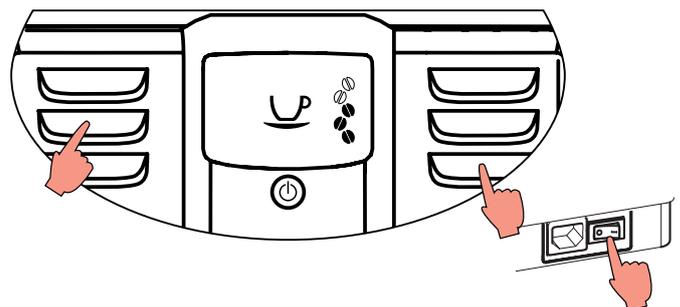



Once entered the Steam Out mode the display shows the **"STEAM OUT"** indication. Buttons can be released.



IMPORTANT NOTE: to execute the Steam-out procedure the Ntc sensor must work correctly; if some errors occurs on Ntc during the steam-out, the procedure can't continue and an error message is shown on the display.



IMPORTANT NOTE: to execute the Steam-Out procedure the DREGDRAWER must be in place and the DOOR must be closed. If these 2 conditions are not respected a warning message is shown on the display and the Steam-Out is interrupted.



The machine starts the Steam Out and in the display appears the indication "ON".

While the Steam Out runs the Electro valve is opened and water comes out the Water/Steam pipe.



When the Steam Out is complete the message "COMPLETE" is shown on the Display. The Electro valves automatically closes and the machine can be switched off.

When the Steam-Out is complete the following parameters are reset to their default values

Parameters	Default value	Description
Espresso_pulses_qty	145	Length "Espresso" product
EspressoLungo_pulses_qty	345	Length "Espresso Lungo" product
Classic_Coffee_pulses_qty	500	Length "Classic coffee" product (not used in Incanto machine)
Cappuccino_pulses_qty	170	Length "Cappuccino" product – Number of flow meter impulses during coffee cycle
Cappuccino_milk_brew_time	340	Length "Cappuccino" product – Time of milk brewing (x100ms)
Lattemacchiato_pulses_qty	120	Length "Latte Macchiato" product – Number of flow meter impulses during coffee cycle
Lattemacchiato_milk_brew_time	400	Length "Latte Macchiato" product – Time of milk brewing (x100ms)
FrothMilk_milk_brew_time	340	Length "Froth Milk" product – Time of milk brewing (x100ms)
Coffee_Grinder	0	Number of grounds in dregs drawer
Alarm_Refill	TRUE	Request priming circuit next power-on of the machine
Bu_Loaded	FALSE	Set Brew-unit clean and not fill with coffee
Aroma_Espresso	3 Beans	Aroma for high pressure products
Aroma_Drip	4 Beans	Aroma for low pressure products (not used in Incanto machine)
TimeSleep	15 minutes	Timer for enter in stand-by from normal mode
Filter_Present	FALSE	Presence of Brita filter in machine (not used in Incanto machine)
FilterPulses	0	Impulses brew through Brita filter (not used in Incanto Machine)

LastErrorLogged	0	Last error saved in machine
Gr_bu_uc_arr[jj]	150	Array of last 4 brew unit effort during rinsing cycle (in milliamperes). Autozero for new autodose system
Gr_time_aroma[Light]	3000	Grinding time for aroma 1 (ms)
Gr_time_aroma[Medium]	3500	Grinding time for aroma 2 e aroma 3 (ms)
Gr_time_aroma[Strong]	4000	Grinding time for aroma 4 e aroma 5 (ms)
Coffe_Duct_empty	TRUE	Set grinder conduct clean – used to increase grinding time for first grinding product next power-on.
DebugGrinder	FALSE	If true machine enter in debug mode next power-on.
Filter_autonomy	0	Autonomy of last Aqua clean filter activated
Filter_counter	0	Number of Aqua clean filter activated in aquaclean chain
Filter_startup_qty	5000	Counter of water for enable first Aqua Clean filter; if expire, the machine need a descaling action to activate a new filter.
InstallFilterRemind	TRUE	Request Aqua clean filter activation next poweron

5.3. Error codes

ERROR CODES	DESCRIPTION
01	The coffee grinder is blocked
02	The grinder is disconnected
03	The brewing unit is blocked in work position
04	The brewing unit is blocked in home position
05	The hydraulic circuit is clogged
10	The temperature sensor is in short circuit
11	The temperature sensor is opened
14	The temperature was up to 170°
15	The machine doesn't heat up
19	The net is not stable
22	The keyboard is not recognized

5.4. Saeco Service Center - Quick Start Guide

Saeco Service Center (SSC) is a tool with which you can re-program the machine and check the diagnostic of the same.

You can download the software from the following link: <http://logsave.logtronics.com/SSC2/publish.htm>

In support of this tool it is essential to order the Saeco Programming Device:

Cod. 20000490 "KIT PROGRAMMER SERKIT SSC2".

This kit includes the programmer and cables helpful.

All details related to the registration and operation are explained in the enclosed Quick start guide (QSG).

Saeco Service Center – Quick Start Guide

Press the icon to view the document 

To open the attached document is necessary to save the service manual on your PC.

CHAPTER 6

SERVICE AND MAINTENANCE

6.1. Repair flow

Proces stap	Saeco no.	Action
Intake	1	Visual inspection (transport damage) take care for pictures
	2	Check Type/serialnumber
		Log all available accessory
Diagnosis	3	Check product for consumer complaint (NFF contact consumer)
	4	Opening machine
		Run Diagnostic to get error codes and relevant set statistics (Saeco Service Center SSC)
	5	Visual inspection check for loosen parts, leaking etc..
	6	Operational tests
Repair	7	Repairing the faults encountered
		Checking any modifications (view Symptom Cure, new software, etc.)
	8	Refer Annex tabs per family
	9	<i>Service activities in accordance with the operating schedule</i>
		<i>Check/Replace Waterfilter (the small filter, not the Britta filter)</i>
		<i>Check/Replace Water tank lip seal</i>
		<i>Check/Replace Boiler pin O-ring</i>
		<i>Clean/align Coffee grinder (Vacuum cleaner / brush)</i>
		<i>Descale the water Circuit</i>
		<i>Check/Replace Hot water/steam valve</i>
	10	<i>Internal check / cleaning</i>
		<i>Check/Clean/Grease Brewing unit</i>
	11	Operational test while the appliance is open
		Check Hoses, attachments and Oetiker clamps
		Check Pump for operation & noise
	Check Gear motor for operation & noise	
	Check for leakage	
12	Assembly	
13	Final inspection test	
	Steam out before shipping out, if temperature is below 0° to prevent any damaged due to frozen water.	
14	No need for those families Minuto family (all platform); Incanto family new; Pico Baristo; Gran Baristo; Intelia V2; Philips 2000-2100; Incanto Executive; Moltio family (all platform). Please also check for GDA_113455	
15	Provide precise IRIS code, according dedicated code table for Coffee products. The location code from the part you have worked on MUST be completed always with the part reference from exploded view !	
Inspection visual		Do cabinet parts fit well together
		Check for damages
	Power check	Will the set switch on
	Accesiores	Do the accessories match with the intake
Consumer complaint		Check the product for the consumer complaint
Coffee		Basic Functional test
Dispense		Make 2 * coffee. Are both amounts equal
		Make e 2 cups at the same time. Are the volumes equal
Noise		Is the sound normal
Crema		Blow on the coffee. Does the crema come back together
		Is the crema colour correct (Hazelnut)
Temperature		Is the coffee temperature within spec
Grinder		Is the grinder noise normal
Steam		
Steam		Does the steam work
Hot Water		Does the hot water work
Milk		(if applicable)
Cappuchino		Does the cappuccinatore produce good froth

Leakage		
Leakage	14	Did the product leak during the testing
	15	Draining the circuit (in winter)
Cleaning	16	Clean water reservoir, bean reservoir, brew chamber and conveyor
		Clean and dry brew unit, coffee bin and drip tray.
		Lubricating the brewing unit with suitable grease
		External cleaning
Safety check		
		Earth leakage, Isolation test, resistor of earth wire grounding, as requested in certain country's (VDE, ISO)
visueel		Check the mains cord for damages
Packing		
	18	Packing
		Check completeness (accessories) according income log
	19	Neatly pack the product
Documentation		
		NFF letter
		Descaling instruction with changed procedure (S/C)
		Other instructions according S/C
Repair report		Is there an answer to ALL consumer questions/complaints (see complaint) add set statistic and give, if needed clear instruction towards consumer Is it indicated which documents are added Are there tips how to prevent issues

CHAPTER 7

DISASSEMBLY

7.1. Outer Shell

Incanto AMF

Incanto OTC



Remove the water tank, coffee container cover, drip tray, dreg drawer, brewing unit.


Incanto OTC EXT



Unscrew the screws shown and remove the water tank increased and the bean container increased.

Upper cover

Remove the cover as in the photo. In case of any issues please you can try with the alternative way below described.

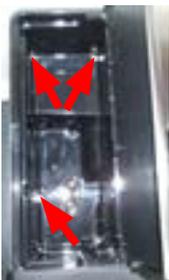

Cover a screwdriver with adhesive paper to prevent scratching the chromed shell.



Unscrew the screws shown

Remove the cover as in the photo.



Remove the cap, unscrew the screw shown and remove the steam tube.




Unscrew the screw shown and remove the cover.




Unscrew the screw shown




Press the sides and remove the cover and dispenser. Insert as before to reassemble the dispenser in the rail and then the coverage.

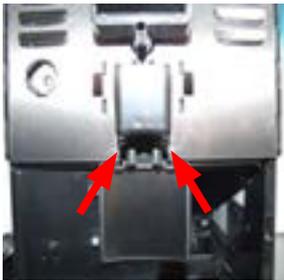

Unscrew the screws shown

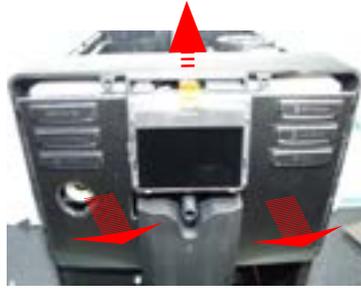

Remove the insert the upper cover

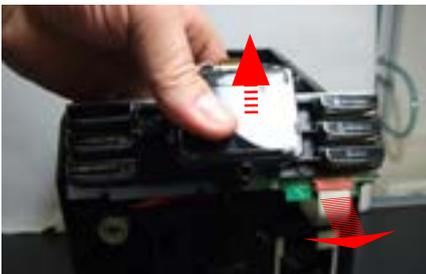

Remove the support KYB assy. and disconnect the flat cable.



Remove the upper cover and remove the electrical and water circuit connections.



remove the block support KYB assy.

7.2. Dispenser



Unscrew the screws shown and remove the dispenser



unlock where highlighted and remove the cover in the dispenser




7.3. Coffee grinder



Raise the coffee grinder and remove the connections.

When reassembling the coffee grinder, make sure the spring is repositioned correctly (see photo).

7.4. Grinder blades

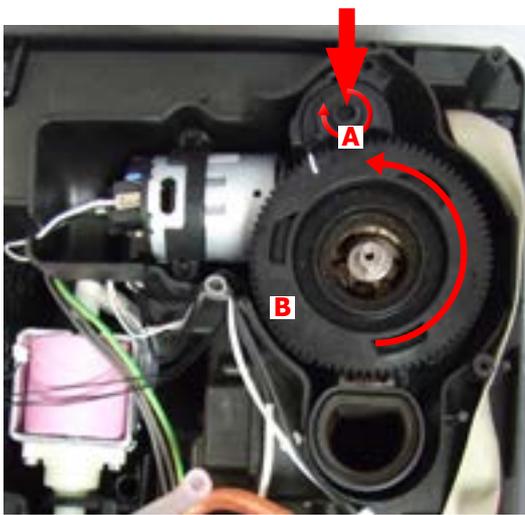


To extract the top support of the appliance, press on the grinding adjustment spindle (A) and turn the support anticlockwise until it unhooks.



Turn the grinder blades anticlockwise out of the support.




Turn the grinder blades clockwise out of the support. The bayonet connections can be accessed from the rear.

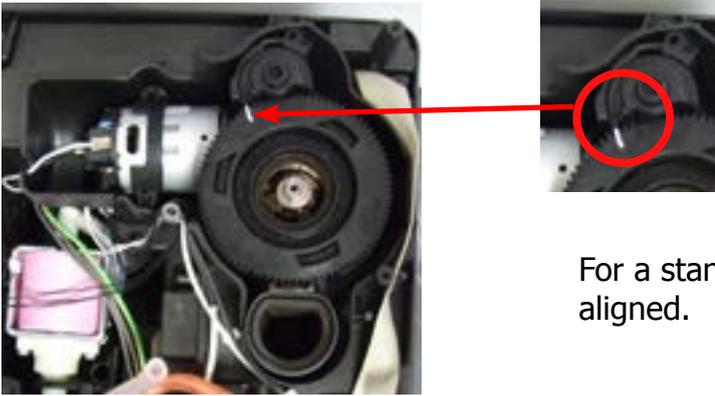


For a standard adjustment, both markings must be aligned.

7.5. Coffee grinder adjustment

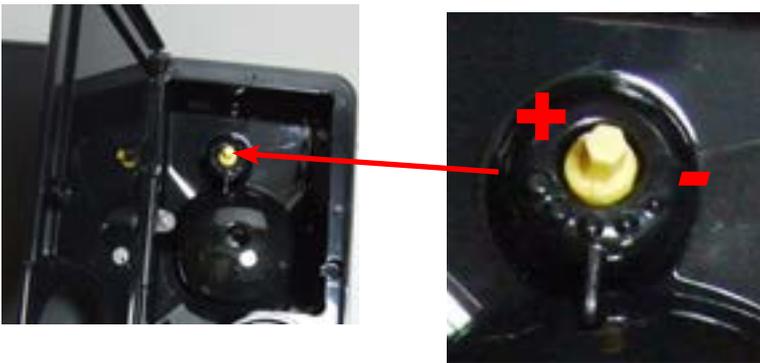

The grinding adjustment can be set by the user (only with the coffee grinder in operation) by pressing and turning (only by one click at a time) the insert inside the coffee bean hopper with the aid of the wrench supplied.

Adjustment by a service center

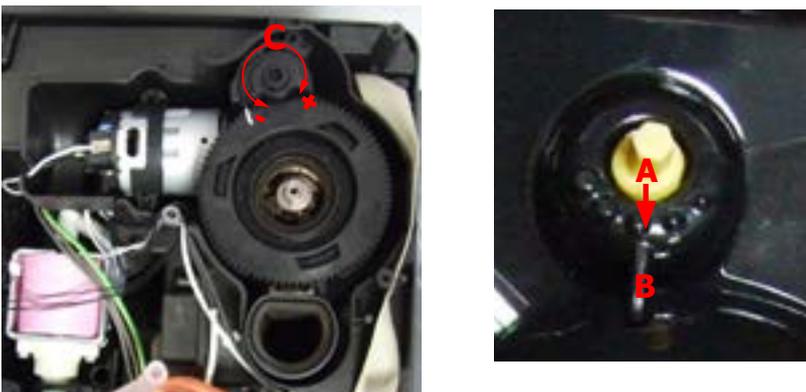


To adjust grinding further, the engineer can work directly on the coffee grinder by pressing and turning the ring nut (C) shown. (clockwise + to increase the particle size of the coffee and anticlockwise - to decrease it).


If there are any remains of coffee powder between the two grinding blades it is recommended to tighten by max. two marks at a time.

Lastly, move the arrow (A) on the adjustment knob to the center of the adjustment dots on the cover (B).

7.6. Carafe connection and hot/steam water dispenser

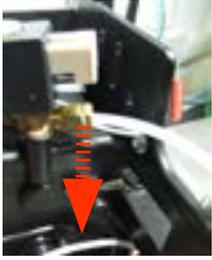

Slide out the fork as illustrated

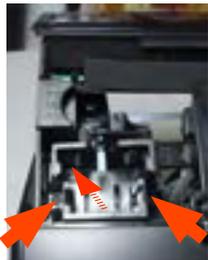

Loosen the screws holding the carafe connection



When reassembling the assembly to be careful to correctly position the spring.


hot water dispenser





Removes the covers shown



unscrew the screws shown

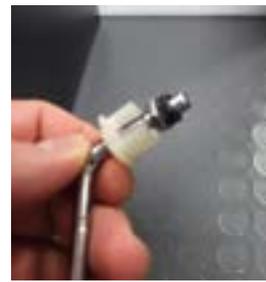

7.7. Central plate

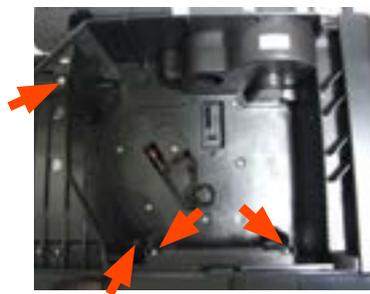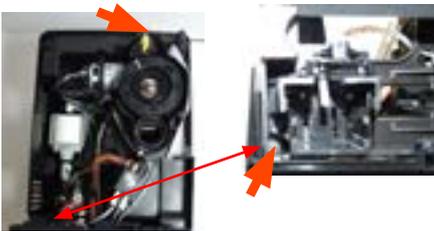



unscrew the screws shown



Lift up the center plate




7.8. Pin boiler

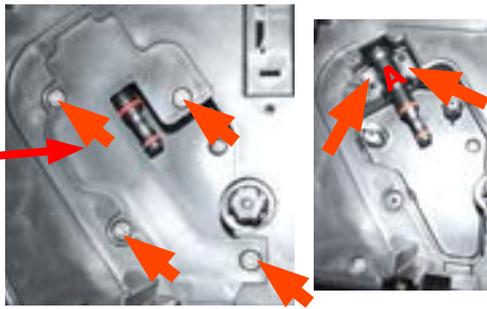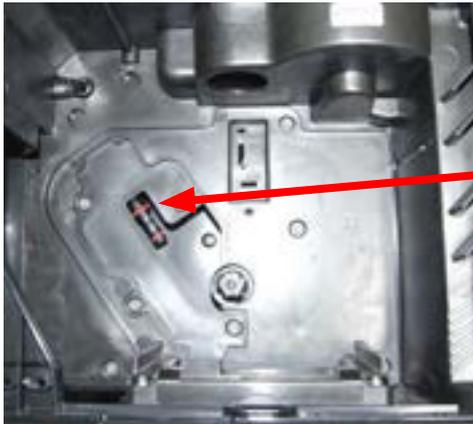


Loosen the screws as illustrated and remove the boiler pin (A).

7.9. Gear motor

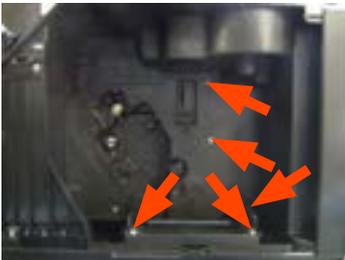


Loosen the screws as illustrated and remove the gear motor cover.

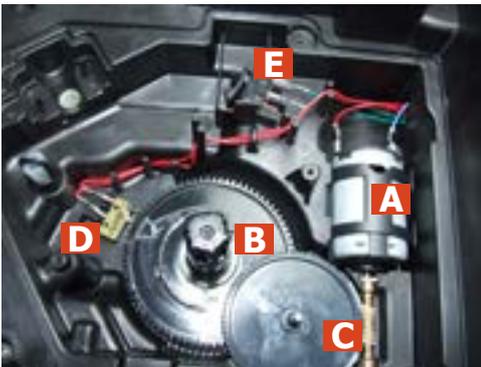

The following are located inside the compartment protected by the casing:

- Electric motor (A) with gears (B) and (C) for transmission and timing of the dispenser.
- Brewing unit present microswitch (E).
- Microswitch (D) detecting brewing unit home and work positions.
- Remove the gear (C) that meshes with the motor transmission shaft.
- Remove the large gear (B).
- Remove the motor (A), complete with transmission shaft.

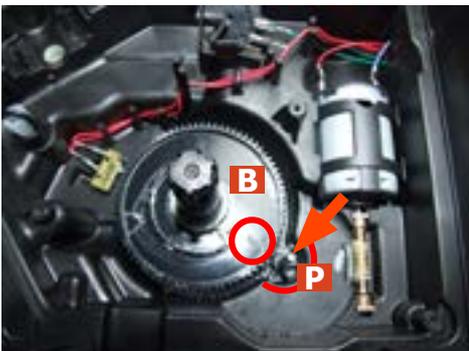


Replace the gear (B), making sure that the imprint of the arrow is aligned with the opening containing the pin (P).




When replacing the motor and the transmission shaft, make sure the guide runners (L) are in the right position.
Grease the shaft thoroughly and evenly.

7.10. Pump


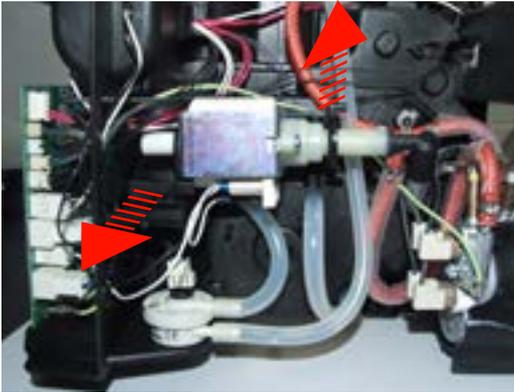


Unhook the pump from the supports.

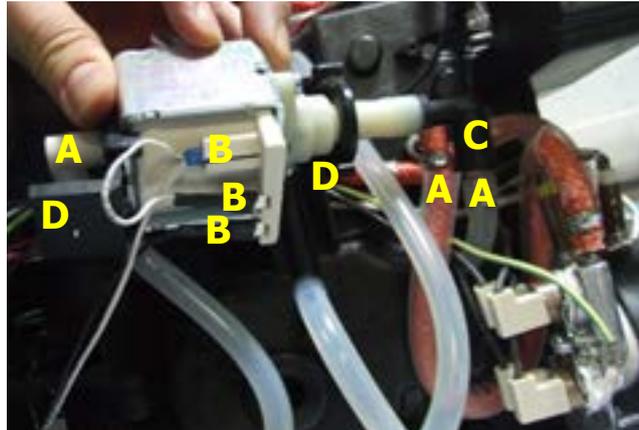


Disconnect the water circuit connections (A) and electrical connections (B), loosen the safety valve (C) and slide the pump off the brackets (D).

7.11. Flow-meter

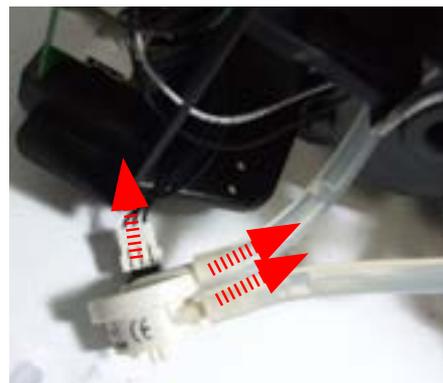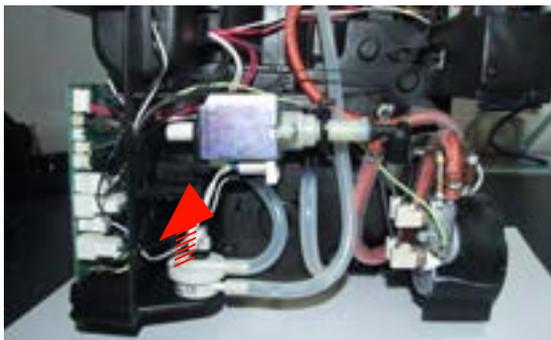

Lift the flow meter out of the casing assembly and remove the electrical and water circuit connections.

7.12. Boiler

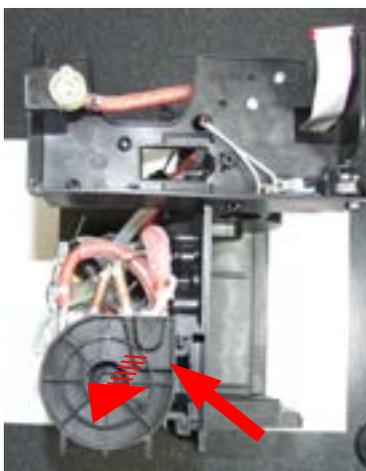


Unscrew the screw shown at unthread the support boiler




Unscrew the screw shown and remove the electrical and water circuit connections.

7.13. CPU board

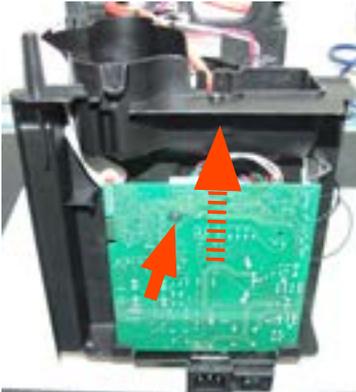

Loosen the screws slide the card off the support and disconnect the electrical connections.

7.14. Programming access for SSC (Saeco Service Center)

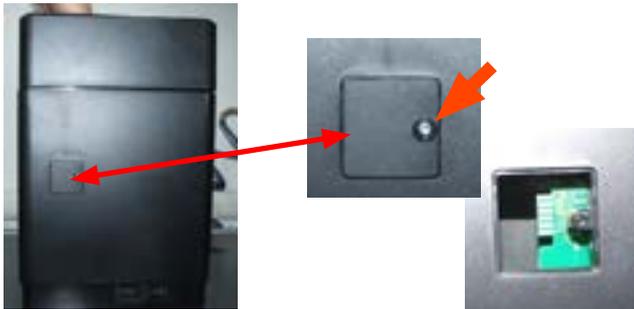

Loosen the screw for remove the cover.

7.15. KYB interface and display




Remove the cap, unscrew the screw shown and remove the steam tube.



Remove the cover.

Unscrew the screw shown

Press the sides and remove the cover and dispenser. Insert as before to reassemble the dispenser in the rail and then the coverage.

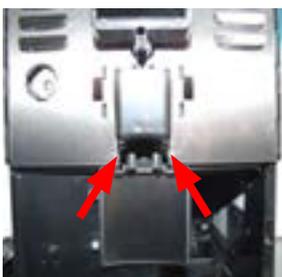


Unscrew the screws shown



Remove the insert the upper cover




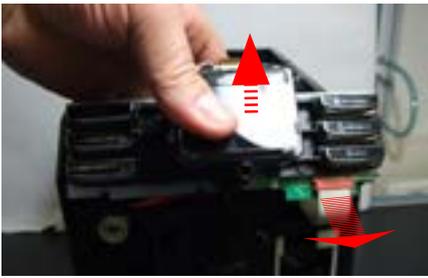

Remove the support KYB assy. and disconnect the flat cable.




Loosen the screws for remove the cover.

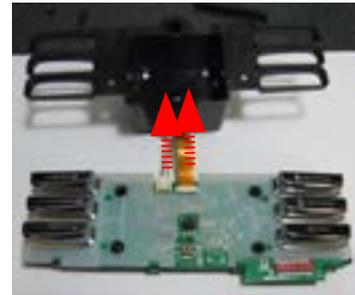

Disconnect the electrical connections.



7.16. Fitting and removing Oetiker clamps

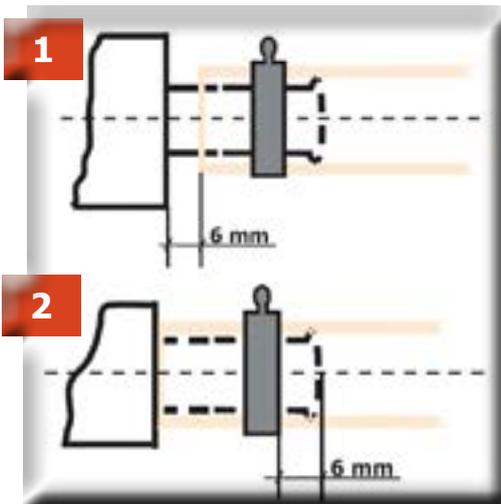

1) Boiler connection.

2) Other connections.



Use a suitable pair of pliers to remove the clamp (as illustrated).



Tighten the clamp as illustrated.


CHAPTER 8

NOTES

CHAPTER 9

WATER CIRCUIT DIAGRAM

Incanto

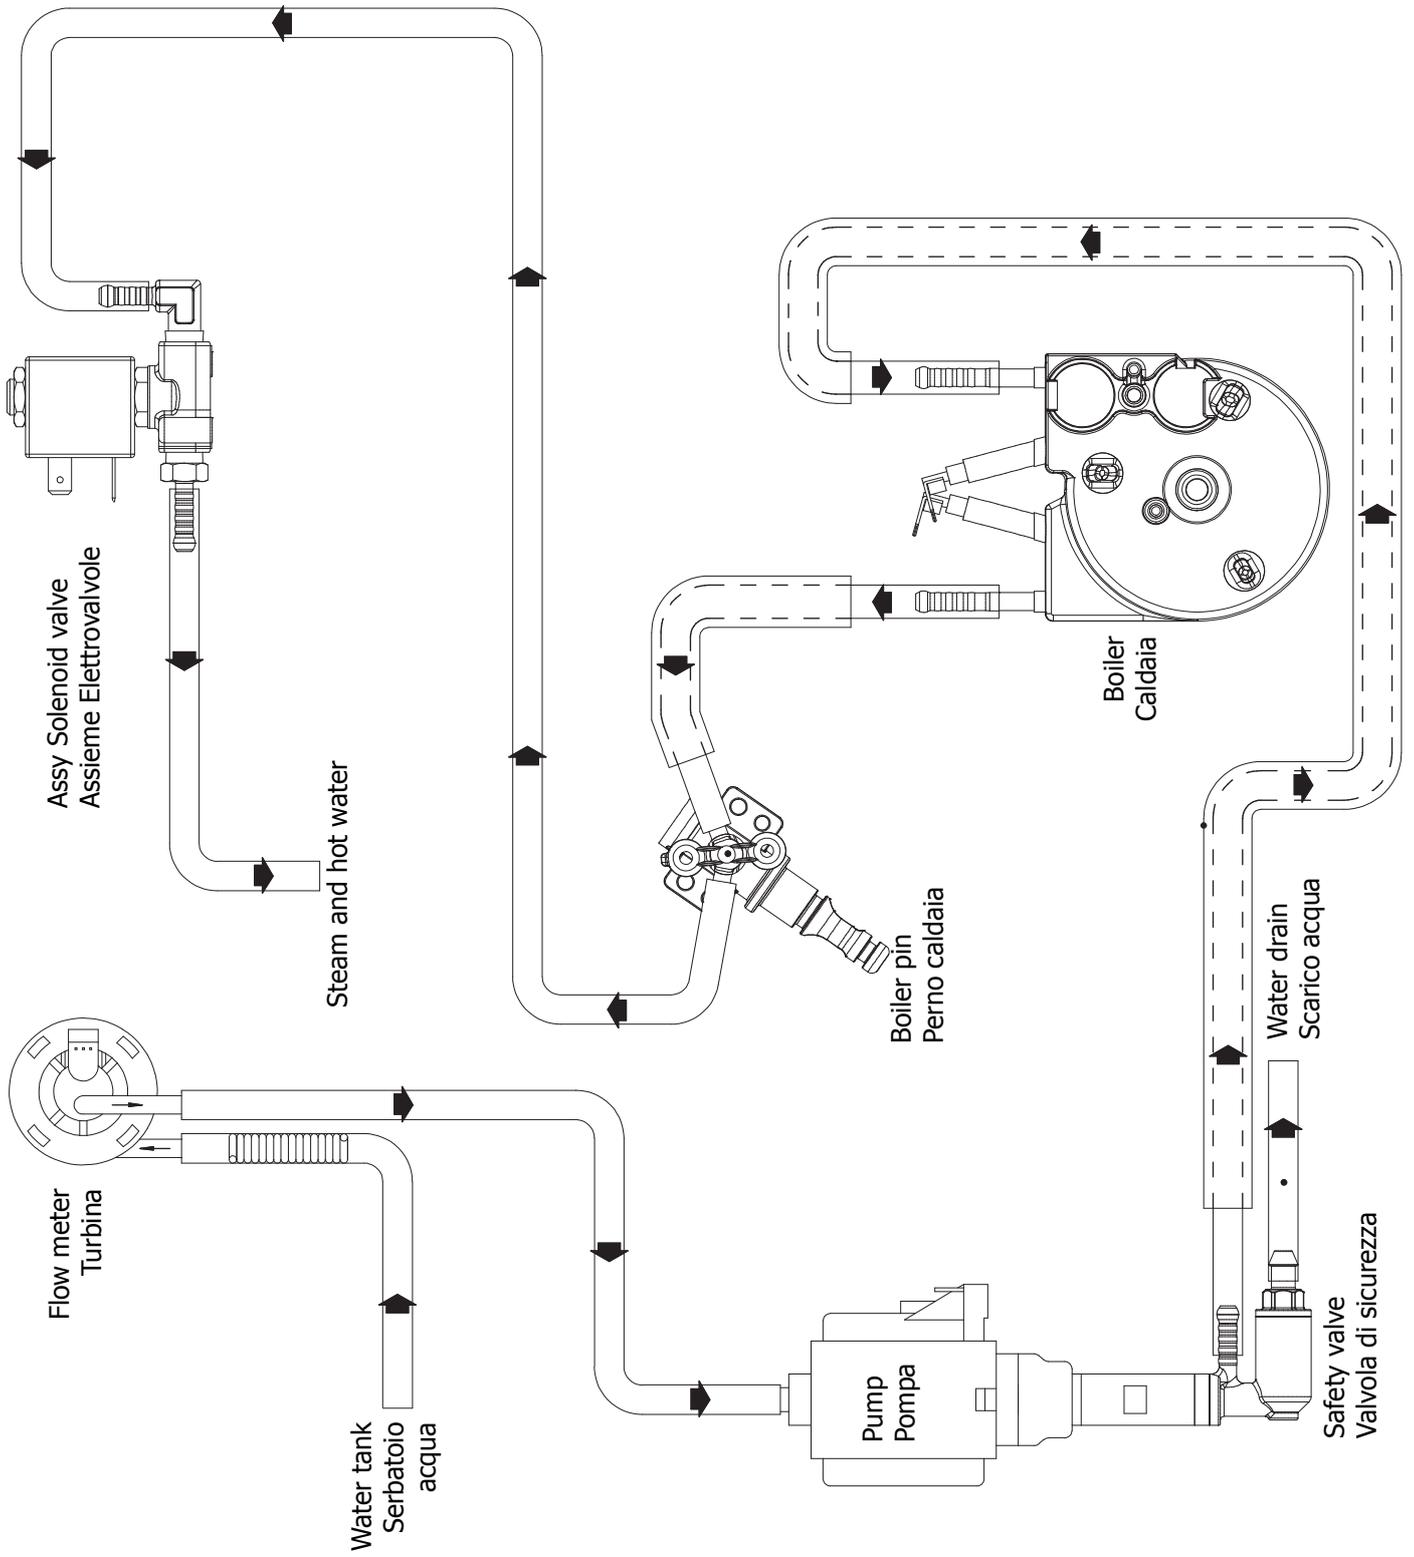

CHAPTER 10

ELECTRICAL DIAGRAM

Incanto

